October 2009

**Dear Customer** 

# **Important Notices**

Thank you for your continued patronage of Toshiba microcontrollers.

This page gives you important information on using Toshiba microcontrollers. Please be sure to check each item for proper use of our products.

Restrictions on the Voltage Detection Circuit

(October 2009)

\*If your datasheet is dated 30 November 2008 or earlier, please download the latest datasheet or request it from your local Toshiba office.



TOSHIBA Microcontrollers TLCS-870 Family TLCS-870/C1 Series				
TMP89FH40 TMP89FH42L TMP89FM43L TMP89FM46 TMP89FM82 TMP89C900 (E)	TMP89FM40 TMP89FM42 TMP89CH46 TMP89FM46A TMP89FM82T	TMP89CH42 TMP89FM42A TMP89CM46 TMP89FM46K	TMP89CM42 TMP89FM42K TMP89FH46 TMP89FM46L	TMP89FH42 TMP89FM42L TMP89FH46L TMP89FS60

October 2009

## **Restrictions on the Voltage Detection Circuit**

This is to inform you of restrictions on the voltage detection circuit in the TLCS-870/C1 Series of microcontrollers.


If you need any further information, please contact your local Toshiba sales representative.

### [Restrictions]

# 1. INTVLTD Interrupt Request

When interrupt generation is enabled in the voltage detection circuit, an INTVLTD interrupt request may be generated not only when the supply voltage falls to the detection voltage level, but also when it rises to the detection voltage level.

In ICE mode of the In-Circuit Emulator (TMP89C900), no interrupt request is generated when the supply voltage rises to the detection voltage level. Therefore, with products supporting the In-Circuit Emulator (TMP89C900), the interrupt generation operation may differ between the development tool and the actual product.

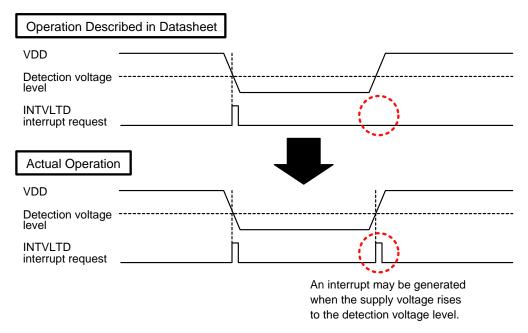

#### 2. Releasing STOP Mode by Voltage Detection

The SRSS bit in the voltage detection control register 2 (VDCR2) provided for releasing STOP mode by voltage detection cannot be used because it does not function as expected.

### [Workarounds]

#### 1. INTVLTD Interrupt Request

Do not use the INTVLTD interrupt for voltage detection. The voltage level should be regularly checked using other timing such as the execution cycle of the main program. VDCR1<VDxSF> (x=1, 2) can be used to check the voltage level. However, if the operating voltage is near the detection voltage, the VDCR1<VDxSF> value may become unstable. It is recommended that VDCR1<VDxSF> be tested multiple times to determine the voltage level.

### 2. Releasing STOP Mode by Voltage Detection

Always set VDCR2<SRSS> to "00". Use the STOP pin to release STOP mode.

1/1