
TOSHIBA

8-Bit Microcontroller TLCS-870/C1 Series

TMP89FS62VUG

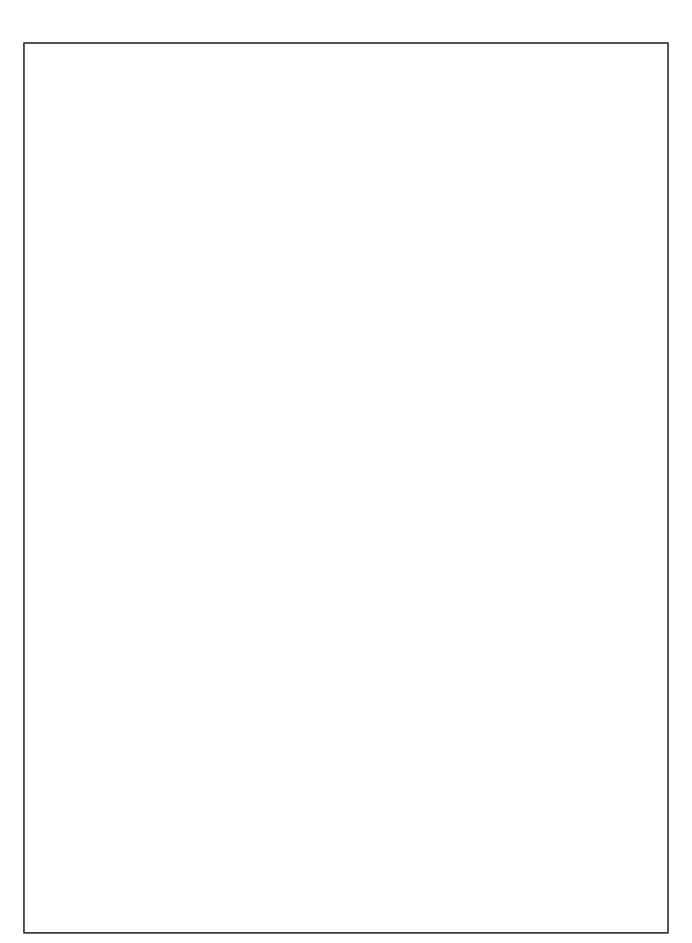

Revision History

Date	Revision	Comment
2019/01/18	1	First Release
2019/08/01	2	Contents Revised 1. Section 19.2 Note 2 in Table 19-1 is corrected. 2. Section 24.3 The name of large current port is corrected. 3. Section 24.5 The characteristics of the power-on reset is corrected.

Table of Contents

9
15
20
22
39 39 39 41 43

3.	Interrupt Control Circuit	
	3.1 Configuration	
	3.2 Interrupt Latches (IL27 to IL3)	
	3.3 Interrupt Enable Register (EIR)	
	3.3.1 Interrupt master enable flag (IMF)	51
	3.4 Maskable Interrupt Priority Change Function.	
	3.5 Interrupt Sequence	
	3.5.1 Initial Setting	
	3.5.2 Interrupt acceptance processing	56
	3.5.3 Saving/restoring general-purpose registers	58
	3.5.3.1 Using PUSH and POP instructions 3.5.3.2 Using data transfer instructions	
	3.5.3.3 Using a register bank to save/restore general-purpose registers	
	3.5.4 Interrupt return.	
	3.6 Software Interrupt (INTSW)	
	3.6.2 Debugging	
	3.7 Undefined Instruction Interrupt (INTUNDEF)	
	Caucinica instruction metrupe (i. 12 cr. 1221)	
1.	External Interrupt control circuit	
	41.00	(2)
	4.1 Configuration	
	4.2 Control	
	4.3 Function.	
	4.3.1 Low power consumption function	
	4.3.2.1 Interrupt request signal generating condition detection function	
	4.3.2.2 A noise canceller pass signal monitoring function when interrupt request signals are generated4.3.2.3 Noise cancel time selection function	
	4.3.2.5 Noise cancer time selection function 4.3.3 External interrupt 4	69
	4.3.3.1 Interrupt request signal generating condition detection function	
	4.3.3.2 A noise canceller pass signal monitoring function when interrupt request signals are generated4.3.3.3 Noise cancel time selection function	
	4.3.4 External interrupt 5	71
5.	Watchdog Timer (WDT)	
	5.1 Configuration	73
	5.2 Control.	
	5.3 Functions.	
	5.3.1 Setting of enabling/disabling the watchdog timer operation	
	5.3.2 Setting the clear time of the 8-bit up counter	76
	5.3.3 Setting the overflow time of the 8-bit up counter	
	5.3.4 Setting an overflow detection signal of the 8-bit up counter	
	5.3.6 Reading the 8-bit up counter	
	5.3.7 Reading the watchdog timer status	
<u> </u>	Dowen on Dogot Cinovit	
5.	Power-on Reset Circuit	
	6.1 Configuration	81

	6.2 Function.	81
<u>7.</u>	Voltage Detection Circuit	
	7.1 Configuration	83
	7.2 Control.	
	7.3 Function.	
	7.3.1 Enabling/disabling the voltage detection operation	
	7.3.2 Selecting the voltage detection operation mode	85
	7.3.3 Selecting the detection voltage level	
	7.3.4 Voltage detection flag and voltage detection status flag	
	7.4.1 Setting procedure when the operation mode is set to generate INTVLTD interrupt request signals 7.4.2 Setting procedure when the operation mode is set to generate voltage detection reset signals	88
8.	I/O Ports	
	8.1 I/O Port Control Registers	93
	8.2 List of I/O Port Settings.	
	8.3 I/O Port Registers	
	8.3.1 Port P0 (P03 to P00)	
	8.3.2 Port P1 (P11 to P10)	
	8.3.3 Port P2 (P23 to P20)	
	8.3.5 Port P7 (P77 to P70)	
	8.3.6 Port P8 (P81 to P80)	
	8.3.7 Port P9 (P94 to P90)	
	8.4 Serial Interface Selecting Function.	
9.	Special Function Registers	
	9.1 SFR1 (0x0000 to 0x003F)	127
	9.2 SFR2 (0x0F00 to 0x0FFF)	
	9.3 SFR3 (0x0E40 to 0x0EFF)	130
<u>10.</u>	Low Power Consumption Function for Peripherals	
	10.1 Control.	134
11.	Divider Output (DVO)	
	11.1 Configuration	137
	11.2 Control.	
	11.3 Function	
		137
<u>12.</u>	Time Base Timer (TBT)	

12.1 Time Base Timer	
12.1.1 Configuration	
12.1.3 Functions	142
3. 16-bit Timer Counter (TCA)	
13.1 Configuration	
13.2 Control	
13.3 Low Power Consumption Function	
13.4 Timer Function	
13.4.1 Timer mode	153
13.4.1.1 Setting 13.4.1.2 Operation	
13.4.1.3 Auto capture	
13.4.1.4 Register buffer configuration 13.4.2 External trigger timer mode	157
13.4.2.1 Setting	137
13.4.2.2 Operation	
13.4.2.3 Auto capture 13.4.2.4 Register buffer configuration	
13.4.3 Event counter mode	159
13.4.3.1 Setting	
13.4.3.2 Operation 13.4.3.3 Auto capture	
13.4.3.4 Register buffer configuration	
13.4.4 Window mode	161
13.4.4.1 Setting 13.4.4.2 Operation	
13.4.4.3 Auto capture	
13.4.4.4 Register buffer configuration	162
13.4.5 Pulse width measurement mode	163
13.4.5.2 Operation	
13.4.5.3 Capture process	100
13.4.6 Programmable pulse generate (PPG) mode	100
13.4.6.2 Operation	
13.4.6.3 Register buffer configuration	1.60
13.5 Noise Canceller	
13.5.1 Setting	169
4. 8-bit Timer Counter (TC0)	
14.1 Configuration	172
14.2 Control	173
14.2.1 Timer counter 00	173
14.2.2 Timer counter 01	
14.2.3 Common to timer counters 00 and 01	
14.2.4 Operation modes and usable source clocks	
14.3 Low Power Consumption Function	
14.4 Functions.	
14.4.1 8-bit timer mode	181
14.4.1.2 Operation	
14.4.1.3 Double buffer	
14.4.2 8-bit event counter mode	184
14.4.2.1 Setting 14.4.2.2 Operation	
14.4.2.3 Double buffer	
14.4.3 8-bit pulse width modulation (PWM) output mode	186
14.4.3.1 Setting 14.4.3.2 Operations	

	14.4.3.3 Double buffer	
	14.4.4 8-bit programmable pulse generate (PPG) output mode	191
	14.4.4.1 Setting 14.4.4.2 Operation	
	14.4.4.3 Double buffer	
	14.4.5 16-bit timer mode	195
	14.4.5.1 Setting 14.4.5.2 Operations	
	14.4.5.3 Double buffer	
	14.4.6 16-bit event counter mode	199
	14.4.6.1 Setting 14.4.6.2 Operations	
	14.4.6.3 Double buffer	
	14.4.7 12-bit pulse width modulation (PWM) output mode	201
	14.4.7.2 Operations	
	14.4.7.3 Double buffer	
	14.4.8 16-bit programmable pulse generate (PPG) output mode	207
	14.4.8.2 Operations	
	14.4.8.3 Double buffer	
15. R	Real Time Clock (RTC)	
15	5.1 Configuration	211
15	5.2 Control	211
15	5.3 Function.	212
	15.3.1 Low Power Consumption Function	
	15.3.2 Enabling/disabling the real time clock operation	
	15.3.3 Selecting the interrupt generation interval.	
_	5.4 Real Time Clock Operation	
	15.4.1 Enabling the real time clock operation	
16. A	Asynchronous Serial Interface (UART)	
16	5.1 Configuration	216
16	5.2 Control	217
16	5.3 Low Power Consumption Function	221
16	5.4 Protection to Prevent UART0CR1 and UART0CR2 Registers from Being	
16	e e	0
	16.5.1 Transition of register status	
	16.5.2 Transition of TXD pin status	223
16	5.6 Transfer Data Format	224
16	5.7 Infrared Data Format Transfer Mode	22.4
16		
		225
	5.8 Transfer Baud Rate	225
	5.8 Transfer Baud Rate 16.8.1 Transfer baud rate calculation method	225
16	5.8 Transfer Baud Rate 16.8.1 Transfer baud rate calculation method	225
16 16	16.8.1 Transfer Baud Rate 16.8.1.1 Bit width adjustment using UART0CR2 <rtsel> 16.8.1.2 Calculation of set values of UART0CR2<rtsel> and UART0DR 5.9 Data Sampling Method 5.10 Received Data Noise Rejection</rtsel></rtsel>	225 226 229 231
16 16 16	5.8 Transfer Baud Rate 16.8.1 Transfer baud rate calculation method 16.8.1.1 Bit width adjustment using UARTOCR2 <rtsel> 16.8.1.2 Calculation of set values of UARTOCR2<rtsel> and UARTODR 5.9 Data Sampling Method 5.10 Received Data Noise Rejection 5.11 Transmit/Receive Operation</rtsel></rtsel>	
16 16	5.8 Transfer Baud Rate 16.8.1 Transfer baud rate calculation method 16.8.1.1 Bit width adjustment using UARTOCR2 <rtsel> 16.8.1.2 Calculation of set values of UARTOCR2<rtsel> and UARTODR 5.9 Data Sampling Method 5.10 Received Data Noise Rejection 5.11 Transmit/Receive Operation</rtsel></rtsel>	
16 16 16	5.8 Transfer Baud Rate 16.8.1 Transfer baud rate calculation method	
16 16 16	5.8 Transfer Baud Rate 16.8.1 Transfer baud rate calculation method	
16 16 16	5.8 Transfer Baud Rate. 16.8.1 Transfer baud rate calculation method. 16.8.1.1 Bit width adjustment using UARTOCR2 <rtsel> 16.8.1.2 Calculation of set values of UARTOCR2<rtsel> and UARTODR 5.9 Data Sampling Method. 5.10 Received Data Noise Rejection. 5.11 Transmit/Receive Operation. 16.11.1 Data transmit operation. 16.11.2 Data receive operation. 5.12 Status Flag. 16.12.1 Parity error. 16.12.2 Framing Error.</rtsel></rtsel>	
16 16 16	5.8 Transfer Baud Rate. 16.8.1 Transfer baud rate calculation method. 16.8.1.1 Bit width adjustment using UARTOCR2 <rtsel> 16.8.1.2 Calculation of set values of UARTOCR2<rtsel> and UARTODR 5.9 Data Sampling Method. 5.10 Received Data Noise Rejection. 5.11 Transmit/Receive Operation. 16.11.1 Data transmit operation. 16.11.2 Data receive operation. 5.12 Status Flag. 16.12.1 Parity error.</rtsel></rtsel>	

	16.12.5 Transmit busy flag	
	16.12.6 Transmit Buffer Full	
	16.13 Receiving Process	
	16.14 AC Properties.	
	16.14.1 IIDA properties	242
17.	Synchronous Serial Interface (SIO)	
	17.1 Configuration	244
	17.2 Control.	
	17.3 Low Power Consumption Function.	
	•	
	17.4 Functions	
	17.4.1 Halister format	
	17.4.3 Transfer edge selection	
	17.5 Transfer Modes	251
	17.5.1 8-bit transmit mode	251
	17.5.1.1 Setting 17.5.1.2 Starting the transmit operation	
	17.5.1.2 Starting the datasimit operation 17.5.1.3 Transmit buffer and shift operation	
	17.5.1.4 Operation on completion of transmission 17.5.1.5 Stopping the transmit operation	
	17.5.2 8-bit Receive Mode	256
	17.5.2.1 Setting	
	17.5.2.2 Starting the receive operation 17.5.2.3 Operation on completion of reception	
	17.5.2.4 Stopping the receive operation	
	17.5.3 8-bit transmit/receive mode	260
	17.5.3.1 Setting 17.5.3.2 Starting the transmit/receive operation	
	17.5.3.3 Transmit buffer and shift operation	
	17.5.3.4 Operation on completion of transmission/reception 17.5.3.5 Stopping the transmit/receive operation	
	17.6 AC Characteristics	265
18.	Key-on Wakeup (KWU)	
	18.1 Configuration	267
	18.2 Control.	
	18.3 Functions	
	100 Tuncuons	
19.	10-bit AD Converter (ADC)	
	19.1 Configuration	271
	19.2 Control.	
	19.3 Functions	
	19.3.1 Single mode	
	19.3.2 Repeat mode	
	19.3.3 AD operation disable and forced stop of AD operation	
	19.4 Register Setting	278
	19.5 Starting STOP/IDLE0/SLOW Modes	
	19.6 Analog Input Voltage and AD Conversion Result	
	19.7 Precautions about the AD Converter	
	19.7.1 Analog input pin voltage range	
	19.7.2 Analog input pins used as input/output ports	

### Plash Memory Control ### 20.1 Flash Memory Control ### 20.2 Functions ### 20.2.1 Flash memory command sequence execution and toggle control (FLSCR1 <flsmd>) ### 20.2.2 Flash memory area switching (FLSCR1) ### 20.2.3 RAM area switching (SYSCR3) ### 20.2.4 BOOTROM area switching (FLSCR1) ### 20.2.5 Flash memory standby reset control (FLSSTB) ### 20.3.1 Byte program ### 20.3.3 Command Sequence ### 20.3.3 Chip erase (4-kbyte partial erase) ### 20.3.3 Chip erase (all erase) ### 20.3.4 Product ID exit ### 20.3.5 Security program ### 20.3.6 Security program ### 20.3.6 Security program ### 20.3.6 Security program ### 20.3.6 Security program ### 20.3.7 Product ID exit ### 20.3.8 Droduct ID exit ### 20.3.9 Access to the Flash Memory Area ### 20.3.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode ### 20.5.2 How to write to the flash memory by transferring a control program to the RAM area ### 20.5.2 How to write to the flash memory by using a support program (API) of BOOTROM ### 20.5.2 How to write to the flash memory by using a support program (API) of BOOTROM ### 20.5.2 How to write to the flash memory by using a support program (API) of BOOTROM ### 20.5.2 How to read data from flash memory ### 20.6.1 BTWrite ### 20.6.2 BTEraseSec ### 20.6.3 BTEraseCec ### 20.6.5 BTSetRP ### 20.6.6 BTCalcUART</flsmd>	285 286 288 288 290 290 292 293 294 294 294 295 296
20.2 Functions. 20.2.1 Flash memory command sequence execution and toggle control (FLSCR1 <flsmd>)</flsmd>	285 286 288 288 290 290 292 293 294 294 294 295 296
20.2.1 Flash memory command sequence execution and toggle control (FLSCR1 <flsmd>)</flsmd>	285 286 288 288 290 292 293 294 294 295 295 295 296
20.2.2 Flash memory area switching (FLSCR1 <farea>). 20.2.3 RAM area switching (SYSCR3<rarea>). 20.2.4 BOOTROM area switching (FLSCR1<barea>). 20.2.5 Flash memory standby reset control (FLSSTB<fstb>). 20.3 Command Sequence. 20.3.1 Byte program. 20.3.2 Sector erase (4-kbyte partial erase). 20.3.3 Chip erase (all erase). 20.3.3 Product ID entry. 20.3.5 Product ID exit. 20.3.6 Security program. 20.4 Toggle Bit (D6). 20.5 Access to the Flash Memory Area. 20.5.1 Flash memory control in serial PROM mode. 20.5.2.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface). 20.6.1 BTWrite. 20.6.2 BTEraseSec. 20.6.3 BTEraseChip. 20.6.5 BTSetRP.</fstb></barea></rarea></farea>	286 288 288 290 292 293 294 294 294 295 295 296
20.2.3 RAM area switching (SYSCR3 <rarea>). 20.2.4 BOOTROM area switching (FLSCR1<barea>). 20.2.5 Flash memory standby reset control (FLSSTB<fstb>). 20.3 Command Sequence. 20.3.1 Byte program. 20.3.2 Sector erase (4-kbyte partial erase)</fstb></barea></rarea>	288 288 290 290 292 293 294 294 295 296
20.2.4 BOOTROM area switching (FLSCR1 <barea>) 20.2.5 Flash memory standby reset control (FLSSTB<fstb>) 20.3 Command Sequence 20.3.1 Byte program 20.3.2 Sector erase (4-kbyte partial erase) 20.3.3 Chip erase (all erase) 20.3.4 Product ID entry 20.3.5 Product ID exit 20.3.6 Security program 20.4 Toggle Bit (D6) 20.5 Access to the Flash Memory Area 20.5.1 Flash memory control in serial PROM mode 20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2. Flash memory control in MCU mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface). 20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.5 BTSetRP</fstb></barea>	288 290 292 293 294 294 295 295 296
20.3 Command Sequence. 20.3.1 Byte program. 20.3.2 Sector erase (4-kbyte partial erase). 20.3.3 Chip erase (all erase). 20.3.4 Product ID entry. 20.3.5 Product ID exit. 20.3.6 Security program. 20.4 Toggle Bit (D6). 20.5 Access to the Flash Memory Area. 20.5.1 Flash memory control in serial PROM mode. 20.5.2.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface). 20.6.1 BTWrite. 20.6.2 BTEraseSec. 20.6.3 BTEraseChip. 20.6.4 BTGetRP. 20.6.5 BTSetRP.	290 292 293 294 294 295 295 296
20.3 Command Sequence 20.3.1 Byte program 20.3.2 Sector erase (4-kbyte partial erase) 20.3.3 Chip erase (all erase) 20.3.4 Product ID entry 20.3.5 Product ID exit 20.3.6 Security program 20.4 Toggle Bit (D6) 20.5 Access to the Flash Memory Area 20.5.1 Flash memory control in serial PROM mode 20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.3 How to read data from flash memory 20.6 API (Application Programming Interface). 20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP	
20.3.1 Byte program 20.3.2 Sector erase (4-kbyte partial erase) 20.3.3 Chip erase (all erase) 20.3.4 Product ID entry 20.3.5 Product ID exit 20.3.6 Security program 20.4 Toggle Bit (D6) 20.5 Access to the Flash Memory Area. 20.5.1 Flash memory control in serial PROM mode 20.5.2.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	
20.3.2 Sector erase (4-kbyte partial erase). 20.3.3 Chip erase (all erase). 20.3.4 Product ID entry. 20.3.5 Product ID exit. 20.3.6 Security program. 20.4 Toggle Bit (D6). 20.5 Access to the Flash Memory Area. 20.5.1 Flash memory control in serial PROM mode. 20.5.2.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2 Flash memory control in MCU mode. 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.1 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite. 20.6.2 BTEraseSec. 20.6.3 BTEraseChip. 20.6.4 BTGetRP. 20.6.5 BTSetRP.	293 294 294 295 295 296
20.3.3 Chip erase (all erase) 20.3.4 Product ID entry 20.3.5 Product ID exit 20.3.6 Security program. 20.4 Toggle Bit (D6) 20.5 Access to the Flash Memory Area 20.5.1 Flash memory control in serial PROM mode 20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode. 20.5.2 Flash memory control in MCU mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface). 20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	294 294 294 295 296
20.3.4 Product ID entry. 20.3.5 Product ID exit. 20.3.6 Security program. 20.4 Toggle Bit (D6). 20.5 Access to the Flash Memory Area. 20.5.1 Flash memory control in serial PROM mode. 20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2 Flash memory control in MCU mode. 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite. 20.6.2 BTEraseSec. 20.6.3 BTEraseChip. 20.6.4 BTGetRP. 20.6.5 BTSetRP.	294 294 295 296
20.3.5 Product ID exit. 20.3.6 Security program. 20.4 Toggle Bit (D6). 20.5 Access to the Flash Memory Area. 20.5.1 Flash memory control in serial PROM mode. 20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2 Flash memory control in MCU mode. 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite. 20.6.2 BTEraseSec. 20.6.3 BTEraseChip. 20.6.4 BTGetRP. 20.6.5 BTSetRP.	294 295 29 296
20.4 Toggle Bit (D6). 20.5 Access to the Flash Memory Area. 20.5.1 Flash memory control in serial PROM mode. 20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite. 20.6.2 BTEraseSec. 20.6.3 BTEraseChip. 20.6.4 BTGetRP. 20.6.5 BTSetRP.	295 29 296
20.4 Toggle Bit (D6). 20.5 Access to the Flash Memory Area. 20.5.1 Flash memory control in serial PROM mode. 20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite. 20.6.2 BTEraseSec. 20.6.3 BTEraseChip. 20.6.4 BTGetRP. 20.6.5 BTSetRP.	29
20.5.1 Flash memory control in serial PROM mode 20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode. 20.5.2 Flash memory control in MCU mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface). 20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	296
20.5.1 Flash memory control in serial PROM mode 20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2 Flash memory control in MCU mode 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface). 20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	296
20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode 20.5.2 Flash memory control in MCU mode	
20.5.2 Flash memory control in MCU mode. 20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface). 20.6.1 BTWrite. 20.6.2 BTEraseSec. 20.6.3 BTEraseChip. 20.6.4 BTGetRP. 20.6.5 BTSetRP.	297
20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area 20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite 20.6.2 BTEraseSec. 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	297
20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM 20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	
20.5.2.3 How to set the security program by using a support program (API) of BOOTROM 20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	
20.5.2.4 How to read data from flash memory 20.6 API (Application Programming Interface) 20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	
20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	
20.6.1 BTWrite 20.6.2 BTEraseSec 20.6.3 BTEraseChip 20.6.4 BTGetRP 20.6.5 BTSetRP	30
20.6.3 BTEraseChip. 20.6.4 BTGetRP. 20.6.5 BTSetRP.	
20.6.4 .BTGetRP	310
20.6.5 .BTSetRP	310
	310
20.6.6 BTCalcUART	310
	311
Serial PROM Mode	
21.1 Outline	3
21.2 Security	3
· · · · · · · · · · · · · · · · · · ·	
21.3 Serial PROM Mode Setting	
F	
21.4 Example Connection for On-board Writing	3
21.5 Activating the Serial PROM Mode	3
21.6 Interface Specifications	3
21.6.1 UART communication	
21.7 Memory Mapping	32
21.8 Operation Commands	32
21.8.1 Flash memory erase command (0xF0)	
21.8.1.1 Specifying the erase area	
21.8.2 Flash memory write command (operation command: 0x30)	
21.8.3 Flash memory read command (operation command: 0x40)	
21.8.4 RAM loader command	
21.8.5 Flash memory SUM output command (operation command: 0x90)	
21.8.6 Product ID code output command (operation command: 0xC0)	333
21.8.7 Flash memory status output command (0xC3)	
21.8.8 Mask ROM emulation setting command (0xD0)	

21.9 I	Arror Code	340
21.10	Checksum (SUM)	341
21.10.1	Calculation method	
21.10.2	Calculation data	
21.11	Intel Hex Format (Binary)	
21.12	Security	343
21.12.1	Passwords	343
21.12 21.12	•	
21.12		
21.12	.1.4 Password values and setting range	
21.12.2	Security program	347
21.12 21.12		
21.12.3	Option codes	348
21.12.4	Recommended settings	
21.13	Flowchart	351
21.14	AC Characteristics (UART)	352
21.14.1	Reset timing	
21.14.2	Flash memory erase command (0xF0)	
21.14.3	Flash memory write command (0x30)	354
21.14.4	Flash memory read command (0x40)	
21.14.5	Flash memory SUM output command (0x90)	
21.14.6 21.14.7	Product ID code output command (0xC0)	
21.14.7	Mask ROM emulation setting command (0xC0)	
21.14.9	Flash memory security setting command (0xFA)	
	ip Debug Function (OCD)	255
22.1 I 22.2 (22.3 I	CeaturesControl Pins	357
22.1 I 22.2 C 22.3 I 22.4 S	Ceatures	357
22.1 II 22.2 (C 22.3 II 22.4 S	Control Pins	
22.1 H 22.2 (22.3 H 22.4 S	Ceatures	
22.1 H 22.2 C 22.3 H 22.4 S . Input. 23.1 C	Control Pins	
22.1 H 22.2 (22.3 H 22.4 S . Input. 23.1 (24.1 A 24.2 (Control Pins	
22.1 H 22.2 (22.3 H 22.4 S . Input. 23.1 (24.1 A 24.2 (24.2.1	Control Pins	
22.1 H 22.2 (22.3 H 22.4 S . Input. 23.1 (24.1 A 24.2 (24.2.1 24.2.2	Control Pins	
22.1 H 22.2 (22.3 H 22.4 S . Input. 23.1 (24.1 A 24.2 (24.2.1 (24.2.2 (24.2.3)	Control Pins	
22.1 H 22.2 (C 22.3 H 22.4 S . Input. 23.1 (C 24.1 A 24.2 (C 24.2.1 C 24.2.2 C 24.2.3 C 24.3 I	Control Pins	
22.1 H 22.2 (C 22.3 H 22.4 S . Input. 23.1 (C 24.1 A 24.2 (C 24.2.1 (24.2.2 (24.2.3 H 24.2.4 (24.2.3 H 24.2.4 (24.2.4	Control Pins. Low to Connect the On-chip Debug Emulator to a Target System. Coutput Circuit Control Pins. C	
22.1 H 22.2 (C 22.3 H 22.4 S . Input. 23.1 (C 24.1 A 24.2 (C 24.2.1 (24.2.2 (24.2.3 H 24.2.4 (24.2.3 H 24.2.4 (24.2.4	Control Pins	
22.1 H 22.2 (22.3 H 22.4 S . Input. 23.1 (24.1 A 24.2 (24.2.1 (24.2.2 (24.2.3 I 24.4 A 24.5 H	Ceatures Control Pins Low to Connect the On-chip Debug Emulator to a Target System Coutput Circuit Control Pins ical Characteristics Absolute Maximum Ratings Derating Conditions MCU mode (Flash Programming or erasing). MCU mode (Except Flash Programming or erasing). Serial PROM mode. OC Characteristics Cower-on Reset Circuit Characteristics	
22.1 H 22.2 (C 22.3 H 22.4 S . Input. 23.1 (C 24.1 A 24.2 (C 24.2.1 (24.2.2 (24.2.3) 24.3 H 24.4 A 24.5 H 24.6 N	Control Pins. Low to Connect the On-chip Debug Emulator to a Target System. Low to Connect the On-chip Debug Emulator to a Target System. Low to Connect the On-chip Debug Emulator to a Target System. Low to Connect the On-chip Debug Emulator to a Target System. Low to Control Pins. Low to Control Pins. Low to Control Pins. Low to Conditions. Low to Conditions. Low to Conditions or erasing.	
22.1 H 22.2 Q 22.3 H 22.4 S . Input. 23.1 Q 24.2 Q 24.2.1 24.2.2 24.2.3 24.2.3 I 24.4 A 24.5 H 24.6 N	Ceatures Control Pins Low to Connect the On-chip Debug Emulator to a Target System Coutput Circuit Control Pins ical Characteristics Absolute Maximum Ratings Derating Conditions MCU mode (Flash Programming or erasing). MCU mode (Except Flash Programming or erasing). Serial PROM mode. OC Characteristics Cower-on Reset Circuit Characteristics	

3

	-		



CMOS 8-Bit Microcontroller

TMP89FS62V

The TMP89FS62V is a single-chip 8-bit high-speed and high-functionality microcomputer incorporating 61440 bytes of Flash Memory.

Product No.	ROM (Flash)	RAM	Package
TMP89FS62VUG	61440 bytes	3072 bytes	LQFP44 (10mm x 10mm, 0.8mm pitch)

1.1 Features

- 1. 8-bit single chip microcomputer TLCS-870/C1 series
 - Instruction execution time:

100 ns (at 10 MHz)

122 μs (at 32.768 kHz)

- 133 types & 732 basic instructions
- 2. 24 interrupt sources (External: 4 Internal: 20, Except reset)
- 3. Input / Output ports (39 pins)

Note: Two of above pins can not be used for the I/O port, because they should be connected with the high frequency OSC input.

- Large current output: 6 pins (Typ. 20mA)
- 4. Watchdog timer
 - Interrupt or reset can be selected by the program.
- 5. Power-on reset circuit
- 6. Voltage detection circuit
- 7. Divider output function
- 8. Time base timer
- 9. 16-bit timer counter (TCA): 2 ch
 - Timer, External trigger, Event Counter, Window, Pulse width measurement, PPG OUTPUT modes
- 10. 8-bit timer counter (TC0): 4 ch
 - Timer, Event Counter, PWM, PPG OUTPUT modes
 - Usable as a 16-bit timer, 12-bit PWM output and 16-bit PPG output by the cascade connection of two channels.
- 11. Real time clock

This product uses the Super Flash® technology under the licence of Silicon Storage Technology, Inc. Super Flash® is registered trademark of Silicon Storage Technology, Inc.

1.1 Features TMP89FS62VUG

- 12. UART: 2ch
- 13. UART/SIO: 2ch Note: Three UART channels can be used at the same time.
- 14. Key-on wake-up: 8 ch
- 15. 10-bit successive approximation type AD converter
 - Analog input: 8ch
- 16. On-chip debug function
 - Break/Event
 - Trace
 - RAM monitor
 - Flash memory writing
- 17. Clock operation mode control circuit: 2 circuit

Single clock mode / Dual clock mode

- 18. Low power consumption operation (8 mode)
 - STOP mode:

Oscillation stops. (Battery/Capacitor back-up.)

- SLOW1 mode:

Low power consumption operation using low-frequency clock.(High-frequency clock stop.)

SLOW2 mode:

Low power consumption operation using low-frequency clock.(High-frequency clock oscillate.)

IDLE0 mode:

CPU stops, and only the Time-Based-Timer(TBT) on peripherals operate using high frequency clock. Released when the reference time set to TBT has elapsed.

- IDLE1 mode:

The CPU stops, and peripherals operate using high frequency clock. Release by interruputs(CPU restarts).

IDLE2 mode:

CPU stops and peripherals operate using high and low frequency clock. Release by interruputs. (CPU restarts).

- SLEEP0 mode:

CPU stops, and only the Time-Based-Timer(TBT) on peripherals operate using low frequency clock. Released when the reference time set to TBT has elapsed.

SLEEP1 mode:

CPU stops, and peripherals operate using low frequency clock. Release by interruput.(CPU restarts).

- 19. Wide operation voltage:
 - 4.5 V to 5.5 V at 10MHz /32.768 kHz (with all functions)
 - 4.3 V to 4.5 V at 10MHz /32.768 kHz (without the conversion accuracy of the 10-bit successive approximation type AD converter, the Electric characteristics (DC/AC) and the Write characteristics of Flash memory)

1.2 Pin Assignment

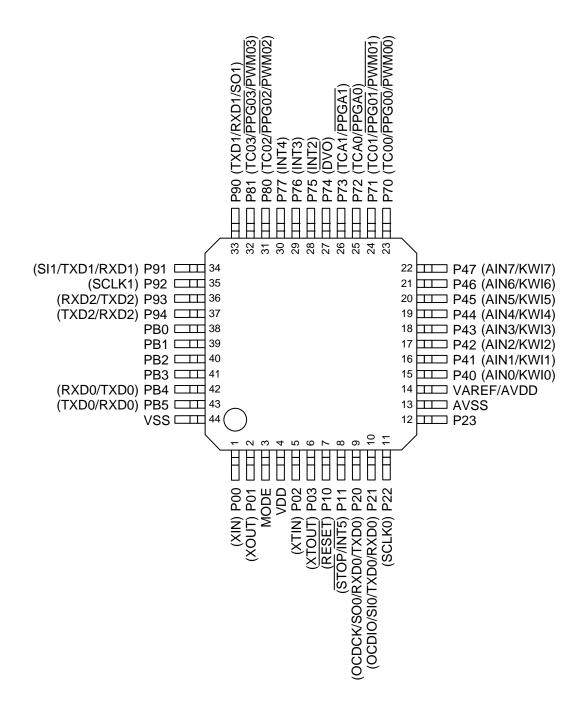


Figure 1-1 Pin Assignment (Topview)

Page 3 2019/08/01

1.3 Block Diagram

TMP89FS62VUG

1.3 Block Diagram

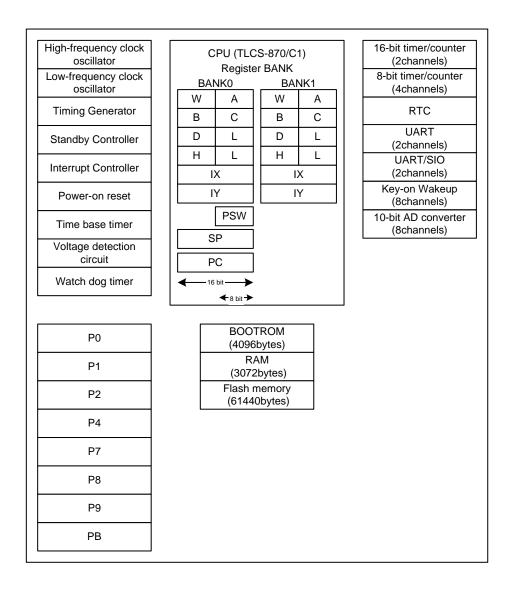


Figure 1-2 Block Diagram



1.4 Pin Names and Functions

The TMP89FS62V has MCU mode, parallel PROM mode, and serial PROM mode. Table 1-1 shows the pin functions in MCU mode. The serial PROM mode is explained later in a separate chapter.

Table 1-1 Pin Names and Functions (1/3)

Pin Name	Input/Output	Functions
P03 XTOUT	10 0	PORT03 Low frequency OSC output
P02 XTIN	10 1	PORT02 Low frequency OSC input
P01 XOUT	10 0	PORT01 High frequency OSC output
P00 XIN	10 1	PORT00 High frequency OSC input
P11 INT5 STOP	10 	PORT11 External interrupt 5 input STOP mode release input
P10 RESET	10 1	PORT10 RESET input
P23	Ю	PORT23
P22 SCLK0	10 1	PORT22 Serial clock input/output 0
P21 RXD0 TXD0 SI0 OCDIO	10 1 0 1 10	PORT21 UART data input 0 UART data output 0 Serial data input 0 OCD data input/output
P20 TXD0 RXD0 SO0 OCDCK	10 0 1 0	PORT20 UART data output 0 UART data input 0 Serial data output 0 OCD clock input
P47 AIN7 KWI7	10 	PORT47 Analog input 7 Key-on wake-up input 7
P46 AIN6 KWI6	10 	PORT46 Analog input 6 Key-on wake-up input 6
P45 AIN5 KWI5	10 	PORT45 Analog input 5 Key-on wake-up input 5
P44 AIN4 KWI4	10 	PORT44 Analog input 4 Key-on wake-up input 4

Page 5 2019/08/01

Pin Name	Input/Output	Functions
P43 AIN3 KWI3	IO I I	PORT43 Analog input 3 Key-on wake-up input 3
P42 AIN2 KWI2	10 	PORT42 Analog input 2 Key-on wake-up input 2
P41 AIN1 KWI1	10 	PORT41 Analog input 1 Key-on wake-up input 1
P40 AIN0 KWI0	IO I I	PORT40 Analog input 0 Key-on wake-up input 0
P77 INT4	10 1	PORT77 External interrupt 4 input
P76 INT3	10 1	PORT76 External interrupt 3 input
P75 INT2	10 1	PORT75 External interrupt 2 input
P74 DVO	10 0	PORT74 Divider output
P73 TCA1 PPGA1	10 1 0	PORT73 TCA1 input PPGA1 output
P72 TCA0 PPGA0	IO I O	PORT72 TCA0 input PPGA0 output
P71 TC01 PPG01 PWM01	IO I O O	PORT71 TC01 input PPG01 output PWM01 output
P70 TC00 PPG00 PWM00	IO I O O	PORT70 TC00 input PPG00 output PWM00 output
P81 TC03 PPG03 PWM03	IO I O O	PORT81 TC03 input PPG03 output PWM03 output
P80 TC02 PPG02 PWM02	IO I O O	PORT80 TC02 input PPG02 output PWM02 output



Table 1-3 Pin Names and Functions (3/3)

Pin Name	Input/Output	Functions
P94	IO	PORT94
RXD2	l l	UART data input 2
TXD2	0	UART data output 2
P93	Ю	PORT93
TXD2	0	UART data output 2
RXD2	I	UART data input 2
P92	Ю	PORT92
SCLK1	Ю	Serial clock input/output 1
P91	Ю	PORT91
RXD1	1	UART data input 1
TXD1	0	UART data output 1
SI1	I	Serial data input 1
P90	10	PORT90
TXD1	0	UART data output 1
RXD1	1	UART data input 1
SO1	0	Serial data output 1
PB5	Ю	PORTB5
RXD0	1	UART data input 0
TXD0	0	UART data output 0
PB4	10	PORTB4
TXD0	0	UART data output 0
RXD0	I	UART data input 0
PB3	Ю	PORTB3
PB2	Ю	PORTB2
PB1	Ю	PORTB1
PB0	Ю	PORTB0
MODE	I	Test pin for out-going test (fix to Low level).
VAREF / AVDD	I	Analog reference voltage input pin for A/D conversion. / Analog power supply pin.
AVSS	I	Analog GND pin
VDD	I	Power supply pin
VSS	I	GND pin

Page 7 2019/08/01

1.4 Pin Names and Functions

TMP89FS62VUG



2. CPU Core

2.1 Configuration

The CPU core consists of a CPU, a system clock controller and a reset circuit.

This chapter describes the CPU core address space, the system clock controller and the reset circuit.

2.2 Memory space

The 870/C1 CPU memory space consists of a code area to be accessed as instruction operation codes and operands and a data area to be accessed as sources and destinations of transfer and calculation instructions.

Both the code and data areas have independent 64-Kbyte address spaces.

2.2.1 Code area

The code area stores operation codes, operands, vector tables for vector call instructions and interrupt vector tables.

The RAM, the BOOTROM and the Flash are mapped in the code area.

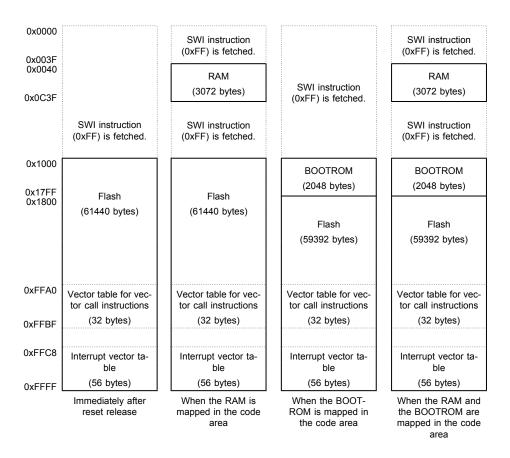


Figure 2-1 Memory Map in the Code Area

Note: Only the first 2 Kbytes of the BOOTROM are mapped in the memory map, except in the serial PROM mode.

Page 9 2019/08/01

2.2 Memory space TMP89FS62VUG

2.2.1.1 RAM

The RAM is mapped in the data area immediately after reset release.

By setting SYSCR3<RAREA> to "1" and writing 0xD4 to SYSCR4, RAM can be mapped to 0x0040to 0x0C3F in the code area to execute the program.

At this time, by setting SYSCR<RVCTR> to "1" and writing 0xD4 to SYSCR4, vector table for vector call instructions and interrupt except reset can be mapped to RAM.

Note 1: When the RAM is not mapped in the code area, the SWI instruction is fetched from 0x0040 to 0x0C3F.

Note2: The contents of the RAM become unstable when the power is turned on and immediately after a reset is released. To execute the program by using the RAM, transfer the program to be executed in the initialization routine.

System control register 3

SYSCR3		7	6	5	4	3	2	1	0
(0x0FDE)	Bit Symbol	-	-	-	-	-	RVCTR	RAREA	(RSTDIS)
	Read/Write	R	R	R	R	R	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

ſ	DADEA	RAREA Specifies mapping of the RAM in the code area		The RAM is not mapped from 0x0040 to 0x0C3F in the code area.				
	KAKEA			The RAM is mapped from 0x0040 to 0x0C3F in the code area.				
		Specifies mapping of the vector ta-		Vector table for vector call instructions	Vector table for interrupt			
	RVCTR ble for vector call instructions and interrupts	0:	0xFFA0 to 0xFFBF in the code area	0xFFC8 to 0xFFFF in the code area				
			1:	0x01A0 to 0x01BF in the code area	0x01C8 to 0x01FD in the code area			

Note 1: The value of SYSCR3<RAREA> is invalid until 0xD4 is written into SYSCR4.

Note 2: To assign vector address areas to RAM, set SYSCR3<RVCTR> to "1" and SYSCR3<RAREA> to "1".

Note 3: Bits 7 to 3 of SYSCR3 are read as "0".

System control register 4

SYSCR4 (0x0FDF)

	7	6	5	4	3	2	1	0		
Bit Symbol		SYSCR4								
Read/Write		W								
After reset	0	0	0	0	0	0	0	0		

ſ		0xB2 :	Enables the contents of SYSCR3 <rstdis>.</rstdis>	
	CVCCD4	SYSCR4 Writes the SYSCR3 data control code.	0xD4:	Enables the contents of SYSCR3 <rarea> and SYSCR3 <rvctr>.</rvctr></rarea>
	515CR4		0x71 :	Enables the contents of IRSTSR <fclr></fclr>
				Others : Invalid

Note 1: SYSCR4 is a write-only register, and must not be accessed by using a read-modify-write instruction, such as a bit operation.

Note 2: After SYSCR3<RSTDIS> is modified, SYSCR4 should be written 0xB2 (Enable code for SYSCR3<RSTDIS>) in NOR-MAL mode when fcgck is fc/4 (CGCR<FCGCKSEL>=00). Otherwise, SYSCR3<RSTDIS> may be enabled at unexpected timing.



Note 3: After IRSTSR<FCLR> is modified, SYSCR4 should be written 0x71 (Enable code for IRSTSR<FCLR> in NORMAL mode when fcgck is fc/4 (CGCR<FCGCKSEL>=00). Otherwise, IRSTSR<FCLR> may be enabled at unexpected timing.

System control status register 4

SYSSR4		7	6	5	4	3	2	1	0
(0x0FDF)	Bit Symbol	-	-	-	-	-	RVCTRS	RAREAS	(RSTDIS)
	Read/Write	R	R	R	R	R	R	R	R
	Δfter reset	n	n	n	n	n	n	n	0

RAREAS	Status of mapping of the RAM in the code area		The enabled SYSCR3 <rarea> data is "0". The enabled SYSCR3<rarea> data is "1".</rarea></rarea>
PV/CTPS	RVCTRS Status of mapping of the vector address in the area	0 :	The enabled SYSCR3 <rvctr> data is "0".</rvctr>
RVCIRS		1:	The enabled SYSCR3 <rvctr> data is "1".</rvctr>

Note: Bits 7 to 3 of SYSSR4 are read as "0".

Example: Program transfer (Transfer the program saved in the data area to the RAM.)

LD HL, TRANSFER_START_ADDRESS ;Destination RAM address LD DE, PROGRAM_START_ADDRESS ;Source ROM address LD BC, BYTE_OF_PROGRAM ;Number of bytes of the program to be executed -1 TRANS_RAM: LD A, (DE) ;Reading the program to be transferred LD (HL), A ;Writing the program to be transferred INC HL ;Destination address increment INC DF :Source address increment DEC BC ;Have all the programs been transferred? F, TRANS_RAM

2.2.1.2 BOOTROM

The BOOTROM is not mapped in the code area or the data area after reset release.

Setting FLSCR1<BAREA> to "1" and writing 0xD5 to FLSCR2 maps the BOOTROM to 0x1000 to 0x17FF in the code area and to 0x1000 to 0x17FF in the data area. Flash memory can be easily programmed by using the API (Application Programming Interface) contained in the BOOTROM.

Note 1: When the BOOTROM is not mapped in the code area, an instruction is fetched from the Flash or an SWI instruction is fetched, depending on the capacity of the internal Flash.

Note 2: Only the first 2 Kbytes of the BOOTROM are mapped in the memory map, except in the serial PROM mode.

Flash memory control register 1

FLSCR1		7	6	5	4	3	2	1	0	
(0x0FD0)	Bit Symbol		(FLSMD)		BAREA	(FAREA)		(ROMSEL)		
	Read/Write		R/W		R/W	R	/W	R	W	
	After reset	0	1	0	0	0	0	0	0	

BAREA	Specifies mapping of the BOOT-ROM in the code and data areas	The BOOTROM is not mapped to 0x1000 to 0x17FF in the code area and to 0x1000 to 0x17FF in the data area. The BOOTROM is mapped to 0x1000 to 0x17FF in the code area and
		to 0x1000 to 0x17FF in the data area.

Page 11 2019/08/01

2.2 Memory space TMP89FS62VUG

Note: The flash memory control register 1 has a double-buffer structure comprised of the register FLSCR1 and a shift register. Writing "0xD5" to the register FLSCR2 allows a register setting to be reflected and take effect in the shift register. This means that a register setting value does not take effect until "0xD5" is written to the register FLSCR2. The value of the shift register can be checked by reading the register FLSCRM.

Flash memory control register 2

FLSCR2		7	6	5	4	3	2	1	0			
(0x0FD1)	Bit Symbol				CR	1EN						
	Read/Write		W									
	After reset	*	*	*	*	*	*	*	*			
		,				¥	-	-				
	CR1EN	FLSCR1 register	-	0xD5	5 Enable a change in the FLSCR1 setting							
	CKILIN	enable/disable co	ontrol	Others	Reserved							

2.2.1.3 Flash

The Flash is mapped to 0x1000 to 0xFFFF in the code area after reset release.



2.2.2 Data area

The data area stores the data to be accessed as sources and destinations of transfer and calculation instructions.

The SFR, the RAM, the BOOTROM and the FLASH are mapped in the data area.

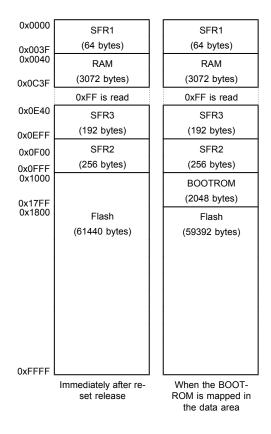


Figure 2-2 Memory Map in the Data Area

Note: Only the first 2 Kbytes of the BOOTROM are mapped in the memory map, except in the serial PROM mode.

2.2.2.1 SFR

The SFR is mapped to 0x0000 to 0x003F (SFR1), 0x0F00 to 0x0FFF (SFR2) and 0x0E40 to 0x0EFF (SFR3) in the data area after reset release.

Note: Don't access the reserved SFR.

2.2.2.2 RAM

The RAM is mapped to 0x0040 to 0x0C3F in the data area after reset release.

Note: The contents of the RAM become unstable when the power is turned on and immediately after a reset is released. To execute the program by using the RAM, transfer the program to be executed in the initialization routine.

Page 13 2019/08/01

2.2 Memory space TMP89FS62VUG

Example: RAM initialization program

LD HL, RAM_TOP_ADDRESS ;Head of address of the RAM to be initialized

LD A, 0x00 ;Initialization data

LD BC, BYTE_OF_CLEAR_BYTES ;Number of bytes of RAM to be initialized -1

CLR_RAM: LD (HL), A ;Initialization of the RAM

INC HL ;Initialization address increment

DEC BC ;Have all the RAMs been initialized?

J F, CLR_RAM

2.2.2.3 BOOTROM

The BOOTROM is not mapped in the code area or the data area after reset release.

Setting FLSCR1<BAREA> to "1" and writing 0xD5 to FLSCR2 maps the BOOTROM to 0x1000 to 0x17FF in the code area and to 0x1000 to 0x17FF in the data area. Flash memory can be easily programmed by using the API (Application Programming Interface) contained in the BOOTROM.

Note1: Only the first 2 Kbytes of the BOOTROM are mapped in the memory map, except in the serial PROM mode.

Flash memory control register 1

FLSCR1		7	6	5	4	3	2	1	0	
(0x0FD0)	Bit Symbol		(FLSMD)			(FAF	REA)	(ROMSEL)		
	Read/Write	R/W			R/W	R/W		R/W		
	After reset	0	1	0	0	0	0	0	0	

BAREA	BAREA Specifies mapping of the BOOT-ROM in the code and data areas		The BOOTROM is not mapped to 0x1000 to 0x17FF in the code area and to 0x1000 to 0x17FF in the data area.
		1:	The BOOTROM is mapped to 0x1000 to 0x17FF in the code area and to 0x1000 to 0x17FF in the data area.

Note: The flash memory control register 1 has a double-buffer structure comprised of the register FLSCR1 and a shift register. Writing "0xD5" to the register FLSCR2 allows a register setting to be reflected and take effect in the shift register. This means that a register setting value does not take effect until "0xD5" is written to the register FLSCR2. The value of the shift register can be checked by reading the register FLSCRM.

Flash memory control register 2

FLSCR2 7 6 5 4 3 2 1 0

(0x0FD1) Bit Symbol CR1EN

Read/Write W

After reset * * * * * * * * * * * *

CR1EN	FLSCR1 register	0xD5	Enable a change in the FLSCR1 setting
CRIEN	enable/disable control	Others	Reserved

2.2.2.4 Flash

The Flash is mapped to 0x1000 to 0xFFFF in the data area after reset release.



2.3 System clock controller

2.3.1 Configuration

The system clock controller consists of a clock generator, a clock gear, a timing generator, a warm-up counter and an operation mode control circuit.

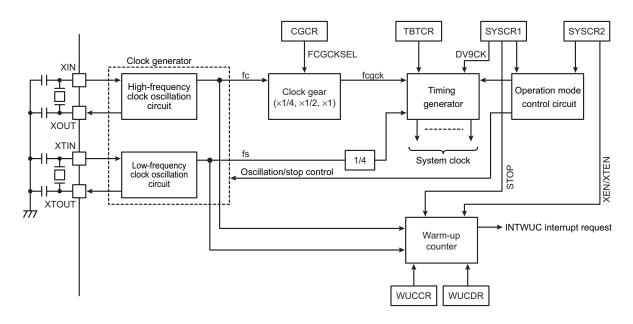


Figure 2-3 System Clock Controller

2.3.2 Control

The system clock controller is controlled by system control register 1 (SYSCR1), system control register 2 (SYSCR2), the warm-up counter control register (WUCCR), the warm-up counter data register (WUCDR) and the clock gear control register (CGCR).

System control register 1

SYSCR1		7	6	5	4	3	2	1	0
(0x0FDC)	Bit Symbol	STOP	RELM	OUTEN	DV9CK	-	-	-	-
	Read/Write	R/W	R/W	R/W	R/W	R	R	R	R
	After reset	0	0	0	0	1	0	0	0

STOP	Activates the STOP mode	0 : 1 :	Operate the CPU and the peripheral circuits Stop the CPU and the peripheral circuits (activate the STOP mode)
RELM	Selects the port output state in the		Edge-sensitive release mode (Release the STOP mode at the rising edge of the STOP mode release signal)
			Level-sensitive release mode (Release the STOP mode at the "H" level of the STOP mode release signal)
OUTEN			High impedance Output hold
DV9CK	Selects the input clock to stage 9 of the divider	0 : 1 :	fcgck/2 ⁹ fs/4

Note 1: fcgck: Gear clock [Hz], fs: Low-frequency clock [Hz]

Note 2: Bits 2, 1 and 0 of SYSCR1 are read as "0". Bit 3 is read as "1".

Note 3: If the STOP mode is activated with SYSCR1<OUTEN> set at "0", the port internal input is fixed to "0". Therefore, an external interrupt may be set at the falling edge, depending on the pin state when the STOP mode is activated.

Page 15 2019/08/01

- Note 4: The P11 pin is also used as the STOP pin. When the STOP mode is activated, the pin reverts to high impedance state and is put in input mode, regardless of the state of SYSCR1<OUTEN>.
- Note 5: Writing of the second byte data will be executed improperly if the operation is switched to the STOP state by an instruction, such as LDW, which executes 2-byte data transfer at a time.
- Note 6: Don't set SYSCK1<DV9CK> to "1" before the oscillation of the low-frequency clock oscillation circuit becomes stable.
- Note 7: In the SLOW1/2 or SLEEP1 mode, fs/4 is input to stage 9 of the divider, regardless of the state of SYSCR1< DV9CK >.

System control register 2

SYSCR2 (0x0FDD)

	7	6	5	4	3	2	1	0	
Bit Symbol	-	XEN	XTEN	SYSCK	IDLE	TGHALT	-	-	
Read/Write	R	R/W	R/W	R/W	R/W	R/W	R	R	
After reset	0	1	0	0	0	0	0	0	

XEN	Controls the high-frequency clock oscillation circuit	0 : 1 :	Stop oscillation Continue or start oscillation
XTEN	Controls the low-frequency clock oscillation circuit	0 : 1 :	Stop oscillation Continue or start oscillation
SYSCK	Selects a system clock	0 : 1 :	Gear clock (fcgck) (NORMAL1/2 or IDLE1/2 mode) Low-frequency clock (fs/4) (SLOW1/2 or SLEEP1 mode)
IDLE	CPU and WDT control (IDLE1/2 or SLEEP1 mode)	0 : 1 :	Operate the CPU and the WDT Stop the CPU and the WDT (Activate IDLE1/2 or SLEEP1 mode)
TGHALT	TG control (IDLE0 or SLEEP0 mode)	0 : 1 :	Enable the clock supply from the TG to all the peripheral circuits Disable the clock supply from the TG to the peripheral circuits except the TBT (Activate IDLE0 or SLEEP0 mode)

- Note 1: fcgck: Gear clock [Hz], fs: Low-frequency clock [Hz]
- Note 2: WDT: Watchdog timer, TG: Timing generator
- Note 3: Don't set both SYSCR2<IDLE> and SYSCR2<TGHALT> to "1" simultaneously.
- Note 4: Writing of the second byte data will be executed improperly if the operation is switched to the IDLE state by an instruction, such as LDW, which executes 2-byte data transfer at a time.
- Note 5: When the IDLE1/2 or SLEEP1 mode is released, SYSCR2<IDLE> is cleared to "0" automatically.
- Note 6: When the IDLE0 or SLEEP0 mode is released, SYSCR2<TGHALT> is cleared to "0" automatically.
- Note 7: Bits 7, 1 and 0 of SYSCR2 are read as "0".

Warm-up counter control register

WUCCR (0x0FCD)

	7	6	5	4	3	2	1	0
Bit Symbol	WUCRST	-	-	-	WU	CDIV	WUCSEL	-
Read/Write	W	R	R	R	R/W		R/W	R
After reset	0	0	0	0	1	1	0	1

WUCRST	Resets and stops the warm-up counter	0 : 1 :	- Clear and stop the counter
WUCDIV	Selects the frequency division of the warm-up counter source clock	00 : 01 : 10 : 11 :	
WUCSEL	Selects the warm-up counter source clock	0 : 1 :	Select the high-frequency clock (fc) Select the low-frequency clock (fs)

Note 1: fc: High-frequency clock [Hz], fs: Low-frequency clock [Hz]

Note 2: WUCCR<WUCRST> is cleared to "0" automatically, and need not be cleared to "0" after being set to "1".

Note 3: Bits 7 to 4 of WUCCR are read as "0". Bit 0 is read as "1".

Note 4: Before starting the warm-up counter operation, set the source clock and the frequency division rate at WUCCR and set the warm-up time at WUCDR.



Warm-up counter data register

WUCDR		7	6	5	4	3	2	1	0				
(0x0FCE)	Bit Symbol				WU	CDR							
	Read/Write		R/W										
	After reset	0	0 1 1 0 0 1 1 0										
	WUCDR		Warm-up time setting										

Note 1: Don't start the warm-up counter operation with WUCDR set at "0x00".

Clock gear control register

CGCR		7	6	5	4	3	2	1	0
(0x0FCF)	Bit Symbol	-	-	-	-	-	-	FCGC	KSEL
	Read/Write	R	R	R	R	R	R	R/W	
	After reset	0	0	0	0	0	0	0	0

FCGCKSEL	Clock gear setting	00 :	fcgck = fc / 4
		01 :	fcgck = fc / 2
		10 :	fcgck = fc
		11 :	Reserved

Note 1: fcgck: Gear clock [Hz], fc: High-frequency clock [Hz]

Note 2: Don't change CGCR<FCGCKSEL> in the SLOW mode.

Note 3: Bits 7 to 2 of CGCR are read as "0".

2.3.3 Functions

2.3.3.1 Clock generator

The clock generator generates the basic clock for the system clocks to be supplied to the CPU core and peripheral circuits.

It contains two oscillation circuits: one for the high-frequency clock and the other for the low-frequency clock.

The oscillation circuit pins are also used as ports P0. For the setting to use them as ports, refer to the chapter of I/O Ports.

To use ports P00 and P01 as the high-frequency clock oscillation circuits (the XIN and XOUT pins), set P0FC0 to "1" and then set SYSCR2<XEN> to "1".

To use ports P02 and P03 as the low-frequency clock oscillation circuits (the XTIN and XTOUT pins), set P0FC2 to "1" and then set SYSCR2<XTEN> to "1".

The high-frequency (fc) clock and the low-frequency (fs) clock can easily be obtained by connecting an oscillator between the XIN and XOUT pins and between the XTIN and XTOUT pins respectively.

Clock input from an external oscillator is also possible. In this case, external clocks are applied to the XIN/XTIN pins and the XOUT/XTOUT pins are kept open.

Enabling/disabling the oscillation of the high-frequency clock oscillation circuit and the low-frequency clock oscillation circuit and switching the pin function to ports are controlled by the software and hardware.

The software control is executed by SYSCR2<XEN>, SYSCR2<XTEN> and the P0 port function control register P0FC.

The hardware control is executed by reset release and the operation mode control circuit when the operation is switched to the STOP mode as described in "2.3.5 Operation mode control circuit".


Note: No hardware function is available for external direct monitoring of the basic clock. The oscillation frequency can be adjusted by programming the system to output pulses at a certain frequency to a port (for example, a clock output) with interrupts disabled and the watchdog timer disabled and monitoring the output. An adjustment program must be created in advance for a system that requires adjustment of the oscillation frequency.

To prevent the dead lock of the CPU core due to the software-controlled enabling/disabling of the oscillation, an internal factor reset is generated depending on the combination of values of the clock selected as the main system clock, SYSCR2<XEN>, SYSCR2<XTEN> and the P0 port function control register P0FC0

Table 2-1 Prohibited Combinations of Oscillation Enable Register Conditions

P0FC0	SYSCR2 <xen></xen>	SYSCR2 <xten></xten>	SYSCR2 <sysck></sysck>	State
Don't Care	0	0	Don't Care	All the oscillation circuits are stopped.
Don't Care	Don't Care	0	1	The low-frequency clock (fs) is selected as the main system clock, but the low-frequency clock oscillation circuit is stopped.
Don't Care	0	Don't Care	0	The high-frequency clock (fc) is selected as the main system clock, but the high-frequency clock oscillation circuit is stopped.
0	1	Don't Care	Don't Care	The high-frequency clock oscillation circuit is allowed to oscillate, but the port is set as a general-purpose port.

Note: It takes a certain period of time after SYSCR2<SYSCK> is changed before the main system clock is switched. If the currently operating oscillation circuit is stopped before the main system clock is switched, the internal condition becomes as shown in Table 2-1 and a system clock reset occurs. For details of clock switching, refer to "2.3.6 Operation Mode Control".

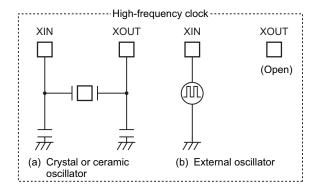

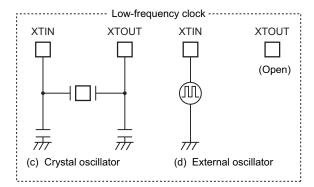


Figure 2-4 Examples of Oscillator Connection

2.3.3.2 Clock gear

The clock gear is a circuit that selects a gear clock (fcgck) obtained by dividing the high-frequency clock (fc) and inputs it to the timing generator.

Selects a divided clock at CGCR<FCGCKSEL>.

Two machine cycles are needed after CGCR<FCGCKSEL> is changed before the gear clock (fcgck) is changed.

The gear clock (fcgck) may be longer than the set clock width, immediately after CGCR<FCGCKSEL> is changed.

Immediately after reset release, the gear clock (fcgck) becomes the clock that is a quarter of the high-frequency clock (fc).

Table 2-2	2 Gear	Clock	(fcgck)
-----------	--------	-------	---------

CGCR <fcgcksel></fcgcksel>	fcgck
00	fc / 4
01	fc / 2
10	fc
11	Reserved

Note: Don't change CGCR<FCGCKSEL> in the SLOW mode. This may stop the gear clock (fcgck) from being changed.

2.3.3.3 Timing generator

The timing generator is a circuit that generates system clocks to be supplied to the CPU core and the peripheral circuits, from the gear clock (fcgck) or the clock that is a quarter of the low-frequency clock (fs). The timing generator has the following functions:

- 1. Generation of the main system clock (fm)
- 2. Generation of clocks for the timer counter, the time base timer and other peripheral circuits

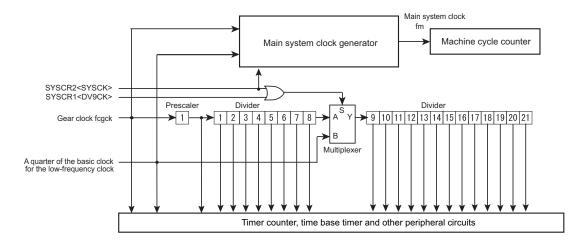


Figure 2-5 Configuration of Timing Generator

Page 19

(1) Configuration of timing generator

The timing generator consists of a main system clock generator, a prescaler, a 21-stage divider and a machine cycle counter.

1. Main system clock generator

This circuit selects the gear clock (fcgck) or the clock that is a quarter of the low-frequency clock (fs) for the main system clock (fm) to operate the CPU core.

Clearing SYSCR2<SYSCK> to "0" selects the gear clock (fcgck). Setting it to "1" selects the clock that is a quarter of the low-frequency clock (fs).

It takes a certain period of time after SYSCR2<SYSCK> is changed before the main system clock is switched. If the currently operating oscillation circuit is stopped before the main system clock is switched, the internal condition becomes as shown in Table 2-1 and a system clock reset occurs. For details of clock switching, refer to "2.3.6 Operation Mode Control".

TMP89FS62VUG

Prescaler and divider

These circuits divide fcgck. The divided clocks are supplied to the timer counter, the time base timer and other peripheral circuits.

When both SYSCR1<DV9CK> and SYSCR2<SYSCK> are "0", the input clock to stage 9 of the divider becomes the output of stage 8 of the divider.

When SYSCR1<DV9CK> or SYSCR2<SYSCK> is "1", the input clock to stage 9 of the divider becomes fs/4. When SYSCR2<SYSCK> is "1", the outputs of stages 1 to 8 of the divider and prescaler are stopped.

The prescaler and divider are cleared to "0" at a reset and at the end of the warm-up operation that follows the release of STOP mode.

3. Machine cycle

Instruction execution is synchronized with the main system clock (fm).

The minimum instruction execution unit is called a "machine cycle". One machine cycle corresponds to one main system clock.

There are a total of 11 different types of instructions for the TLCS-870/C1 Series: 10 types ranging from 1-cycle instructions, which require one machine cycle for execution, to 10-cycle instructions, which require 10 machine cycles for execution, and 13-cycle instructions, which require 13 machine cycles for execution.

2.3.4 Warm-up counter

The warm-up counter is a circuit that counts the high-frequency clock (fc) and the low-frequency clock (fs), and it consists of a source clock selection circuit, a 3-stage frequency division circuit and a 14-stage counter.

The warm-up counter is used to secure the time after a power-on reset is released before the supply voltage becomes stable and secure the time after the STOP mode is released or the operation mode is changed before the oscillation by the oscillation circuit becomes stable.

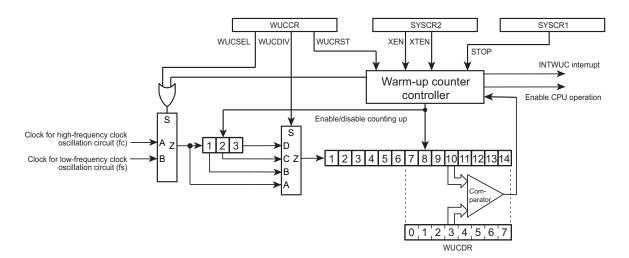


Figure 2-6 Warm-up Counter Circuit



2.3.4.1 Warm-up counter operation when the oscillation is enabled by the hardware

(1) When a power-on reset is released or a reset is released

The warm-up counter serves to secure the time after a power-on reset is released before the supply voltage becomes stable and the time after a reset is released before the oscillation by the high-frequency clock oscillation circuit becomes stable.

When the power is turned on and the supply voltage exceeds the power-on reset release voltage, the warm-up counter reset signal is released. At this time, the CPU and the peripheral circuits are held in the reset state.

A reset signal initializes WUCCR<WUCSEL> to "0" and WUCCR<WUCDIV> to "11", which selects the high-frequency clock (fc) as the input clock to the warm-up counter.

When a reset is released for the warm-up counter, the high-frequency clock (fc) is input to the warm-up counter, and the 14-stage counter starts counting the high-frequency clock (fc).

When the upper 8 bits of the warm-up counter become equal to WUCDR, counting is stopped and a reset is released for the CPU and the peripheral circuits.

WUCDR is initialized to 0x66 after reset release, which makes the warm-up time $0x66 \times 2^9/\text{fc[s]}$.

Note: The clock output from the oscillation circuit is used as the input clock to the warm-up counter. The warm-up time contains errors because the oscillation frequency is unstable until the oscillation circuit becomes stable.

(2) When the STOP mode is released

The warm-up counter serves to secure the time after the oscillation is enabled by the hardware before the oscillation becomes stable at the release of the STOP mode.

The high-frequency clock (fc) or the low-frequency clock (fs), which generates the main system clock when the STOP mode is activated, is selected as the input clock for frequency division circuit, regardless of WUCCR<WUCSEL>.

Before the STOP mode is activated, select the division rate of the input clock to the warm-up counter at WUCCR<WUCDIV> and set the warm-up time at WUCDR.

When the STOP mode is released, the 14-stage counter starts counting the input clock selected in the frequency division circuit.

When the upper 8 bits of the warm-up counter become equal to WUCDR, counting is stopped and the operation is restarted by an instruction that follows the STOP mode activation instruction.

Clock that generates the main system clock when the STOP mode is activated	WUCCR <wucsel></wucsel>	WUCCR <wucdiv></wucdiv>	Counter input clock	Warm-up time
	Don't Care	00	fc	26 / fc to 255 x 26 / fc
fc		01	fc / 2	27 / fc to 255 x 27 / fc
TC TC		10	fc / 2 ²	28 / fc to 255 x 28 / fc
		11	fc / 2 ³	29 / fc to 255 x 29 / fc
	Don't Care	00	fs	26 / fs to 255 x 26 / fs
fs		01	fs / 2	27 / fs to 255 x 27 / fs
18		10	fs / 2 ²	28 / fs to 255 x 28 / fs
		11	fs / 2 ³	29 / fs to 255 x 29 / fs

Note 1: When the operation is switched to the STOP mode during the warm-up for the oscillation enabled by the software, the warm-up counter holds the value at the time, and restarts counting after the STOP mode is released. In this case, the warm-up time at the release of the STOP mode becomes insufficient. Don't switch the operation to the STOP mode during the warm-up for the oscillation enabled by the software.

Note 2: The clock output from the oscillation circuit is used as the input clock to the warm-up counter. The warm-up time contains errors because the oscillation frequency is unstable until the oscillation circuit becomes stable. Set the sufficient time for the oscillation start property of the oscillator.

2.3.4.2 Warm-up counter operation when the oscillation is enabled by the software

The warm-up counter serves to secure the time after the oscillation is enabled by the software before the oscillation becomes stable, at a mode change from NORMAL1 to NORMAL2 or from SLOW1 to SLOW2.

Select the input clock to the frequency division circuit at WUCCR<WUCSEL>.

Select the input clock to the 14-stage counter at WUCCR<WUCDIV>.

After the warm-up time is set at WUCDR, setting SYSCR2<XEN> or SYSCR2<XTEN> to "1" allows the stopped oscillation circuit to start oscillation and the 14-stage counter to start counting the selected input clock.

When the upper 8 bits of the counter become equal to WUCDR, an INTWUC interrupt occurs, counting is stopped and the counter is cleared.

Set WUCCR<WUCRST> to "1" to discontinue the warm-up operation.

By setting it to "1", the count-up operation is stopped, the warm-up counter is cleared, and WUCCR<WUCRST> is cleared to "0".

SYSCR2<XEN> and SYSCR2<XTEN> hold the values when WUCCR<WUCRST> is set to "1". To restart the warm-up operation, SYSCR2<XEN> or SYSCR2<XTEN> must be cleared to "0".

Note: The warm-up counter starts counting when SYSCR2<XEN> or SYSCR2<XTEN> is changed from "0" to "1". The counter will not start counting by writing "1" to SYSCR2<XEN> or SYSCR2<XTEN> when it is in the state of "1".

WUCCR <wucsel></wucsel>	WUCCR <wucdiv></wucdiv>	Counter input clock	Warm-up time
	00	fc	26 / fc to 255 x 26 / fc
0	01	fc / 2	27 / fc to 255 x 27 / fc
	10	fc / 2 ²	28 / fc to 255 x 28 / fc
	11	fc / 2 ³	29 / fc to 255 x 29 / fc
	00	fs	26 / fs to 255 x 26 / fs
1	01	fs / 2	27 / fs to 255 x 27 / fs
1	10	fs / 2 ²	28 / fs to 255 x 28 / fs
	11	fs / 2 ³	29 / fs to 255 x 29 / fs

Note: The clock output from the oscillation circuit is used as the input clock to the warm-up counter. The warm-up time contains errors because the oscillation frequency is unstable until the oscillation circuit becomes stable. Set the sufficient time for the oscillation start property of the oscillator.

2.3.5 Operation mode control circuit

The operation mode control circuit starts and stops the oscillation circuits for the high-frequency and low-frequency clocks, and switches the main system clock (fm).

There are three operating modes: the single-clock mode, the dual-clock mode and the STOP mode. These modes are controlled by the system control registers (SYSCR1 and SYSCR2).

Figure 2-7 shows the operating mode transition diagram.



2.3.5.1 Single-clock mode

Only the gear clock (fcgck) is used for the operation in the single-clock mode.

The main system clock (fm) is generated from the gear clock (fcgck). Therefore, the machine cycle time is 1/fcgck [s].

The gear clock (fcgck) is generated from the high-frequency clock (fc).

In the single-clock mode, the low-frequency clock generation circuit pins P02 (XTIN) and P03 (XTOUT) can be used as the I/O ports.

(1) NORMAL1 mode

In this mode, the CPU core and the peripheral circuits operate using the gear clock (fcgck).

The NORMAL1 mode becomes active after reset release.

(2) IDLE1 mode

In this mode, the CPU and the watchdog timer stop and the peripheral circuits operate using the gear clock (fcgck).

The IDLE1 mode is activated by setting SYSCR2<IDLE> to "1" in the NORMAL1 mode.

When the IDLE1 mode is activated, the CPU and the watchdog timer stop.

When the interrupt latch enabled by the interrupt enable register EFR becomes "1", the IDLE1 mode is released to the NORMAL1 mode.

When the IMF (interrupt master enable flag) is "1" (interrupts enabled), the operation returns normal after the interrupt processing is completed.

When the IMF is "0" (interrupts disabled), the operation is restarted by the instruction that follows the IDLE1 mode activation instruction.

(3) IDLE0 mode

In this mode, the CPU and the peripheral circuits stop, except the oscillation circuits and the time base timer.

In the IDLE0 mode, the peripheral circuits stop in the states when the IDLE0 mode is activated or become the same as the states when a reset is released. For operations of the peripheral circuits in the IDLE0 mode, refer to the section of each peripheral circuit.

The IDLE0 mode is activated by setting SYSCR2<TGHALT> to "1" in the NORMAL1 mode.

When the IDLE0 mode is activated, the CPU stops and the timing generator stops the clock supply to the peripheral circuits except the time base timer.

When the falling edge of the source clock selected at TBTCR<TBTCK> is detected, the IDLE0 mode is released, the timing generator starts the clock supply to all the peripheral circuits and the NOR-MAL1 mode is restored.

Note that the IDLE0 mode is activated and restarted, regardless of the setting of TBTCR<TBTEN>.

When the IDLE0 mode is activated with TBTCR<TBTEN> set at "1", the INTTBT interrupt latch is set after the NORMAL mode is restored.

When the IMF is "1" and the EF5 (the individual interrupt enable flag for the time base timer) is "1", the operation returns normal after the interrupt processing is completed.

2.3 System clock controller

TMP89FS62VUG

When the IMF is "0" or when the IMF is "1" and the EF5 (the individual interrupt enable flag for the time base timer) is "0", the operation is restarted by the instruction that follows the IDLE0 mode activation instruction.

2.3.5.2 Dual-clock mode

The gear clock (fcgck) and the low-frequency clock (fs) are used for the operation in the dual-clock mode.

The main system clock (fm) is generated from the gear clock (fcgck) in the NORMAL2 or IDLE2 mode, and generated from the clock that is a quarter of the low-frequency clock (fs) in the SLOW1/2 or SLEEP0/1 mode. Therefore, the machine cycle time is 1/fcgck [s] in the NORMAL2 or IDLE2 mode and is 4/fs [s] in the SLOW1/2 or SLEEP0/1 mode.

P02 (XTIN) and P03 (XTOUT) are used as the low-frequency clock oscillation circuit pins. (These pins cannot be used as I/O ports in the dual-clock mode.)

The operation of the TLCS-870/C1 Series becomes the single-clock mode after reset release. To operate it in the dual-clock mode, allow the low-frequency clock to oscillate at the beginning of the program.

(1) NORMAL2 mode

In this mode, the CPU core operates using the gear clock (fcgck), and the peripheral circuits operate using the gear clock (fcgck) or the clock that is a quarter of the low-frequency clock (fs).

(2) SLOW2 mode

In this mode, the CPU core and the peripheral circuits operate using the clock that is a quarter of the low-frequency clock (fs).

In the SLOW mode, some peripheral circuits become the same as the states when a reset is released. For operations of the peripheral circuits in the SLOW mode, refer to the section of each peripheral circuit.

Set SYSCR2<SYSCK> to switch the operation mode from NORMAL2 to SLOW2 or from SLOW2 to NORMAL2.

In the SLOW2 mode, outputs of the prescaler and stages 1 to 8 of the divider stop.

(3) SLOW1 mode

In this mode, the high-frequency clock oscillation circuit stops operation and the CPU core and the peripheral circuits operate using the clock that is a quarter of the low-frequency clock (fs).

This mode requires less power to operate the high-frequency clock oscillation circuit than in the SLOW2 mode.

In the SLOW mode, some peripheral circuits become the same as the states when a reset is released. For operations of the peripheral circuits in the SLOW mode, refer to the section of each peripheral circuit.

Set SYSCR2<XEN> to switch the operation between the SLOW1 and SLOW2 modes.

In the SLOW1 or SLEEP1 mode, outputs of the prescaler and stages 1 to 8 of the divider stop.



(4) IDLE2 mode

In this mode, the CPU and the watchdog timer stop and the peripheral circuits operate using the gear clock (fcgck) or the clock that is a quarter of the low-frequency clock (fs).

The IDLE2 mode can be activated and released in the same way as for the IDLE1 mode. The operation returns to the NORMAL2 mode after this mode is released.

(5) SLEEP1 mode

In this mode, the high-frequency clock oscillation circuit stops operation, the CPU and the watchdog timer stop, and the peripheral circuits operate using the clock that is a quarter of the low-frequency clock (fs).

In the SLEEP1 mode, some peripheral circuits become the same as the states when a reset is released. For operations of the peripheral circuits in the SLEEP1 mode, refer to the section of each peripheral circuit.

The SLEEP1 mode can be activated and released in the same way as for the IDLE1 mode. The operation returns to the SLOW1 mode after this mode is released.

In the SLOW1 or SLEEP1 mode, outputs of the prescaler and stages 1 to 8 of the divider stop.

(6) SLEEP0 mode

In this mode, the high-frequency clock oscillation circuit stops operation, the time base timer operates using the clock that is a quarter of the low-frequency clock (fs), and the core and the peripheral circuits stop.

In the SLEEP0 mode, the peripheral circuits stop in the states when the SLEEP0 mode is activated or become the same as the states when a reset is released. For operations of the peripheral circuits in the SLEEP0 mode, refer to the section of each peripheral circuit.

The SLEEP0 mode can be activated and released in the same way as for the IDLE0 mode. The operation returns to the SLOW1 mode after this mode is released.

In the SLEEP0 mode, the CPU stops and the timing generator stops the clock supply to the peripheral circuits except the time base timer.

2.3.5.3 STOP mode

In this mode, all the operations in the system, including the oscillation circuits, are stopped and the internal states in effect before the system was stopped are held with low power consumption.


In the STOP mode, the peripheral circuits stop in the states when the STOP mode is activated or become the same as the states when a reset is released. For operations of the peripheral circuits in the STOP mode, refer to the section of each peripheral circuit.

The STOP mode is activated by setting SYSCR1<STOP> to "1".

The STOP mode is released by the STOP mode release signals. After the warm-up time has elapsed, the operation returns to the mode that was active before the STOP mode, and the operation is restarted by the instruction that follows the STOP mode activation instruction.

2.3 System clock controller

2.3.5.4 Transition of operation modes

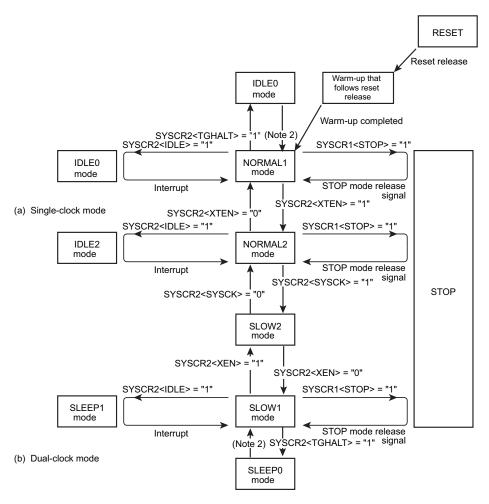

- Note 1: The NORMAL1 and NORMAL2 modes are generically called the NORMAL mode; the SLOW1 and SLOW2 modes are called the SLOW mode; the IDLE0, IDLE1 and IDLE2 modes are called the IDLE mode; and the SLEEP0 and SLEEP1 are called the SLEEP mode.
- Note 2: The mode is released by the falling edge of the source clock selected at TBTCR<TBTCK>.

Figure 2-7 Operation Mode Transition Diagram



Table 2	2 On	oration	Modos	and	Conditions
I able 2	-S OD	eralion	woues	anu	Conditions

		Oscillatio	on circuit		\\/	Time have	AD	Other pe-	Mashina	
Opera	tion mode	High-fre- quency	Low-fre- quency	CPU core	Watchdog timer	Time base timer	converter	ripheral cir- cuits	Machine cy- cle time	
	RESET			Reset	Reset	Reset	Reset	Reset		
	NORMAL1	Oscillation		Operate	Operate		Operate	Operate	1 / fogok [o]	
Single clock	IDLE1	Oscillation	Stop			Operate	Operate	Operate	1 / fcgck [s]	
	IDLE0			Stop	Stop		Stop	Ston		
	STOP	Stop				Stop	Stop	Stop	-	
	NORMAL2			Operate with the high frequency	Operate with the high / low frequen- cy		Operate		1 / fcgck [s]	
	IDLE2	Oscillation			Stop	Stop				
Dual clock	SLOW2		Oscillation	Operate with the low frequency	Operate with the low frequency	Operate	Stop	Operate		
	SLOW1			Operate with the low frequency	Operate with the low frequency				4/ fs [s]	
	SLEEP1	Stop								
	SLEEP0			Stop	Stop			Stop		
	STOP		Stop			Stop		эюр	-	

2.3.6 Operation Mode Control

2.3.6.1 STOP mode

The STOP mode is controlled by system control register 1 (SYSCR1) and the STOP mode release signals.

(1) Start the STOP mode

The STOP mode is started by setting SYSCR1<STOP> to "1". In the STOP mode, the following states are maintained:

- 1. Both the high-frequency and low-frequency clock oscillation circuits stop oscillation and all internal operations are stopped.
- 2. The data memory, the registers and the program status word are all held in the states in effect before STOP mode was started. The port output latch is determined by the value of SYSCR1<OUTEN>.
- 3. The prescaler and the divider of the timing generator are cleared to "0".
- 4. The program counter holds the address of the instruction 2 ahead of the instruction (e.g., [SET (SYSCR1).7]) which started the STOP mode.

(2) Release the STOP mode

The STOP mode is released by the following STOP mode release signals. It is also released by a reset by the RESET pin, a power-on reset and a reset by the voltage detection circuits. When a reset is released, the warm-up starts. After the warm-up is completed, the NORMAL1 mode becomes active.

2.3 System clock controller

TMP89FS62VUG

- 1. Release by the STOP pin
- 2. Release by key-on wakeup
- 3. Release by the voltage detection circuits

Note: During the STOP period (from the start of the STOP mode to the end of the warm-up), due to changes in the external interrupt pin signal, interrupt latches may be set to "1" and interrupts may be accepted immediately after the STOP mode is released. Before starting the STOP mode, therefore, disable interrupts. Also, before enabling interrupts after STOP mode is released, clear unnecessary interrupt latches.

1. Release by the $\overline{\text{STOP}}$ pin

Release the STOP mode by using the STOP pin.

The STOP mode release by the STOP pin includes the level-sensitive release mode and the edge-sensitive release mode, either of which can be selected at SYSCR1<RELM>.

The $\overline{\text{STOP}}$ pin is also used as the P11 port and the $\overline{\text{INT5}}$ (external interrupt input 5) pin.

- Level-sensitive release mode

The STOP mode is released by setting the $\overline{\text{STOP}}$ pin high.

Setting SYSCR1<RELM> to "1" selects the level-sensitive release mode.

This mode is used for the capacitor backup when the main power supply is cut off and the long term battery backup.

Even if an instruction for starting the STOP mode is executed while the \overline{STOP} pin input is high, the STOP mode does not start. Thus, to start the STOP mode in the level-sensitive release mode, it is necessary for the program to first confirm that the \overline{STOP} pin input is low.

This can be confirmed by testing the port by the software or using interrupts

Note: When the STOP mode is released, the warm-up counter source clock automatically changes to the clock that generated the main system clock when the STOP mode was started, regardless of WUCCR<WUCSEL>.

Example: Starting the STOP mode from NORMAL mode after testing P00 port.

(Warm-up time at release of the STOP mode is about 300µs at fc= 10MHz.)

	LD	(SYSCR1), 0x40	;Sets up the level-sensitive release mode
SSTOPH:	TEST	(P0PRD). 5	;Wait until STOP pin becomes L level.
	J	F, SSTOPH	
	LD	(WUCCR), 0x01	;WUCCR <wucdiv> = 00 (No division) (Note)</wucdiv>
	LD	(WUCDR),0x2F	;Sets the warm-up time
			;300µs / 6.4µs = 46.9 \rightarrow round up to 0x2F
	DI		;IMF = 0
	SET	(SYSCR1).7	;Starts the STOP mode


Note: When the STOP mode is released, the warm-up counter source clock automatically changes to the clock that generated the main system clock when the STOP mode was started, regardless of WUCCR<WUCSEL>.



Example: Starting the STOP mode from the SLOW mode with an INT5 interrupt (Warm-up time at release of the STOP mode is about 450ms at fs=32.768 kHz.)

PINT5:	TEST	(P0PRD).5	;To reject noise, the STOP mode does not start
	J	F, SINT5	;if the STOP pin input is high.
	LD	(SYSCR1), 0x40	;Sets up the level-sensitive release mode
	LD	(WUCCR), 0x03	;WUCCR <wucdiv> = 00 (No division) (Note)</wucdiv>
	LD	(WUCDR),0xE8	;Sets the warm-up time
			;450 ms/1.953 ms = 230.4 \rightarrow round up to 0xE8
	DI		;IMF = 0
	SET	(SYSCR1).7	;Starts the STOP mode
SINT5:	RETI		

Note: When the STOP mode is released, the warm-up counter source clock automatically changes to the clock that generated the main system clock when the STOP mode was started, regardless of WUCCR<WUCSEL>.

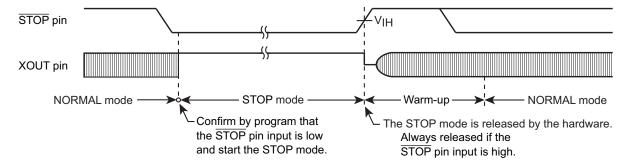

Note: Even if the STOP pin input returns to low after the warm-up starts, the STOP mode is not restarted.

Figure 2-8 Level-sensitive Release Mode (Example when the high-frequency clock oscillation circuit is selected)

- Edge-sensitive release mode

In this mode, the STOP mode is released at the rising edge of the \overline{STOP} pin input. Setting SYSCR1<RELM> to "0" selects the edge-sensitive release mode.

This is used in applications where a relatively short program is executed repeatedly at periodic intervals. This periodic signal (for example, a clock from a low-power consumption oscillator) is input to the \overline{STOP} pin. In the edge-sensitive release mode, the STOP mode is started even when the \overline{STOP} pin input is high

Example: Starting the STOP mode from the NORMAL mode

(Warm-up time at release of the STOP mode is about 200µs at fc=10 MHz.)

LD (WUCCR),0x01 ;WUCCR<WUCDIV> = 00 (No division) (Note)


LD (WUCDR),0x20 ;Sets the warm-up time $;200\mu s / 6.4\mu s = 31.25 \rightarrow round up to 0x20$ DI ;IMF = 0

LD (SYSCR1), 0x80 :Starts the STOP mode with the edge-sensitive release mode selected

Note: When the STOP mode is released, the warm-up counter source clock automatically changes to the clock that generated the main system clock when the STOP mode was started, regardless of WUCCR<WUCSEL>.

Page 29 2019/08/01

2.3 System clock controller

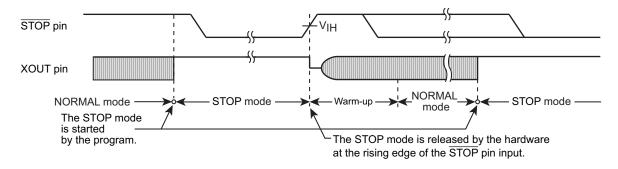

Note: If the rising edge is input to the STOP pin within 1 machine cycle after SYSCR1<STOP> is set to "1", the STOP mode will not be released.

Figure 2-9 Edge-sensitive Release Mode (Example when the high-frequency clock oscillation circuit is selected)

2. Release by the key-on wakeup

The STOP mode is released by inputting the prescribed level to the key-on wakeup pin.

The level to release the STOP mode can be selected from "H" and "L".

For release by the key-on wakeup, refer to section "Key-on Wakeup".

Note: If the key-on wakeup pin input becomes the opposite level to the release level after the warm-up starts, the STOP mode is not restarted.

3. Release by the voltage detection circuits

The STOP mode is released by the supply voltage detection by the voltage detection circuits.

If the voltage detection operation mode of the voltage detection circuits is set to "Generates a voltage detection reset signal", the STOP mode is released and a reset is applied as soon as the supply voltage becomes lower than the detection voltage.

When the supply voltage becomes equal to or higher than the detection voltage of the voltage detection circuits, the reset is released and the warm-up starts. After the warm-up is completed, the NORMAL1 mode becomes active.

For details, refer to the section of the voltage detection circuits.

Note: If the supply voltage becomes equal to or higher than the detection voltage within 1 machine cycle after SYSCR1<STOP> is set to "1", the STOP mode will not be released.

(3) STOP mode release operation

The STOP mode is released in the following sequence:

- 1. Oscillation starts. For the oscillation start operation in each mode, refer to "Table 2-4 Oscillation Start Operation at Release of the STOP Mode".
- 2. Warm-up is executed to secure the time required to stabilize oscillation. The internal operations remain stopped during warm-up. The warm-up time is set by the warm-up counter, depending on the oscillator characteristics.
- 3. After the warm-up time has elapsed, the normal operation is restarted by the instruction that follows the STOP mode start instruction. At this time, the prescaler and the divider of the timing generator are cleared to "0".



Note: When the STOP mode is released with a low hold voltage, the following cautions must be observed

The supply voltage must be at the operating voltage level before releasing the STOP mode. The RESET pin input must also be "H" level, rising together with the supply voltage. In this case, if an external time constant circuit has been connected, the RESET pin input voltage will increase at a slower pace than the power supply voltage. At this time, there is a danger that a reset may occur if the input voltage level of the RESET pin drops below the non-inverting high-level input voltage (Hysteresis input).

Table 2-4 Oscillation Start Operation at Release of the STOP Mode

Operation mode before the STOP mode is started		High-frequency Low-frequency clock clock		Oscillation start operation after release	
Single-clock mode	NORMAL1	High-frequency clock oscillation cir- cuit	-	The high-frequency clock oscillation circuit starts oscillation. The low-frequency clock oscillation circuit stops oscillation.	
Dural alaska arada	NORMAL2 High-frequency clock oscillation circuit		Low-frequency clock oscillation circuit	The high-frequency clock oscillation circuit starts oscillation. The low-frequency clock oscillation circuit starts oscillation.	
Dual-clock mode	SLOW1	-	Low-frequency clock oscillation cir- cuit	The high-frequency clock oscillation circuit stops oscillation. The low-frequency clock oscillation circuit starts oscillation.	

Note: When the operation returns to the NORMAL2 mode, fc is input to the frequency division circuit of the warm-up counter.

2.3.6.2 IDLE1/2 and SLEEP1 modes

The IDLE1/2 and SLEEP1 modes are controlled by the system control register 2 (SYSCR2) and maskable interrupts. The following states are maintained during these modes.

- 1. The CPU and the watchdog timer stop their operations. The peripheral circuits continue to operate
- 2. The data memory, the registers, the program status word and the port output latches are all held in the status in effect before IDLE1/2 or SLEEP1 mode was started.
- 3. The program counter holds the address of the instruction 2 ahead of the instruction which starts the IDLE1/2 or SLEEP1 mode.

Page 31 2019/08/01

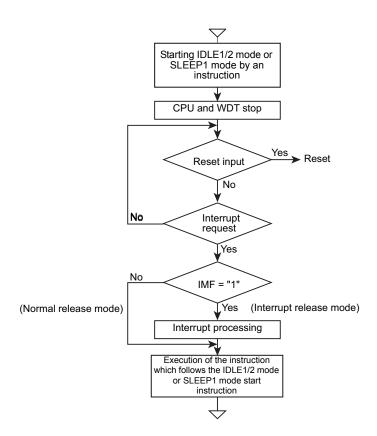


Figure 2-10 IDLE1/2 and SLEEP 1 Modes

(1) Start the IDLE1/2 and SLEEP1 modes

After the interrupt master enable flag (IMF) is set to "0", set the individual interrupt enable flag (EF) to "1", which releases IDLE1/2 and SLEEP1 modes.

To start the IDLE1/2 or SLEEP1 mode, set SYSCR2<IDLE> to "1".

If the release condition is satisfied when it is attempted to start the IDLE1/2 or SLEEP1 mode, SYSCR2<IDLE> remains cleared and the IDLE1/2 or SLEEP1 mode will not be started.

- Note 1: When a watchdog timer interrupt is generated immediately before the IDLE1/2 or SLEEP1 mode is started, the watchdog timer interrupt will be processed but the IDLE1/2 or SLEEP1 mode will not be started.
- Note 2: Before starting the IDLE1/2 or SLEEP1 mode, enable the interrupt request signals to be generated to release the IDLE1/2 or SLEEP1 mode and set the individual interrupt enable flag.

(2) Release the IDLE1/2 and SLEEP1 modes

The IDLE1/2 and SLEEP1 modes include a normal release mode and an interrupt release mode. These modes are selected at the interrupt master enable flag (IMF). After releasing IDLE1/2 or SLEEP1 mode, SYSCR2<IDLE> is automatically cleared to "0" and the operation mode is returned to the mode preceding the IDLE1/2 or SLEEP1 mode.

The IDLE1/2 and SLEEP1 modes are also released by a reset by the RESET pin, a power-on reset and a reset by the voltage detection circuits. After releasing the reset, the warm-up starts. After the warm-up is completed, the NORMAL1 mode becomes active.

• Normal release mode (IMF = "0")

The IDLE1/2 or SLEEP1 mode is released when the interrupt latch enabled by the individual interrupt enable flag (EF) is "1". The operation is restarted by the instruction that follows the IDLE1/2 or SLEEP1 mode start instruction. Normally, the interrupt latch (IL) of the interrupt source used for releasing must be cleared to "0" by load instructions.

• Interrupt release mode (IMF = "1")

The IDLE1/2 or SLEEP1 mode is released when the interrupt latch enabled by the individual interrupt enable flag (EF) is "1". After the interrupt is processed, the operation is restarted by the instruction that follows the IDLE1/2 or SLEEP1 mode start instruction.

2.3.6.3 IDLE0 and SLEEP0 modes

The IDLE0 and SLEEP0 modes are controlled by the system control register 2 (SYSCR2) and the time base timer control register (TBTCR). The following states are maintained during the IDLE0 and SLEEP0 modes:

- The timing generator stops the clock supply to the peripheral circuits except the time base timer.
- The data memory, the registers, the program status word and the port output latches are all held in the states in effect before the IDLE0 or SLEEP0 mode was started.
- The program counter holds the address of the instruction 2 ahead of the instruction which starts the IDLE0 or SLEEP0 mode.

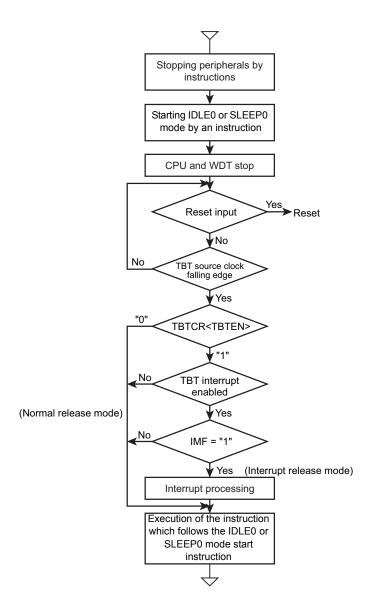


Figure 2-11 IDLE0 and SLEEP0 Modes

· Start the IDLE0 and SLEEP0 modes

Stop (disable) the peripherals such as a timer counter.

To start the IDLE0 or SLEEP0 mode, set SYSCR2<TGHALT> to "1".

· Release the IDLE0 and SLEEP0 modes

The IDLE0 and SLEEP0 modes include a normal release mode and an interrupt release mode. These modes are selected at the interrupt master enable flag (IMF), the individual interrupt enable flag (EF5) for the time base timer and TBTCR<TBTEN>. After releasing the IDLE0 or SLEEP0 mode, SYSCR2<TGHALT> is automatically cleared to "0" and the operation mode is returned to the mode preceding the IDLE0 or SLEEP0 mode. If TBTCR<TBTEN> has been set at "1", the INTTBT interrupt latch is set.

The IDLE0 and SLEEP0 modes are also released by a reset by the RESET pin, a power-on reset and a reset by the voltage detection circuits. When a reset is released, the warm-up starts. After the warm-up is completed, the NORMAL1 mode becomes active.



(1) Normal release mode (IMF, EF5, TBTCR<TBTEN> = "0")

The IDLE0 or SLEEP0 mode is released when the falling edge of the source clock selected at TBTCR<TBTCK> is detected. After the IDLE0 or SLEEP0 mode is released, the operation is restarted by the instruction that follows the IDLE0 or SLEEP0 mode start instruction.

When TBTCR<TBTEN> is "1", the time base timer interrupt latch is set.

(2) Interrupt release mode (IMF, EF5, TBTCR<TBTEN> = "1")

The IDLE0 or SLEEP0 mode is released when the falling edge of the source clock selected at TBTCR<TBTCK> is detected. After the release, the INTTBT interrupt processing is started.

- Note 1: The IDLE0 or SLEEP0 mode is released to the NORMAL1 or SLOW1 mode by the asynchronous internal clock selected at TBTCR<TBTCK>. Therefore, the period from the start to the release of the mode may be shorter than the time specified at TBTCR<TBTCK>.
- Note 2: When a watchdog timer interrupt is generated immediately before the IDLE0 or SLEEP0 mode is started, the watchdog timer interrupt will be processed but the IDLE0 or SLEEP0 mode will not be started

2.3.6.4 SLOW mode

The SLOW mode is controlled by system control register 2 (SYSCR2).

(1) Switching from the NORMAL2 mode to the SLOW1 mode

Set SYSCR2<SYSCK> to "1".

When a maximum of 2/fcgck + 10/fs [s] has elapsed since SYSCR2<SYSCK> is set to "1", the main system clock (fm) is switched to fs/4.

After switching, wait for 2 machine cycles or longer, and then clear SYSCR2<XEN> to "0" to turn off the high-frequency clock oscillator.

If the oscillation of the low-frequency clock (fs) is unstable, confirm the stable oscillation at the warm-up counter before implementing the procedure described above.

- Note 1: Be sure to follow this procedure to switch the operation from the NORMAL2 mode to the SLOW1 mode.
- Note 2: It is also possible to allow the basic clock for the high-frequency clock to oscillate continuously to return to NORMAL2 mode. However, be sure to turn off the oscillation of the basic clock for the high-frequency clock when the STOP mode is started from the SLOW mode.
- Note 3: After switching SYSCR2<SYSCK>, be sure to wait for 2 machine cycles or longer before clearing SYSCR2<XEN> to "0". Clearing it within 2 machine cycles causes a system clock reset.
- Note 4: When the main system clock (fm) is switched, the gear clock (fcgck) is synchronized with the clock that is a quarter of the basic clock (fs) for the low-frequency clock. For the synchronization, fm is stopped for a period of 10/fs or shorter.

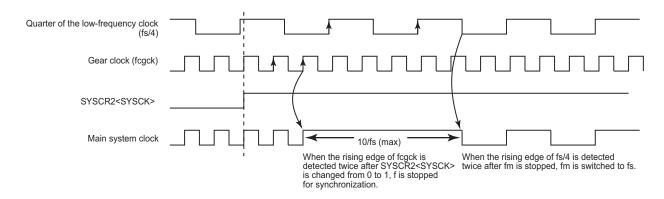


Figure 2-12 Switching of the Main System Clock (fm) (Switching from fcgck to fs/4)

Example 1: Switching from the NORMAL2 mode to the SLOW1 mode (when fc is used as the basic clock for the high-frequency clock)

```
SET (SYSCR2).4 ;SYSCR2<SYSCK> = 1
;(Switches the main system clock to the basic clock for the ;low-frequency clock for the SLOW2 mode)

NOP ;Waits for 2 machine cycles

NOP

CLR (SYSCR2).6 ;SYSCR2<XEN> = 0
;(Turns off the high-frequency clock oscillation circuit)
```

Example 2: Switching to the SLOW1 mode after the stable oscillation of the low-frequency clock oscillation circuit is confirmed at the warm-up counter (fs=32.768kHz, warm-up time = about 100 ms)

```
; #### Initialize routine ####
                  SET
                            (P0FC).2
                                                                    ;P0FC2 = 1 (Uses P02/03 as oscillators)
                            (WUCCR), 0x02
                                                                    ;WUCCR<WUCDIV> = 00 (No division)
                 LD
                                                                    ;WUCCR<WUCSEL> = 1 (Selects fs as the source clock)
                 LD
                            (WUCDR), 0x33
                                                                    ;Sets the warm-up time
                                                                    ;(Determines the time depending on the oscillator characteristics)
                                                                    ;100 ms/1.95 ms = 51.2 \rightarrow round up to 0x33
                  SET
                            (EIRL).4
                                                                    ;Enables INTWUC interrupts
                  SET
                            (SYSCR2).5
                                                                    :SYSCR2<XTEN> = 1
                                                                    ;(Starts the low-frequency clock oscillation and starts the warm-up
                                                                    ;counter)
                  ; #### Interrupt service routine of warm-up counter interrupts ####
PINTWUC:
                  SET
                            (SYSCR2).4
                                                                    ;SYSCR2<SYSCK> = 1
                                                                     ;(Switches the main system clock to the low-frequency clock)
                  NOP
                                                                    ;Waits for 2 machine cycles
                  NOP
                  CLR
                            (SYSCR2).6
                                                                    ;SYSCR2<XEN> = 0
                                                                     (Turns off the high-frequency clock oscillation circuit)
                  RETI
VINTWUC:
                            PINTWUC
                  DW
                                                                    :INTWUC vector table
```



(2) Switching from the SLOW1 mode to the NORMAL1 mode

Set SYSCR2<XEN> to "1" to enable the high-frequency clock (fc) to oscillate. Confirm at the warm-up counter that the oscillation of the basic clock for the high-frequency clock has stabilized, and then clear SYSCR2<SYSCK> to "0".

When a maximum of 8/fs + 2.5/fcgck [s] has elapsed since SYSCR2<SYSCK> is cleared to "0", the main system clock (fm) is switched to fcgck.

After switching, wait for 2 machine cycles or longer, and then clear SYSCR2<XTEN> to "0" to turn off the low-frequency clock oscillator.

The SLOW mode is also released by a reset by the \overline{RESET} pin, a power-on reset and a reset by the voltage detection circuits. When a reset is released, the warm-up starts. After the warm-up is completed, the NORMAL1 mode becomes active.

- Note 1: Be sure to follow this procedure to switch the operation from the SLOW1 mode to the NOR-MAL1 mode.
- Note 2: After switching SYSCR2<SYSCK>, be sure to wait for 2 machine cycles or longer before clearing SYSCR2<XTEN> to "0". Clearing it within 2 machine cycles causes a system clock reset.
- Note 3: When the main system clock (fm) is switched, the gear clock (fcgck) is synchronized with the clock that is a quarter of the basic clock (fs) for the low-frequency clock. For the synchronization, fm is stopped for a period of 2.5/fcgck [s] or shorter.
- Note 4: When P0FC0 is "0", setting SYSCR2<XEN> to "1" causes a system clock reset.
- Note 5: When SYSCR2<XEN> is set at "1", writing "1" to SYSCR2<XEN> does not cause the warm-up counter to start counting the source clock.

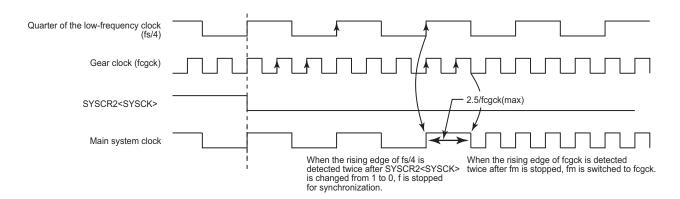


Figure 2-13 Switching the Main System Clock (fm) (Switching from fs/4 to fcgck)

Example: Switching from the SLOW1 mode to the NORMAL1 mode after the stability of the high-frequency clock oscillation circuit is confirmed at the warm-up counter (fc = 10 MHz, warm-up time = 4.0 ms)

; #### Ini	tialize routine ####	
SET	(P0FC).2	;P0FC2 = 1 (Uses P02/03 as oscillators)
1		
1		
LD	(WUCCR), 0x09	;WUCCR <wucdiv> = 10 (Divided by 2)</wucdiv>
		;WUCCR <wucsel> = 0 (Selects fc as the source clock)</wucsel>
LD	(WUCDR), 0x9D	;Sets the warm-up time
		;(Determine the time depending on the frequency and the oscillator
		;characteristics)
		;4ms / 25.6us = 156.25 \rightarrow round up to 0x9D

Page 37 2019/08/01

2.3 System clock controller

TMP89FS62VUG

SET (EIRL). 4 ;Enables INTWUC interrupts SET (SYSCR2) .6 ;SYSCR2<XEN> = 1 ;(Starts the oscillation of the high-frequency clock oscillation circuit) ; #### Interrupt service routine of warm-up counter interrupts #### PINTWUC: (SYSCR2). 4 ;SYSCR2 < SYSCK > = 0CLR ;(Switches the main system clock to the gear clock) NOP ;Waits for 2 machine cycles NOP ;SYSCR2<XTEN> = 0 CLR (SYSCR2). 5 ;(Turns off the low-frequency clock oscillation circuit) RETI VINTWUC: DW **PINTWUC** ;INTWUC vector table



2.4 Reset Control Circuit

The reset circuit controls the external and internal factor resets and initializes the system.

2.4.1 Configuration

The reset control circuit consists of the following reset signal generation circuits:

- 1. External reset input (external factor)
- 2. Power-on reset (internal factor)
- 3. Voltage detection reset 1 (internal factor)
- 4. Watchdog timer reset (internal factor)
- 5. System clock reset (internal factor)
- 6. Trimming data reset (internal factor)
- 7. Flash standby reset (internal factor)

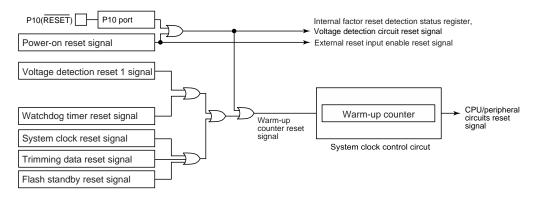


Figure 2-14 Reset Control Circuit

2.4.2 Control

The reset control circuit is controlled by system control register 3 (SYSCR3), system control register 4 (SYSCR4), system control status register (SYSSR4) and the internal factor reset detection status register (IRSTSR).

Page 39 2019/08/01

2.4 Reset Control Circuit

TMP89FS62VUG

System control register 3

SYSCR3		7	6	5	4	3	2	1	0
(0x0FDE)	Bit Symbol	-	-	-	-	-	(RVCTR)	(RAREA)	RSTDIS
	Read/Write	R	R	R	R	R	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

RSTDIS	External reset input enable register	0 :	Enables the external reset input.
KOTDIO	External reset input enable register	1:	Disables the external reset input.

- Note 1: The enabled SYSCR3<RSTDIS> is initialized by a power-on reset only, and cannot be initialized by an external reset input or internal factor reset. The value written in SYSCR3 is reset by a power-on reset, external reset input or internal factor reset.
- Note 2: The value of SYSCR3<RSTDIS> is invalid until 0xB2 is written into SYSCR4.
- Note 3: After SYSCR3<RSTDIS> is modified, SYSCR4 should be written 0xB2 (Enable code for SYSCR3<RSTDIS>) in NOR-MAL1 mode when fcgck is fc/4 (CGCR<FCGCKSEL>=00). Otherwise, SYSCR3<RSTDIS> may be enabled at unexpected timing.
- Note 4: Bits 7 to 3 of SYSCR3 are read as "0".

System control register 4

SYSCR4		7	6	5	4	3	2	1	0
(0x0FDF)	Bit Symbol				SYS	CR4			
	Read/Write				V	N			
	After reset	0	0	0	0	0	0	0	0

	SYSCR4 Writes the SYSCR3 data control code.	0xB2 :	Enables the contents of SYSCR3 <rstdis></rstdis>	
evecp4		Writes the SYSCR3 data control	0xD4:	Enables the contents of SYSCR3 <rarea> and SYSCR3 <rvctr></rvctr></rarea>
515CR4		0x71 :	Enables the contents of IRSTSR <fclr></fclr>	
		Others :	Invalid	

- Note 1: SYSCR4 is a write-only register, and must not be accessed by using a read-modify-write instruction, such as a bit operation.
- Note 2: After SYSCR3<RSTDIS> is modified, SYSCR4 should be written 0xB2 (Enable code for SYSCR3<RSTDIS>) in NOR-MAL mode when fcgck is fc/4 (CGCR<FCGCKSEL>=00). Otherwise, SYSCR3<RSTDIS> may be enabled at unexpected timing.
- Note 3: After IRSTSR<FCLR> is modified, SYSCR4 should be written 0x71 (Enable code for IRSTSR<FCLR> in NORMAL mode when fcgck is fc/4 (CGCR<FCGCKSEL>=00). Otherwise, IRSTSR<FCLR> may be enabled at unexpected timing.

System control status register 4

SYSSR4		7	6	5	4	3	2	1	0
(0x0FDF)	Bit Symbol	-	-	-	-	-	(RVCTRS)	(RAREAS)	RSTDISS
	Read/Write	R	R	R	R	R	R	R	R
	After reset	0	0	0	0	0	0	0	0

I	DSTDISS External react input anable status	0:	The enabled SYSCR3 <rstdis> data is "0".</rstdis>	
	K91DI99	TDISS External reset input enable status	1:	The enabled SYSCR3 <rstdis> data is "1".</rstdis>

Note 1: The enabled SYSCR3<RSTDIS> is initialized by a power-on reset only, and cannot be initialized by any other reset signals. The value written in SYSCR3 is reset by a power-on reset and other reset signals.

Note 2: Bits 7 to 3 of SYSCR4 are read as "0".



Internal factor reset detection status register

IRSTSR		7	6	5	4	3	2	1	0
(0x0FCC)	Bit Symbol	FCLR	FLSRF	TRMDS	TRMRF	-	LVD1RF	SYSRF	WDTRF
	Read/Write	W	R	R	R	R	R	R	R
	After reset	0	0	0	0	0	0	0	0

FCLR	Flag initialization control	0 : 1 :	- Clears the internal factor reset flag to "0".
FLSRF	Flash standby reset detection flag	0 : 1 :	- Detects the flash standby reset.
TRMDS	Trimming data status	0 : 1 :	- Detect state of abnormal trimming data
TRMRF	Trimming data reset detection flag		- Detects the trimming data reset.
LVD1RF	Voltage detection reset 1 detection flag	0 : 1 :	- Detects the voltage detection 1 reset.
SYSRF	System clock reset detection flag	0 : 1 :	- Detects the system clock reset.
WDTRF	Watchdog timer reset detection flag	0 : 1 :	- Detects the watchdog timer reset.

- Note 1: Internal reset factor flag (IRSTSR<FLSRF, TRMDS, TRMRF, LVD1RF, SYSRF, WDTRF>) is initialized only by a power-on reset, an external reset input or IRSTSR <FCLR>. It is not initialized by an internal factor reset.
- Note 2: Care must be taken in system designing since the IRSTSR may not fulfill its functions due to disturbing noise and other effects.
- Note 3: If SYSCR4 is set to 0x71 after IRSTSR<FCLR> is set to "1", internal factor reset flag is cleared to "0" and IRSTSR<FCLR> is automatically cleared to "0".
- Note 4: After IRSTSR<FCLR> is modified, SYSCR4 should be written 0x71 (Enable code for IRSTSR<FCLR> in NORMAL mode when fcgck is fc/4 (CGCR<FCGCKSEL>=00). Otherwise, IRSTSR<FCLR> may be enabled at unexpected timing.
- Note 5: Bit 7 and bit3 of IRSTSR are read as "0".

2.4.3 Functions

The power-on reset, external reset input and internal factor reset signals are input to the warm-up circuit of the clock generator.

During reset, the warm-up counter circuit is reset, and the CPU and the peripheral circuits are reset.

After reset is released, the warm-up counter starts counting the high frequency clock (fc), and executes the warm-up operation that follows reset release.

During the warm-up operation that follows reset release, the trimming data is loaded from the non-volatile exclusive use memory for adjustment of the ladder resistor that generates the comparison voltage for the power-on reset and the voltage detection circuits.

When the warm-up operation that follows reset release is finished, the CPU starts execution of the program from the reset vector address stored in addresses 0xFFFE to 0xFFFF.

When a reset signal is input during the warm-up operation that follows reset release, the warm-up counter circuit is reset.

The reset operation is common to the power-on reset, external reset input and internal factor resets, except for the initialization of some special function registers and the initialization of the voltage detection circuits.

When a reset is applied, the peripheral circuits become the states as shown in Table 2-5.

2.4 Reset Control Circuit

TMP89FS62VUG

Table 2-5 Initialization of Built-in Hardware by Reset Operation and Its Status after Release

Built-in hardware	During reset	During the warm-up opera- tion that follows reset re- lease	Immediately after the warm-up operation that follows reset release
Program counter (PC)	MCU mode: 0xFFFE Serial PROM mode: 0x1FFE	MCU mode: 0xFFFE Serial PROM mode: 0x1FFE	MCU mode: 0xFFFE Serial PROM mode: 0x1FFE
Stack pointer (SP)	0x00FF	0x00FF	0x00FF
RAM	Indeterminate	Indeterminate	Indeterminate
General-purpose registers (W, A, B, C, D, E, H, L, IX and IY)	Indeterminate	Indeterminate	Indeterminate
Register bank selector (RBS)	0	0	0
Jump status flag (JF)	Indeterminate	Indeterminate	Indeterminate
Zero flag (ZF)	Indeterminate	Indeterminate	Indeterminate
Carry flag (CF)	Indeterminate	Indeterminate	Indeterminate
Half carry flag (HF)	Indeterminate	Indeterminate	Indeterminate
Sign flag (SF)	Indeterminate	Indeterminate	Indeterminate
Overflow flag (VF)	Indeterminate	Indeterminate	Indeterminate
Interrupt master enable flag (IMF)	0	0	0
Individual interrupt enable flag (EF)	0	0	0
Interrupt latch (IL)	0	0	0
High-frequency clock oscillation circuit	Oscillation enabled	Oscillation enabled	Oscillation enabled
Low-frequency clock oscillation circuit	Oscillation disabled	Oscillation disabled	Oscillation disabled
Warm-up counter	Reset	Start	Stop
Timing generator prescaler and divider	0	0	0
Watchdog timer	Disabled	Disabled	Enabled
Voltage detection circuit	Disabled or enabled	Disabled or enabled	Disabled or enabled
I/O port pin status	HiZ	HiZ	HiZ
Special function register	Refer to the SFR map.	Refer to the SFR map.	Refer to the SFR map.

Note: The voltage detection circuits are disabled by an external reset input or power-on reset only.

2.4.4 Reset Signal Generating Factors

Reset signals are generated by each factor as follows:

2.4.4.1 Power-on reset

The power-on reset is an internal reset that occurs when power is turned on.

During power-up, a power-on reset signal is generated while the supply voltage is below the power-on reset release voltage. When the supply voltage rises above the power-on reset release voltage, the power-on reset signal is released.

During power-down, a power-on reset signal is generated when the supply voltage falls below the power-on reset detection voltage.

Refer to "Power-on Reset circuit".

2.4.4.2 External reset input (RESET pin input)

This is an external reset that is generated by the \overline{RESET} pin input. Port P10 is also used as the \overline{RESET} pin, and it is configured as the \overline{RESET} pin at power-up.

· During power-up

- When the supply voltage rises rapidly

When the power supply rise time (t_{VDD}) is shorter than 5 [ms] with enough margin, the reset can be released by a power-on reset or an external reset (\overline{RESET} pin input).

The power-on reset logic and external reset (\overline{RESET} pin input) logic are ORed. This means that the TMP89FS62V is reset when either or both of these reset sources are asserted.

Therefore, the reset time is determined by the reset source with a longer reset period. If the \overline{RESET} pin level changes from Low to High before the supply voltage rises above the power-on-reset release voltage (V_{PROFF}) (or if the \overline{RESET} pin level is High from the beginning), the reset time depends on the power-on reset. If the RESET pin level changes from Low to High after the supply voltage rises above V_{PROFF} , the reset time depends on the external reset.


In the former case, a warm-up period begins when the power-on reset signal is released. In the latter case, a warm-up period begins when the \overline{RESET} pin level becomes High. Upon completion of the warm-up period, the CPU and peripheral circuits start operating (Figure 2-15).

- When the supply voltage rises slowly


When the power supply rise time (t_{VDD}) is longer than 5 [ms], the reset must be released by using the \overline{RESET} pin. In this case, hold the \overline{RESET} pin Low until the supply voltage rises to the operating voltage range and oscillation is stabilized. When this state is achieved, wait at least 5 [µs] and then pull the \overline{RESET} pin High. Changing the \overline{RESET} pin level to High starts a warm-up period. Upon completion of the warm-up period, the CPU and peripheral circuits start operating (Figure 2-15).

2.4 Reset Control Circuit


TMP89FS62VUG

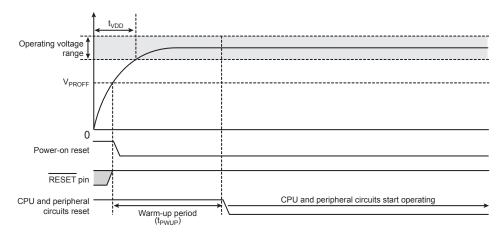

When the supply voltage rises rapidly (When the reset time depends on power-on reset)

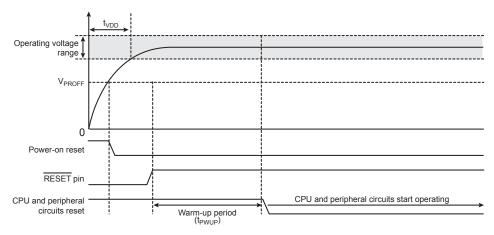

When the supply voltage rises rapidly (When the reset time depends on external reset)

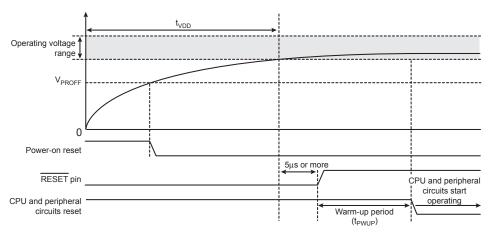

When the supply voltage rises slowly

Figure 2-15 External Reset Input (During Power-Up)



· When the supply voltage is within the operating voltage range

When the supply voltage is within the operating voltage range and stable oscillation is achieved, holding the RESET pin Low for 5 [µs] or longer generates a reset. Then, changing the RESET pin level to High starts a warm-up period. Upon completion of the warm-up period, the CPU and peripheral circuits start operating (Figure 2-16).

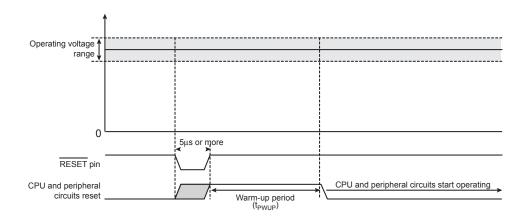


Figure 2-16 External Reset Input (When the Power Supply Is Stable)

2.4.4.3 Voltage detection reset

The voltage detection reset is an internal factor reset that occurs when it is detected that the supply voltage has reached a predetermined detection voltage.

Refer to "Voltage Detection Circuit".

2.4.4.4 Watchdog timer reset

The watchdog timer reset is an internal factor reset that occurs when an overflow of the watchdog timer is detected.

Refer to "Watchdog Timer".

2.4.4.5 System clock reset

The system clock reset is an internal factor reset that occurs when it is detected that the oscillation enable register is set to a combination that puts the CPU into deadlock.

Refer to "Clock Control Circuit".

2.4.4.6 Trimming data reset

The trimming data reset is an internal factor reset that occurs when the trimming data latched in the internal circuit is broken down during operation due to noise or other factors.

The trimming data is a data bit provided for adjustment of the ladder resistor that generates the comparison voltage for the power-on reset and the voltage detection circuits.

This bit is loaded from the non-volatile exclusive use memory during the warm-up time that follows reset release (tPWUP) and latched into the internal circuit.

If the trimming data loaded from the non-volatile exclusive use memory during the warm-up operation that follows reset release is abnormal, IRSTSR<TRMDS> is set to "1".

2.4 Reset Control Circuit

TMP89FS62VUG

When IRSTSR<TRMDS> is read as "1" in the initialize routine immediately after reset release, the trimming data need to be reloaded by generating an internal factor reset, such as a system clock reset, and activating the warm-up operation again.

If IRSTSR<TRMDS> is still set to "1" after repeated reading, the detection voltage of the voltage detection circuit and power-on reset circuit does not satisfy the characteristic specified in the electric characteristics. Design the system so that the system will not be damaged in such a case.

2.4.4.7 Flash standby reset

The flash standby reset is an internal factor reset generated by the reading or writing of data of the flash memory while it is on standby.

Refer to "Flash Memory".

2.4.4.8 Internal factor reset detection status register

By reading the internal factor reset detection status register IRSTSR after the release of an internal factor reset, except the power-on reset, the factor which causes a reset can be detected.

The internal factor reset detection status register is initialized by an external reset input or power-on reset.

Set IRSTSR<FCLR> to "1" and write 0x71 to SYSCR4. This enables IRSTSR<FCLR> and the internal factor reset detection status register is clear to "0". IRSTSR<FCLR> is cleared to "0" automatically after initializing the internal factor reset detection status register.

- Note 1: Care must be taken in system designing since the IRSTSR may not fulfill its functions due to disturbing noise and other effects.
- Note 2: After IRSTSR<FCLR> is modified, SYSCR4 should be written 0x71 (Enable code for IRSTSR<FCLR> in NORMAL mode when fcgck is fc/4 (CGCR<FCGCKSEL>=00). Otherwise, IRSTSR<FCLR> may be enabled at unexpected timing.

2.4.4.9 How to use the external reset input pin as a port

To use the external reset input pin as a port, keep the external reset input pin at the "H" level until the power is turned on and the warm-up operation that follows reset release is finished.

After the warm-up operation that follows reset release is finished, set P1PU0 to "1" and P1CR0 to "0", and connect a pull-up resistor for a port. Then set SYSCR3<RSTDIS> to "1" and write 0xB2 to SYSCR4. This disables the external reset function and makes the external reset input pin usable as a normal port.

To use the pin as an external reset pin when it is used as a port, set P1PU0 to "1" and P1CR0 to "0" and connect the pull-up resistor to put the pin to the input mode. Then clear SYSCR3<RSTDIS> to "0" and write 0xB2 to SYSCR4. This enables the external reset function and makes the pin usable as the external reset input pin.

- Note 1: If you switch the external reset input pin to a port or switch the pin used as a port to the external reset input pin, do it when the pin is stabilized at the "H" level. Switching the pin function when the "L" level is input may cause a reset.
- Note 2: If the external reset input is used as a port, the statement which clears SYSCR3<RSTDIS> to "0" is not written in a program. By the abnormal execution of program, the external reset input set as a port may be changed as the external reset input at unexpected timing.
- Note 3: After SYSCR3<RSTDIS> is modified, SYSCR4 should be written 0xB2 (Enable code for SYSCR3<RSTDIS>) in NORMAL1 mode when fcgck is fc/4 (CGCR<FCGCKSEL>=00). Otherwise, SYSCR3<RSTDIS> may be enabled at unexpected timing.

3. Interrupt Control Circuit

The TMP89FS62V has a total of 24 interrupt sources excluding reset. Interrupts can be nested with priorities. Three of the internal interrupt sources are non-maskable while the rest are maskable.

Interrupt sources are provided with interrupt latches (IL), which hold interrupt requests, and have independent vector addresses. When a request for an interrupt is generated, its interrupt latch is set to "1", which requests the CPU to accept the interrupt. Acceptance of interrupts is enabled or disabled by software using the interrupt master enable flag (IMF) and individual enable flag (EF) for each interrupt source. If multiple maskable interrupts are generated simultaneously, the interrupts are accepted in order of descending priority. The priorities are determined by the interrupt priority change control register (ILPRS1-ILPRS6) as Levels and determined by the hardware as the basic priorities.

However, there are no prioritized interrupt sources among non-maskable interrupts.

	laterant course	Cashla andikina	Interrupt	Vector (MCU	Basic priori-	
	Interrupt sources	Enable condition	latch	RVCTR=0 enabled	RVCTR=1 enabled	ty
Internal/Ex- ternal	(Reset)	Non-maskable	-	0xFFFE	-	1
Internal	INTSWI	Non-maskable	-	0xFFFC	0x01FC	2
Internal	INTUNDEF	Non-maskable	-	0xFFFC	0x01FC	2
Internal	INTWDT	Non-maskable	ILL <il3></il3>	0xFFF8	0x01F8	2
Internal	INTWUC	IMF AND EIRL <ef4> = 1</ef4>	ILL <il4></il4>	0xFFF6	0x01F6	5
Internal	INTTBT	IMF AND EIRL <ef5> = 1</ef5>	ILL <il5></il5>	0xFFF4	0x01F4	6
Internal	INTRXD0 / INTSIO0	IMF AND EIRL <ef6> = 1</ef6>	ILL <il6></il6>	0xFFF2	0x01F2	7
Internal	INTTXD0	IMF AND EIRL <ef7> = 1</ef7>	ILL <il7></il7>	0xFFF0	0x01F0	8
External	INT5	IMF AND EIRH <ef8> = 1</ef8>	ILH <il8></il8>	0xFFEE	0x01EE	9
Internal	INTVLTD	IMF AND EIRH <ef9> = 1</ef9>	ILH <il9></il9>	0xFFEC	0x01EC	10
Internal	INTADC	IMF AND EIRH <ef10> = 1</ef10>	ILH <il10></il10>	0xFFEA	0x01EA	11
Internal	INTRTC	IMF AND EIRH <ef11> = 1</ef11>	ILH <il11></il11>	0xFFE8	0x01E8	12
Internal	INTTC00	IMF AND EIRH <ef12> = 1</ef12>	ILH <il12></il12>	0xFFE6	0x01E6	13
Internal	INTTC01	IMF AND EIRH <ef13> = 1</ef13>	ILH <il13></il13>	0xFFE4	0x01E4	14
Internal	INTTCA0	IMF AND EIRH <ef14> = 1</ef14>	ILH <il14></il14>	0xFFE2	0x01E2	15
-	Reserved	IMF AND EIRH <ef15> = 1</ef15>	ILH <il15></il15>	0xFFE0	0x01E0	16
-	Reserved	IMF AND EIRE <ef16> = 1</ef16>	ILH <il16></il16>	0xFFDE	0x01DE	17
-	Reserved	IMF AND EIRE <ef17> = 1</ef17>	ILH <il17></il17>	0xFFDC	0x01DC	18
External	INT2	IMF AND EIRE <ef18> = 1</ef18>	ILE <il18></il18>	0xFFDA	0x01DA	19
External	INT3	IMF AND EIRE <ef19> = 1</ef19>	ILE <il19></il19>	0xFFD8	0x01D8	20
External	INT4	IMF AND EIRE <ef20> = 1</ef20>	ILE <il20></il20>	0xFFD6	0x01D6	21
Internal	INTTCA1	IMF AND EIRE <ef21> = 1</ef21>	ILE <il21></il21>	0xFFD4	0x01D4	22
Internal	INTRXD1/INTSIO1	IMF AND EIRE <ef22> = 1</ef22>	ILE <il22></il22>	0xFFD2	0x01D2	23
Internal	INTTXD1	IMF AND EIRE <ef23> = 1</ef23>	ILE <il23></il23>	0xFFD0	0x01D0	24
Internal	INTTC02	IMF AND EIRD <ef24> = 1</ef24>	ILD <il24></il24>	0xFFCE	0x01CE	25
Internal	INTTC03	IMF AND EIRD <ef25> = 1</ef25>	ILD <il25></il25>	0xFFCC	0x01CC	26
Internal	INTRXD2	IMF AND EIRD <ef26> = 1</ef26>	ILD <il26></il26>	0xFFCA	0x01CA	27
Internal	INTTXD2	IMF AND EIRD <ef27> = 1</ef27>	ILD <il27></il27>	0xFFC8	0x01C8	28

- Note 1: Vector address areas can be changed by the SYSCR3<RVCTR> setting. To assign vector address areas to RAM, set SYSCR3<RVCTR> to "1" and SYSCR3<RAREA> to "1".
- Note 2: 0xFFFA and 0xFFFB function not as interrupt vectors but as option codes in the serial PROM mode. For details, see "Serial PROM Mode".

3.1 Configuration

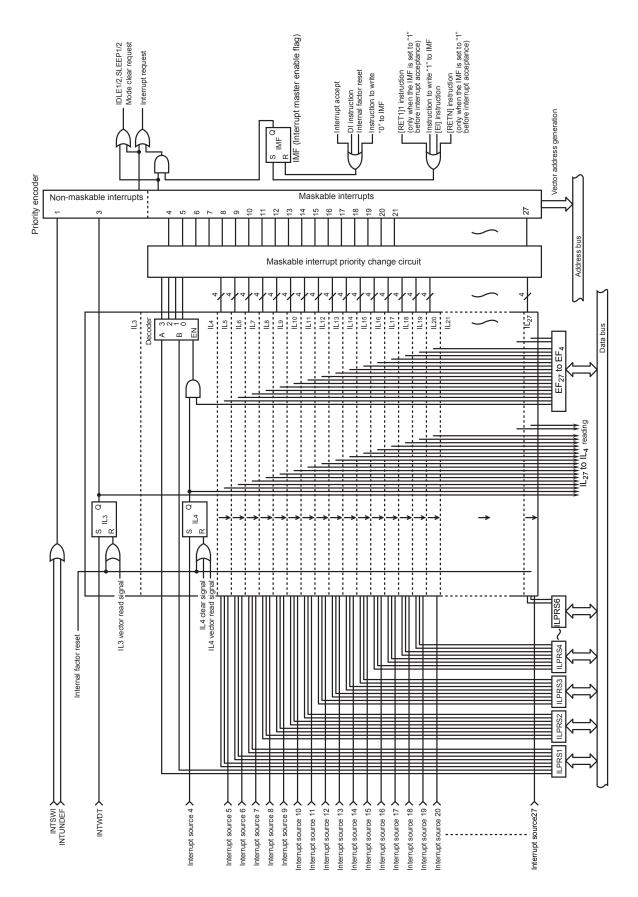


Figure 3-1 Interrupt Control Circuit

Page 49 2019/08/01

3.2 Interrupt Latches (IL27 to IL3)

An interrupt latch is provided for each interrupt source, except for a software interrupt and an undefined instruction execution interrupt. When an interrupt request is generated, the latch is set to "1", and the CPU is requested to accept the interrupt if its acceptance is enabled. The interrupt latch is cleared to "0" immediately after the interrupt is accepted. All interrupt latches are initialized to "0" during reset.

The interrupt latches are located at addresses 0x0FE0, 0x0FE1, 0x0FE2, 0x0FE3 in SFR area. Each latch can be cleared to "0" individually by an instruction. However, IL2 and IL3 interrupt latches cannot be cleared by instructions.

Do not use any read-modify-write instruction, such as a bit manipulation or operation instruction, because it may clear interrupt requests generated while the instruction is executed.

Interrupt latches cannot be set to "1" by using an instruction. Writing "1" to an interrupt latch is equivalent to denying clearing of the interrupt latch, and not setting the interrupt latch.

Since interrupt latches can be read by instructions, the status of interrupt requests can be monitored by software.

Note: In the main program, before manipulating an interrupt latch (IL), be sure to clear the master enable flag (IMF) to "0" (Disable interrupt by DI instruction). Then set the IMF to "1" as required after operating the IL (Enable interrupt by EI instruction).

In the interrupt service routine, the IMF becomes "0" automatically and need not be cleared to "0" normally. However, if using multiple interrupt in the interrupt service routine, manipulate the IL before setting the IMF to "1".

Example 1:Clears interrupt latches

DI		;IMF ← 0
LD	(ILL), 0y00111111	;IL7 to IL6 \leftarrow 0
LD	(ILH), 0y11101000	;IL12, IL10 to IL8 \leftarrow 0
EI		:IMF ← 1

Example 2:Reads interrupt latches

```
LD WA, (ILL) ;W \leftarrow ILH, A \leftarrow ILL
```

Example 3:Tests interrupt latches

```
TEST (ILL). 7 ;if IL7=1 then jump JR F, SSET ;
```

3.3 Interrupt Enable Register (EIR)

The interrupt enable register (EIR) enables and disables the acceptance of interrupts, except for the non-maskable interrupts (software interrupt, undefined instruction interrupt and watchdog interrupt). Non-maskable interrupts are accepted regardless of the contents of the EIR.

The EIR consists of the interrupt master enable flag (IMF) and the individual interrupt enable flags (EF). These registers are located at addresses 0x003A, 0x003B, 0x003C, 0x003D in the SFR area, and they can be read and written by instructions (including read-modify-write instructions such as bit manipulation or operation instructions).

3.3.1 Interrupt master enable flag (IMF)

The interrupt master enable flag (IMF) enables and disables the acceptance of all maskable interrupts. Clearing the IMF to "0" disables the acceptance of all maskable interrupts. Setting the IMF to "1" enables the acceptance of the interrupts that are specified by the individual interrupt enable flags.

When an interrupt is accepted, the IMF is stacked and then cleared to "0", which temporarily disables the subsequent maskable interrupts. After the interrupt service routine is executed, the stacked data, which was the status before interrupt acceptance, reloaded on the IMF by return interrupt instruction [RETI]/[RETN].

The IMF is located on bit 0 in EIRL (Address: 0x03A in SFR), and can be read and written by instructions. The IMF is normally set and cleared by [EI] and [DI] instructions respectively. During reset, the IMF is initialized to "0".

3.3.2 Individual interrupt enable flags (EF27 to EF4)

Each of these flags enables and disables the acceptance of its maskable interrupt. Setting the corresponding bit of an individual interrupt enable flag to "1" enables acceptance of its interrupt, and setting the bit to "0" disables acceptance.

During reset, all the individual interrupt enable flags are initialized to "0" and no maskable interrupts are accepted until the flags are set to "1".

Note:In the main program, before manipulating the interrupt enable flag (EF), be sure to clear the master enable flag (IMF) to "0" (Disable interrupt by DI instruction). Then set the IMF to "1" as required after operating the EF (Enable interrupt by EI instruction).

In the interrupt service routine, the IMF becomes "0" automatically and need not be cleared to "0" normally. However, if using multiple interrupt in the interrupt service routine, manipulate the EF before setting the IMF to "1".

Example: Enables interrupts individually and sets IMF

```
DI ;IMF \leftarrow 0 
LDW (EIRL), 0y1110100010100000 ;EF15 to EF13, EF11, EF7, EF5 \leftarrow 1 ;Note: IMF should not be set. 
EI :IMF \leftarrow 1
```

Page 51 2019/08/01

3.3 Interrupt Enable Register (EIR)

Interrupt latch (ILL)

ILL		7	6	5	4	3	2	1	0
(0x0FE0)	Bit Symbol	IL7	IL6	IL5	IL4	IL3	-	-	-
	Read/Write	R/W	R/W	R/W	R/W	R	R	R	R
	After reset	0	0	0	0	0	0	0	0
	Function	INTTXD0	INTRXD0 / INTSIO0	INTTBT	INTWUC	INTWDT			

Interrupt latch (ILH)

ILH		7	6	5	4	3	2	1	0
(0x0FE1)	Bit Symbol	IL15	IL14	IL13	IL12	IL11	IL10	IL9	IL8
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0
	Function	Reserved	INTTCA0	INTTC01	INTTC00	INTRTC	INTADC	INTVLTD	INT5

Interrupt latch (ILE)

ILE		7	6	5	4	3	2	1	0
(0x0FE2)	Bit Symbol	IL23	IL22	IL21	IL20	IL19	IL18	IL17	IL16
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0
	Function	INTTXD1	INTRXD1/ INTSIO1	INTTCA1	INT4	INT3	INT2	Reserved	Reserved

Interrupt latch (ILD)

ILD		7	6	5	4	3	2	1	0
(0x0FE3)	Bit Symbol	-	-	1	1	IL27	IL26	IL25	IL24
	Read/Write	R	R	R	R	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0
	Function					INTTXD2	INTRXD2	INTTC03	INTTC02

IL27 to IL4	Interrupt latch		Read	Write
		0:	No interrupt request	Clears the interrupt request (Notes 2 and 3)
		1:	Interrupt request	Does not clear the interrupt request
				(Interrupt is not set by writing "1".)
IL3		0:	No interrupt request	
ILS		1:	Interrupt request	-

Note 1: IL3 is a read-only register. Writing the register does not affect interrupt latch.

Note 2: In the main program, before manipulating an interrupt latch (IL), be sure to clear the interrupt master enable flag (IMF) to "0" (Disable interrupt by DI instruction). Then set the IMF to "1" as required after operating the IL (Enable interrupt by EI instruction).

In the interrupt service routine, the IMF becomes "0" automatically and need not be cleared to "0" normally. However, if using multiple interrupt in the interrupt service routine, manipulate the IL before setting the IMF to "1".

Note 3: Do not clear IL with read-modify-write instructions such as bit operations.

Note 4: When a read instruction is executed on ILL, bits 0 to 2 are read as "0". Other unused bits are read as "0".



Interrupt enable register (EIRL)

EIRL		7	6	5	4	3	2	1	0
(0x003A)	Bit Symbol	EF7	EF6	EF5	EF4	-	-	-	IMF
	Read/Write	R/W	R/W	R/W	R/W	R	R	R	R/W
	After reset	0	0	0	0	0	0	0	0
	Function	INTTXD0	INTRXD0 / INTSIO0	INTTBT	INTWUC				Interrupt master ena- ble flag

Interrupt enable register (EIRH)

EIRH		7	6	5	4	3	2	1	0
(0x003B)	Bit Symbol	EF15	EF14	EF13	EF12	EF11	EF10	EF9	EF8
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0
	Function	Reserved	INTTCA0	INTTC01	INTTC00	INTRTC	INTADC	INTVLTD	INT5

Interrupt enable register (EIRE)

EIRE		7	6	5	4	3	2	1	0
(0x003C)	Bit Symbol	EF23	EF22	EF21	EF20	EF19	EF18	EF17	EF16
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0
	Function	INTTXD1	INTRXD1/ INTSIO1	INTTCA1	INT4	INT3	INT2	Reserved	Reserved

Interrupt enable register (EIRD)

EIRD		7	6	5	4	3	2	1	0
(0x003D)	Bit Symbol	-	-	-	-	EF27	EF26	EF25	EF24
	Read/Write	R	R	R	R	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0
	Function					INTTXD2	INTRXD2	INTTC03	INTTC02

EF27 to	Individual interrupt enable flag	0:	Disables the acceptance of each maskable interrupt.				
EF4	(Specified for each bit)	1:	Enables the acceptance of each maskable interrupt.				
IMF	Interrupt master enable flag		Disables the acceptance of all maskable interrupts.				
		1:	Enables the acceptance of all maskable interrupts.				

Note 1: Do not set the IMF and the interrupt enable flag (EF15 to EF4) to "1" at the same time.

Note 2: In the main program, before manipulating the interrupt enable flag (EF), be sure to clear the master enable flag (IMF) to "0" (Disable interrupt by DI instruction). Then set the IMF to "1" as required after operating the EF (Enable interrupt by EI instruction)

In the interrupt service routine, the IMF becomes "0" automatically and need not be cleared to "0" normally. However, if using multiple interrupt in the interrupt service routine, manipulate the EF before setting the IMF to "1".

Note 3: When a read instruction is executed on EIRL, bits 3 to 1 are read as "0". Other unused bits are read as "0".

Page 53 2019/08/01

3.4 Maskable Interrupt Priority Change Function

3.4 Maskable Interrupt Priority Change Function

The priority of maskable interrupts (IL4 to IL27) can be changed to four levels, Levels 0 to 3, regardless of the basic priorities 5 to 28. Interrupt priorities can be changed by the interrupt priority change control register (ILPRS1 to ILPRS6). To raise the interrupt priority, set the Level to a larger number. To lower the interrupt priority, set the Level to a smaller number. When different maskable interrupts are generated simultaneously at the same level, the interrupt with higher basic priority is processed preferentially. For example, when the ILPRS1 register is set to 0xC0 and interrupts IL4 and IL7 are generated at the same time, IL7 is preferentially processed (provided that EF4 and EF7 have been enabled).

After reset is released, all maskable interrupts are set to priority level 0 (the lowest priority).

Note: In the main program, before manipulating the interrupt priority change control register (ILPRS1 to 6), be sure to clear the master enable flag (IMF) to "0" (Disable interrupt by DI instruction).

Set the IMF to "1" as required after operating ILPRS1 to 6 (Enable interrupt by EI instruction).

In the interrupt service routine, the IMF becomes "0" automatically and need not be cleared to "0" normally. However, if using multiple interrupt in the interrupt service routine, manipulate ILPRS1 to 6 before setting the IMF to "1".

Interrupt priority change control register 1

ILPRS1 (0x0FF0)

	/	О	5	4	3		1		
Bit Symbol	ILC)7P	ILC)6P	ILC)5P	IL04P		
Read/Write	R	/W	R/W		R	/W	R/W		
After reset	0	0	0	0	0	0	0	0	

IL07P	Sets the interrupt priority of IL7.	00:	Level 0 (lower priority)
IL06P	Sets the interrupt priority of IL6.	01:	Level 1
IL05P	Sets the interrupt priority of IL5.	10:	Level 2
IL04P	Sets the interrupt priority of IL4.	11:	Level 3 (higher priority)

Interrupt priority change control register 2

ILPRS2 (0x0FF1)

		U		-					
Bit Symbol	IL1	1P	IL10P ILC			09P IL0)8P	
Read/Write	R/	R/W		R/W		R/W		R/W	
After reset	0	0	0	0	0	0	0	0	

IL11P	Sets the interrupt priority of IL11.	00:	Level 0 (lower priority)
IL10P	Sets the interrupt priority of IL10.	01:	Level 1
IL09P	Sets the interrupt priority of IL9.	10:	Level 2
IL08P	Sets the interrupt priority of IL8.	11:	Level 3 (higher priority)

Interrupt priority change control register 3

ILPRS3 (0x0FF2)

	1	0	<u> </u>		<u> </u>			U
Bit Symbol	IL1	5P	IL1	14P	IL1	13P	IL12P	
Read/Write	R	W	R	/W	R/W		R/W	
After reset	0	0	0	0	0	0	0	0

IL15P	Sets the interrupt priority of IL15.	00:	Level 0 (lower priority)
IL14P	Sets the interrupt priority of IL14.	01:	Level 1
IL13P	Sets the interrupt priority of IL13.	10:	Level 2
IL12P	Sets the interrupt priority of IL12.	11:	Level 3 (higher priority)



Interrupt priority change control register 4

ILPRS4		7	6	5	4	3	2	1	0	
(0x0FF3)	Bit Symbol			IL1	18P	IL	17P	IL16P		
	Read/Write	R	R/W		R/W		R/W		R/W	
	After reset	0	0	0	0	0	0	0	0	

IL19P	Sets the interrupt priority of IL19.	00:	Level 0 (lower priority)
IL18P	Sets the interrupt priority of IL18.	01:	Level 1
IL17P	Sets the interrupt priority of IL17.	10:	Level 2
IL16P	Sets the interrupt priority of IL16.	11:	Level 3 (higher priority)

Interrupt priority change control register 5

ILPRS5

(0x0FF4)

Bit Symbol	IL2	23P	IL2	22P	IL2	21P	IL20P		
Read/Write	R	/W	R	/W		R/W		R/W	
After reset	0	0	0	0	0	0	0	0	

IL23P	Sets the interrupt priority of IL23.	00:	Level 0 (lower priority)
IL22P	Sets the interrupt priority of IL22.	01:	Level 1
IL21P	Sets the interrupt priority of IL21.	10:	Level 2
IL20P	Sets the interrupt priority of IL20.	11:	Level 3 (higher priority)

Interrupt priority change control register 6

ILPRS6 5 (0x0FF5)

Bit Symbol	IL27P		IL26P		IL25P		IL24P	
Read/Write	R/	W	R/W		R/W		R/W	
After reset	0	0	0	0	0	0	0	0

IL27P	Sets the interrupt priority of IL27.	00:	Level 0 (lower priority)
IL26P	Sets the interrupt priority of IL26.	01:	Level 1
IL25P	Sets the interrupt priority of IL25.	10:	Level 2
IL24P	Sets the interrupt priority of IL24.	11:	Level 3 (higher priority)

3.5 Interrupt Sequence

TMP89FS62VUG

3.5 Interrupt Sequence

An interrupt request, which raised interrupt latch, is held, until interrupt is accepted or interrupt latch is cleared to "0" by resetting or an instruction. Interrupt acceptance sequence requires 8-machine cycles after the completion of the current instruction. The interrupt service task terminates upon execution of an interrupt return instruction [RE-TI] (for maskable interrupts) or [RETN] (for non-maskable interrupts).

3.5.1 Initial Setting

Using an interrupt requires specifying an SP (stack pointer) for it in advance. The SP is a 16-bit register pointing at the start address of a stack. The SP is post-decremented when a subroutine call or a push instruction is executed or when an interrupt request is accepted. It is pre-incremented when a return or pop instruction is executed. Therefore, the stack becomes deeper toward lower stack location addresses. Be sure to reserve a stack area having an appropriate size based on the SP setting.

The SP is initialized to 00FFH after a reset. If you need to change the SP, do so right after a reset or when the interrupt master enable flag (IMF) is "0".

Example :SP setting

LD SP, 023FH ; SP = 023FH LD SP, SP+04H ; SP = SP + 04H ADD SP, 0010H ; SP = SP + 0010H

3.5.2 Interrupt acceptance processing

Interrupt acceptance processing is packaged as follows.

- 1. The interrupt master enable flag (IMF) is cleared to "0" in order to disable the acceptance of any following interrupt.
- 2. The interrupt latch (IL) for the interrupt source accepted is cleared to "0".
- 3. The contents of the program counter (PC) and the program status word, including the interrupt master enable flag (IMF), are saved (Pushed) on the stack in sequence of PSW + IMF, PCH, PCL. Meanwhile, the stack pointer (SP) is decremented by 3.
- 4. The entry address (Interrupt vector) of the corresponding interrupt service program, loaded on the vector table, is transferred to the program counter.
- 5. The instruction stored at the entry address of the interrupt service program is executed.

Note: When the contents of PSW are saved on the stack, the contents of register bank and IMF are also saved

Example: Correspondence between vector table address for INTTBT and the entry address of the interrupt service program



Figure 3-2 Vector table address and Entry address

Page 57 2019/08/01

A maskable interrupt is not accepted until the IMF is set to "1" even if the maskable interrupt is requested in the interrupt service routine.

In order to utilize nested interrupt service, the IMF must be set to "1" in the interrupt service program. In this case, acceptable interrupt sources are selectively enabled by the individual interrupt enable flags.

To avoid overloaded nesting, clear the individual interrupt enable flag whose interrupt is currently serviced, before setting IMF to "1". As for non-maskable interrupt, keep interrupt service shorter compared with length between interrupt requests.

3.5.3 Saving/restoring general-purpose registers

During interrupt acceptance processing, the program counter (PC) and the program status word (PSW, includes IMF) are automatically saved on the stack, but the general purpose registers are not. These registers must be saved by software if necessary. When multiple interrupt services are nested, it is also necessary to avoid using the same data memory area for saving registers. The following methods are used to save/restore the general-purpose registers.

3.5.3.1 Using PUSH and POP instructions

To save only a specific register, PUSH and POP instructions are available.

Example :Using PUSH and POP instructions

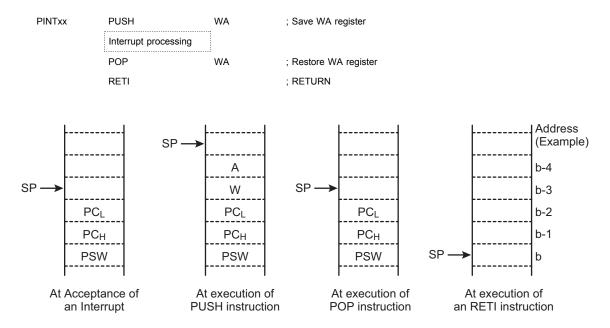



Figure 3-3 Saving/restoring general-purpose registers



3.5.3.2 Using data transfer instructions

To save only a specific register without nested interrupts, data transfer instructions are available.

Example :Save/store register using data transfer instructions

 

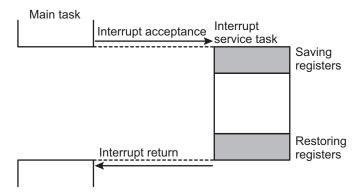


Figure 3-4 Saving/Restoring General-purpose Registers under Interrupt Processing

3.5.3.3 Using a register bank to save/restore general-purpose registers

In non-multiple interrupt handling, the register bank function can be used to save/restore the general-purpose registers at a time. The register bank function saves (switches) the general-purpose registers by executing a register bank manipulation instruction (such as LD RBS,1) at the beginning of an interrupt service task. It is unnecessary to re-execute the register bank manipulation instruction at the end of the interrupt service task because executing the RETI instruction makes a return automatically to the register bank that was being used by the main task according to the content of the PSW.

Note: Two register banks (BANK0 and BANK1) are available. Each bank consists of 8-bit general-purpose registers (W, A, B, C, D, E, H, and L) and 16-bit general-purpose registers (IX and IY).

Example :Saving/restoring registers, using an instruction for transfer with data memory (with the main task using the register bank BANK0)



Page 59 2019/08/01

3.5 Interrupt Sequence TMP89FS62VUG

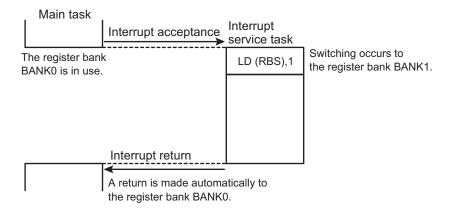


Figure 3-5 Saving/Restoring General-purpose Registers under Interrupt Processing

3.5.4 Interrupt return

Interrupt return instructions [RETI]/[RETN] perform as follows.

[RETI]/[RETN] Interrupt Return

- 1. Program counter (PC) and program status word (register bank) are restored from tha stack.
- 2. Stack pointer (SP) is incremented by 3.



3.6 Software Interrupt (INTSW)

Executing the SWI instruction generates a software interrupt and immediately starts interrupt processing (INTSW is the top-priority interrupt).

Use the SWI instruction only for address error detection or for debugging described below.

3.6.1 Address error detection

0xFF is read if for some cause such as noise the CPU attempts to fetch an instruction from a non-existent memory address. Code 0xFF is an SWI instruction, so a software interrupt is generated and an address error is detected. The address error detection range can be further expanded by writing 0xFF to unused areas in the program memory.

When a software interrupt is generated, it is recommended to generate system clock reset as the program below.

Example; To generate system clock reset after the address error detection

 $\begin{array}{ccc} INTSWI: & LD & (SYSCR2), 0x10 & ; System clock reset \\ RETN & ; Dummy instruction \\ vector section romdata abs = 0xFFFC \\ & DW & INTSWI \\ \end{array}$

3.6.2 Debugging

Debugging efficiency can be increased by placing the SWI instruction at the software break point setting address.

3.7 Undefined Instruction Interrupt (INTUNDEF)

When the CPU tries to fetch and execute an instruction that is not defined, INTUNDEF is generated and starts the interrupt processing. INTUNDEF is accepted even if another non-maskable interrupt is in process. The current process is discontinued and the INTUNDEF interrupt process starts soon after it is requested.

Note: The undefined instruction interrupt (INTUNDEF) forces the CPU to jump into the interrupt vector address, as software interrupt (SWI) does.

Page 61 2019/08/01

- 3. Interrupt Control Circuit
- 3.7 Undefined Instruction Interrupt (INTUNDEF)

TMP89FS62VUG

4. External Interrupt control circuit

External interrupts detects the change of the input signal and generates an interrupt request. Noise can be removed by the built-in digital noise canceller.

4.1 Configuration

The external interrupt control circuit consists of a noise canceller, an edge detection circuit, a level detection circuit and an interrupt signal generation circuit.

Externally input signals are input to the rising edge or falling edge or level detection circuit for each external interrupt, after noise is removed by the noise canceller.

 


Figure 4-1 External Interrupts 5

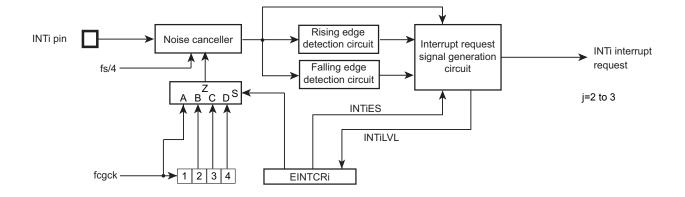


Figure 4-2 External Interrupts 2/3

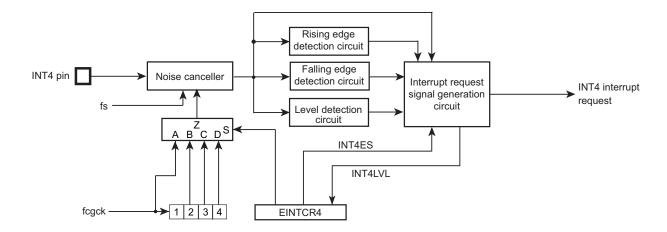


Figure 4-3 External Interrupt 4

4.2 Control TMP89FS62VUG

4.2 Control

External interrupts are controlled by the following registers:

Low power consumption register 3

POFFCR3		7	6	5	4	3	2	1	0
(0x0F77)	Bit Symbol	-	-	INT5EN	INT4EN	INT3EN	INT2EN	-	-
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

INT5EN	INT5 control	0 1	Disable Enable
INT4EN	INT4 control	0	Disable Enable
-		1	
INT3EN	INT3 control	0	Disable
		1	Enable
INT2EN	INT2 control	0	Disable
INTZLIN		1	Enable

- Note 1: Clearing INTxEN(x=0 to 5) to "0" stops the clock supply to the external interrupts. This invalidates the data written in the control register for each external interrupt. When using the external interrupts, set INTxEN to "1" and then write data into the control register for each external interrupt.
- Note 2: Interrupt request signals may be generated when INTxEN is changed. Before changing INTxEN, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NOR-MAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.
- Note 3: Bits 7 and 6 of POFFSET3 are read as "0".

External interrupt control register 2

EINTCR1 (0x0FD9)

1		7	6	5	4	3 2	1 0
)	Bit Symbol	-	-	-	INT2LVL	INT2ES	INT2NC
	Read/Write	R	R	R	R	R/W	R/W
	After reset	0	0	0	0	0	0

INI2LVL	Noise canceller pass signal level when the interrupt request signal is generated for external interrupt 2	0 : 1 :	1		
		00 :	An interrupt request is generated ler pass signal	at the	e rising edge of the noise cancel-
INT2ES	Selects the interrupt request generating condition for external interrupt 2	01 :	An interrupt request is generated ler pass signal	at the	e falling edge of the noise cancel-
		10 :	An interrupt request is generated pass signal	l at bo	th edges of the noise canceller
		11 :	Reserved		
			NORMAL1/2, IDLE1/2		SLOW1/2, SLEEP1
	Sata the poice conceller compling	00 :	fcgck [Hz]	00 :	fs/4 [Hz]
INT2NC	Sets the noise canceller sampling interval for external interrupt 2	01 :	fcgck / 22 [Hz]	01 :	fs/4 [Hz]
	'	10 :	fcgck / 2³ [Hz]	10 :	fs/4 [Hz]
		11 :	fcgck / 24 [Hz]	11 :	fs/4 [Hz]

Note 1: fcgck: Gear clock [Hz], fs: Low-frequency clock [Hz]

Note 2: Interrupt requests may be generated during transition of the operation mode. Before changing the operation mode, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NORMAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.



Note 3: Interrupt requests may be generated when EINTCR2 is changed. Before doing such operation, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NOR-MAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.

Note 4: Bits 7 to 5 of EINTCR2 are read as "0".

External interrupt control register 3

EINTCR3 (0x0FDA)

3		7	6	5	4	3	2	1	0
)	Bit Symbol	-	-	-	INT3LVL	INT	3ES	INT	3NC
	Read/Write	R	R	R	R	R	/W	R	w
	After reset	0	0	0	0		0		0

INI3LVL	Noise canceller pass signal level when the interrupt request signal is generated for external interrupt 3	0 : 1 :	3		
INT3ES	Selects the interrupt request generating condition for external interrupt 3		ler pass signal	I at the	e rising edge of the noise cancel- e falling edge of the noise cancel- th edges of the noise canceller
			NORMAL1/2, IDLE1/2		SLOW1/2, SLEEP1
INT3NC	Sets the noise canceller sampling interval for external interrupt 3	00 : 01 : 10 : 11 :	fcgck [Hz] fcgck / 2 ² [Hz] fcgck / 2 ³ [Hz] fcgck / 2 ⁴ [Hz]	00 : 01 : 10 : 11 :	fs/4 [Hz] fs/4 [Hz] fs/4 [Hz] fs/4 [Hz]

- Note 1: fcgck: Gear clock [Hz], fs: Low-frequency clock [Hz]
- Note 2: Interrupt requests may be generated during transition of the operation mode. Before changing the operation mode, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NORMAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.
- Note 3: Interrupt requests may be generated when EINTCR3 is changed. Before doing such operation, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NOR-MAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.

Note 4: Bits 7 to 5 of EINTCR3 are read as "0".

Page 65 2019/08/01

4.3 Function

TMP89FS62VUG

External interrupt control register 4

EINTCR4 (0x0FDB)

4		7	6	5	4	3 2	1 0
)	Bit Symbol	-	-	-	INT4LVL	INT4ES	INT4NC
	Read/Write	R	R	R	R	R/W	R/W
	After reset	0	0	0	0	0	0

INI4LVL	Noise canceller pass signal level when the interrupt request signal is generated for external interrupt 4	0 : 1 :	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
INT4ES	Selects the interrupt request generating condition for external interrupt 4		ler pass signal An interrupt request is generated ler pass signal An interrupt request is generated pass signal	I at the	e rising edge of the noise cancel- e falling edge of the noise cancel- th edges of the noise canceller of the noise canceller pass signal
			NORMAL1/2, IDLE1/2		SLOW1/2, SLEEP1
INT4NC	Sets the noise canceller sampling interval for external interrupt 4	00 : 01 : 10 : 11 :	fcgck [Hz] fcgck / 2 ² [Hz] fcgck / 2 ³ [Hz] fcgck / 2 ⁴ [Hz]	00 : 01 : 10 : 11 :	fs/4 [Hz]

Note 1: fcgck: Gear clock [Hz], fs: Low-frequency clock [Hz]

Note 2: Interrupt requests may be generated during transition of the operation mode. Before changing the operation mode, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NORMAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.

Note 3: Interrupt requests may be generated when EINTCR4 is changed. Before doing such operation, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NOR-MAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/ fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.

Note 4: The contents of EINTCRx<INTxLVL> are updated each time an interrupt request signal is generated.

Note 5: Bits 7 to 5 of EINTCR4 are read as "0".

4.3 Function

The condition for generating interrupt request signals and the noise cancel time can be set for external interrupts 2 to 4.

The condition for generating interrupt request signals and the noise cancel time are fixed for external interrupts 5.



T-61-	1 1	F	Interrupts
Ianie	4-1	External	Interrinte

	5:		Interrupt request sig-	External interrupt pin input signal width and noise removal			
Source	Pin	Enable conditions	nal generated at	NORMAL1/2, IDLE1/2	SLOW1/2, SLEEP1		
INT2	INT2	IMF AND EF18 =	Falling edge Rising edge Both edges	Less than 2/fspl: Noise More than 2/fspl and less than 3/fspl+1/ fcgck: Indeterminate More than 3/fspl+1/fcgck: Signal	Less than 4/fs: Noise More than 4/fs and less than 8/fs: Inde- terminate More than 8/fs: Signal		
INT3	INT3	IMF AND EF19 =	Falling edge Rising edge Both edges	Less than 2/fspl: Noise More than 2/fspl and less than 3/fspl+1/ fcgck: Indeterminate More than 3/fspl+1/fcgck: Signal	Less than 4/fs: Noise More than 4/fs and less than 8/fs: Inde- terminate More than 8/fs: Signal		
INT4	INT4	IMF AND EF20 =	Falling edge Rising edge Both edges "H" level	Less than 2/fspl: Noise More than 2/fspl and less than 3/fspl+1/ fcgck: Indeterminate More than 3/fspl+1/fcgck: Signal	Less than 4/fs: Noise More than 4/fs and less than 8/fs: Inde- terminate More than 8/fs: Signal		
INT5	ĪNT5	IMF AND EF8 = 1	Falling edge	Less than 1/fcgck: Noise More than 1/fcgck and less than 2/fcgck: Indeterminate More than 2/fcgck: Signal	Less than 4/fs: Noise More than 4/fs and less than 8/fs: Inde- terminate More than 8/fs: Signal		

Note 1: fcgck, Gear clock [Hz]; fs, low frequency clock [Hz]; fspl, Sampling interval [Hz]

4.3.1 Low power consumption function

External interrupts have a function that saves power by using the low power consumption register (POFFCR3) when they are not used.

Setting POFFCR3<INTxEN> to "0" stops (disables) the basic clock for external interrupts and helps save power. Note that this makes external interrupts unavailable. Setting POFFCR3<INTxEN> to "1" supplies (enables) the basic clock for external interrupts and makes external interrupts available.

After reset, POFFCR3<INTxEN> is initialized to "0" and external interrupts become unavailable. When using the external interrupt function for the first time, be sure to set POFFCR3<INTxEN> to "1" in the initial setting of software (before operating the external interrupt control registers).

Note:Interrupt request signals may be generated when INTxEN is changed. Before changing INTxEN, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NORMAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.

4.3.2 External interrupts 2/3

External interrupts 2/3 detect the falling edge, the rising edge or both edges of the INT2 and INT3 pins and generate interrupt request signals.

4.3.2.1 Interrupt request signal generating condition detection function

Select interrupt request signal generating conditions at EINTCRx<INTxES> for external interrupts 2/3.


Table 4-2 Selection of Interrupt Request Generation Edge

EINTCRx <intxes></intxes>	Detected at
00	Rising edge
01	Falling edge
10	Both edges
11	Reserved

Note: x=2 to 3

4.3.2.2 A noise canceller pass signal monitoring function when interrupt request signals are generated

The level of a signal that has passed through the noise canceller when an interrupt request is generated can be read by using EINTCRx<INTxLVL>. When both edges are selected as detection edges, the edge where an interrupt is generated can be detected by reading EINTCRx<INTxLVL>.

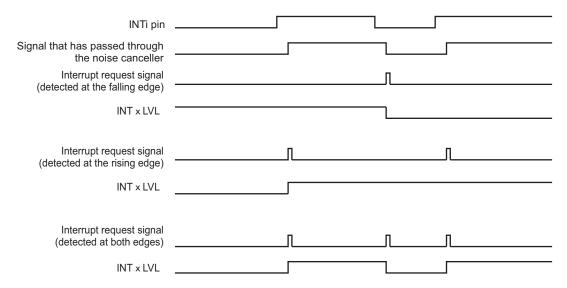

Note: The contents of EINTCRx<INTxLVL> are updated each time an interrupt request signal is generated.

Figure 4-4 Interrupt Request Generation and EINTCRx<INTxLVL>

4.3.2.3 Noise cancel time selection function

In NORMAL1/2 or IDLE1/2 mode, a signal that has been sampled by fcgck is sampled at the sampling interval selected at EINTCRx<INTxNC>. If the same level is detected three consecutive times, the signal is recognized as a signal. If not, the signal is removed as noise.

Table 4-3 Noise Canceller Sampling Lock

EINTCRx <intxnc></intxnc>	Sampling interval
00	fcgck
01	fcgck/2 ²
10	fcgck/2 ³
11	fcgck/2 ⁴

Figure 4-5 Noise Cancel Operation

In SLOW1/2 or SLEEP1 mode, a signal is sampled by the low frequency clock divided by 4. If the same level is detected twice consecutively, the signal is recognized as a signal.

In IDLE0, SLEEP0 or STOP mode, the noise canceller sampling operation is stopped and an external interrupts are unavailable. When operation returns to NORMAL1/2, IDLE1/2, SLOW1/2 or SLEEP1 mode, sampling operation restarts.

- Note 1: If noise is input consecutively during sampling of external interrupt pins, the noise cancel function does not work properly. Set EINTCRx<INTxNC> according to the cycle of externally input noise.
- Note 2: If an external interrupt pin is used as an output port, the input signal to the port is fixed to "L" when the mode is switched to the output mode, and thus an interrupt request occurs. To use the pin as an output port, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt.
- Note 3: Interrupt requests may be generated during transition of the operation mode. Before changing the operation mode, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NORMAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.

4.3.3 External interrupt 4

External interrupt 4 detects the falling edge, the rising edge, both edges or "H" level of the INT4 pin and generates interrupt request signals.

4.3.3.1 Interrupt request signal generating condition detection function

Select an interrupt request signal generating condition at EINTCR4<INT4ES> for external interrupt 4.

Table 4-4 Selection of Interrupt Request Generation Edge

EINTCR4 <int4es></int4es>	Detected at			
00	Rising edge			
01	Falling edge			
10	Both edges			
11	"H" level interrupt			

4.3.3.2 A noise canceller pass signal monitoring function when interrupt request signals are generated

Page 69

The level of a signal that has passed through the noise canceller when an interrupt request is generated can be read by using EINTCR4<INT4LVL>. When both edges are selected as detection edges, the edge where an interrupt is generated can be detected by reading EINTCR4<INT4LVL>.

4.3 Function TMP89FS62VUG

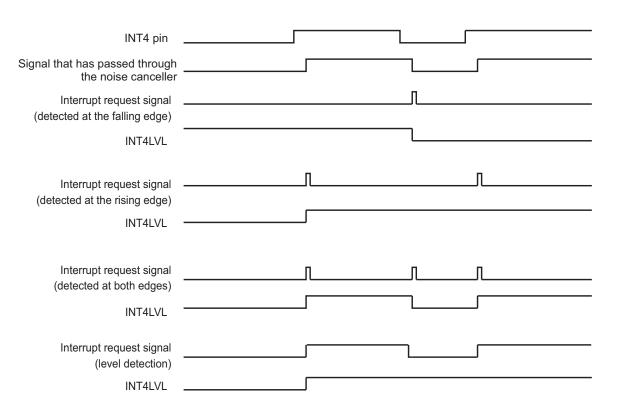


Figure 4-6 Interrupt Request Generation and EINTCR4<INT4LVL>

4.3.3.3 Noise cancel time selection function

In NORMAL1/2 or IDLE1/2 mode, a signal that has been sampled by fcgck is sampled at the sampling interval selected at EINTCRx<INT4NC>. If the same level is detected three consecutive times, the signal is recognized as a signal. If not, the signal is removed as noise.

Table 4-5 Noise Canceller Sampling Lock

EINTCR4 <int4nc></int4nc>	Sampling interval
00	fcgck
01	fcgck/2 ²
10	fcgck/2 ³
11	fcgck/2 ⁴

 


Figure 4-7 Noise Cancel Operation

In SLOW1/2 or SLEEP1 mode, a signal is sampled by the low frequency clock divided by 4. If the same level is detected twice consecutively, the signal is recognized as a signal.

In IDLE0, SLEEP0 or STOP mode, the noise canceller sampling operation is stopped and an external interrupts are unavailable. When operation returns to NORMAL1/2, IDLE1/2, SLOW1/2 or SLEEP1 mode, sampling operation restarts.

- Note 1: When noise is input consecutively during sampling external interrupt pins, the noise cancel function does not work properly. Set EINTCRx<INTxNC> according to the cycle of externally input noise.
- Note 2: When an external interrupt pin is used as an output port, the input signal to the port is fixed to "L" when the mode is switched to the output mode, and thus an interrupt request occurs. To use the pin as an output port, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt.
- Note 3: Interrupt requests may be generated during transition of the operation mode. Before changing the operation mode, clear the corresponding interrupt enable register to "0" to disable the generation of interrupt. When the operation mode is changed from NORMAL1/2 or IDLE1/2 to SLOW1/2 or SLEEP1, wait 12/fs [s] after the operation mode is changed and clear the interrupt latch. And when the operation mode is changed from SLOW1/2 or SLEEP1 to NORMAL1/2 or IDLE1/2, wait 2/fcgck+3/fspl [s] after the operation mode is changed and clear the interrupt latch.

4.3.4 External interrupt 5

External interrupt 5 detects the falling edge of the INT5 pin and generates interrupt request signals.

In NORMAL1/2 or IDLE1/2 mode, pulses of less than 1/fcgck are removed as noise and pulses of 2/fcgck or more are recognized as signals.

In SLOW/SLEEP mode, pulses of less than 4/fs are removed as noise and pulses of 8/fs or more are recognized as signals.

Page 71 2019/08/01

4. External Interrupt control circuit

4.3 Function

TMP89FS62VUG

5. Watchdog Timer (WDT)

The watchdog timer is a fail-safe system to detect rapidly the CPU malfunctions such as endless loops due to spurious noises or the deadlock conditions, and return the CPU to a system recovery routine.

The watchdog timer signals used for detecting malfunctions can be programmed as watchdog interrupt request signals or watchdog timer reset signals.

Note: Care must be taken in system designing since the watchdog timer may not fulfill its functions due to disturbing noise and other effects.

5.1 Configuration

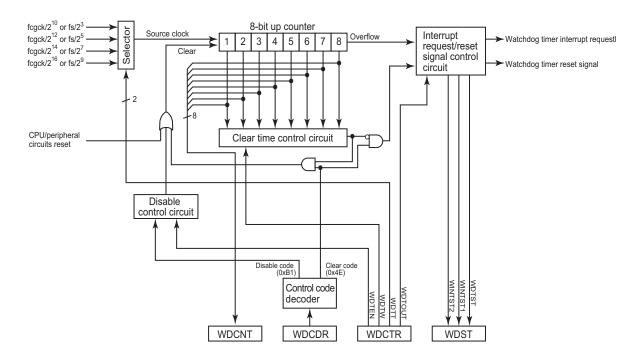


Figure 5-1 Watchdog Timer Configuration

5.2 Control TMP89FS62VUG

5.2 Control

The watchdog timer is controlled by the watchdog timer control register (WDCTR), the watchdog timer control code register (WDCDR), the watchdog timer counter monitor (WDCNT) and the watchdog timer status (WDST).

The watchdog timer is enabled automatically just after the warm-up operation that follows reset is finished.

Watchdog timer control register

WDCTR (0x0FD4)

	7	6	5	4	3	2	1	0
Bit Symbol	-	-	WDTEN	WE	TW	W	OTT	WDTOUT
Read/Write	R	R	R/W	R	R/W		/W	R/W
After reset	1	0	1	0	0	1	1	0

		_	5				
WDTEN	Enables/disables the watchdog tim-	0 : 1 :	Disable				
	er operation.		Enable				
		00 :	The 8-bit up counter is on the overflow time of the counter is constant.	leared by writing the clea he 8-bit up counter.	r code at any point with-		
			code at a point within the up counter. The 8-bit up	upt request is generated the first quarter of the over the counter is cleared by we overflow time has elap	rflow time of the 8-bit riting the clear code af-		
WDTW	Sets the clear time of the 8-bit up counter.	10 :	code at a point within the ter. The 8-bit up counte	A watchdog timer interrupt request is generated by writing the clear code at a point within the first half of the overflow time of the 8-bit up counter. The 8-bit up counter is cleared by writing the clear code after the first half of the overflow time has elapsed.			
			A watchdog timer interrupt request is generated by writing the clear code at a point within the first three quarters of the overflow time of th 8-bit up counter. The 8-bit up counter is cleared by writing the clear code after the first three quarters of the overflow time have elapsed.				
			NORMA	OLOW			
			DV9CK=0	DV9CK=1	SLOW mode		
WDTT	Sets the overflow time of the 8-bit	00 :	2 ¹⁸ /fcgck	2 ¹¹ /fs	2 ¹¹ /fs		
WDII	up counter.	01:	2 ^{20/} fcgck	2 ¹³ /fs	2 ¹³ /fs		
		10:	2 ²² /fcgck	2 ¹⁵ /fs	2 ¹⁵ /fs		
		11:	2 ²⁴ /fcgck	2 ¹⁷ /fs	2 ¹⁷ /fs		
WDTOUT	Selects an overflow detection sig-	0 :	Watchdog timer interrup	t request signal			
וטטוטאי	nal of the 8-bit up counter.	1:	Watchdog timer reset re	equest signal			

Note 1: fcgck, Gear clock [Hz]; fs, Low frequency clock [Hz]

Note 2: WDCTR<WDTW>, WDCTR<WDTT> and WDCTR<WDTOUT> cannot be changed when WDCTR<WDTEN> is "1". If WDCTR<WDTEN> is "1", clear WDCTR<WDTEN> to "0" and write the disable code (0xB1) into WDCDR to disable the watchdog timer operation. Note that WDCTR<WDTW>, WDCTR<WDTT> and WDCTR<WDTOUT> can be changed at the same time as setting WDCTR<WDTEN> to "1".

Note 3: Bit 7 and bit 6 of WDCTR are read as "1" and "0" respectively.

Watchdog timer control code register

WDCDR (0x0FD5)

		7	6	5	4	3	2	1	0		
)	Bit Symbol		WDTCR2								
	Read/Write		W								
	After reset	0	0	0	0	0	0	0	0		

		0x4E :	Clears the watchdog timer. (Clear code)
WDTCR2	Writes watchdog timer control codes.	0xB1 :	Disables the watchdog timer operation and clears the 8-bit up counter when WDCTR <wdten> is "0". (Disable code)</wdten>
		Others :	Invalid

Note: WDCDR is a write-only register and must not be accessed by using a read-modify-write instruction, such as a bit operation.



8-bit up counter monitor

WDCNT		7	6	5	4	3	2	1	0	
(0x0FD6)	Bit Symbol	WDCNT								
	Read/Write		R							
	After reset	0	0	0	0	0	0	0	0	

WDCNT	Monitors the count value of the 8-	The count value of the 8-bit up counter is read.
	bit up counter	

Watchdog timer status

2 0 WDST 7 6 5 3 (0x0FD7) WINTST2 WINTST1 WDTST Bit Symbol Read/Write R R R R R R R R After reset 0 0 1 1 0 0 1

WINTST2	Watchdog timer interrupt request signal factor status 2		No watchdog timer interrupt request signal has occurred. A watchdog timer interrupt request signal has occurred due to the over-flow of the 8-bit up counter.
WINTST1	Watchdog timer interrupt request signal factor status 1	0 : 1 :	No watchdog timer interrupt request signal has occurred. A watchdog timer interrupt request signal has occurred due to releasing of the 8-bit up counter outside the clear time.
WDTST Watchdog timer operating state status		0 : 1 :	Operation disabled Operation enabled

Note 1: WDST<WINTST2> and WDST<WINTST1> are cleared to "0" by reading WDST.

Note 2: Values after reset are read from bits 7 to 3 of WDST.

Page 75 2019/08/01

5.3 Functions
TMP89FS62VUG

5.3 Functions

The watchdog timer can detect the CPU malfunctions and deadlock by detecting the overflow of the 8-bit up counter and detecting releasing of the 8-bit up counter outside the clear time.

The watchdog timer stoppage and other abnormalities can be detected by reading the count value of the 8-bit up counter at random times and comparing the value to the last read value.

5.3.1 Setting of enabling/disabling the watchdog timer operation

Setting WDCTR<WDTEN> to "1" enables the watchdog timer operation, and the 8-bit up counter starts counting the source clock.

WDCTR<WDTEN> is initialized to "1" after the warm-up operation that follows reset is released. This means that the watchdog timer is enabled.

To disable the watchdog timer operation, clear WDCTR<WDTEN> to "0" and write 0xB1 into WDCDR. Disabling the watchdog timer operation clears the 8-bit up counter to "0".

Note: If the overflow of the 8-bit up counter occurs at the same time as 0xB1 (disable code) is written into WDCDR with WDCTR<WDTEN> set at "1", the watchdog timer operation is disabled preferentially and the overflow detection is not executed.

To re-enable the watchdog timer operation, set WDCTR<WDTEN> to "1". There is no need to write a control code into WDCDR.

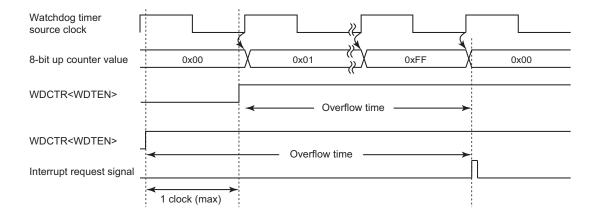


Figure 5-2 WDCTR<WDTEN> Set Timing and Overflow Time

Note: The 8-bit up counter source clock operates out of synchronization with WDCTR<WDTEN>. Therefore, the first overflow time of the 8-bit up counter after WDCTR<WDTEN> is set to "1" may get shorter by a maximum of 1 source clock. The 8-bit up counter must be cleared within the period of the overflow time minus 1 source clock cycle.

5.3.2 Setting the clear time of the 8-bit up counter

WDCTR<WDTW> sets the clear time of the 8-bit up counter.

When WDCTR<WDTW> is "00", the clear time is equal to the overflow time of the 8-bit up counter, and the 8-bit up counter can be cleared at any time.

When WDCTR<WDTW> is not "00", the clear time is fixed to only a certain period within the overflow time of the 8-bit up counter. If the operation for releasing the 8-bit up counter is attempted outside the clear time, a watchdog timer interrupt request signal occurs.

At this time, the watchdog timer is not cleared but continues counting. If the 8-bit up counter is not cleared within the clear time, a watchdog timer reset request signal or a watchdog timer interrupt request signal occurs due to the overflow, depending on the WDCTR<WDTOUT> setting.



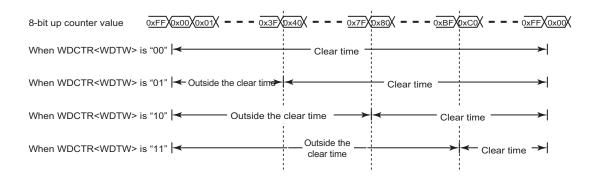


Figure 5-3 WDCTR<WDTW> and the 8-bit up Counter Clear Time

5.3.3 Setting the overflow time of the 8-bit up counter

WDCTR<WDTT> sets the overflow time of the 8-bit up counter.

When the 8-bit up counter overflows, a watchdog timer reset request signal or a watchdog timer interrupt request signal occurs, depending on the WDCTR<WDTOUT> setting.

If the watchdog timer interrupt request signal is selected as the malfunction detection signal, the watchdog counter continues counting, even after the overflow has occurred.

The watchdog timer temporarily stops counting up in the STOP mode (including warm-up) or in the IDLE/SLEEP mode, and restarts counting up after the STOP/IDLE/SLEEP mode is released. To prevent the 8-bit up counter from overflowing immediately after the STOP/IDLE/SLEEP mode is released, it is recommended to clear the 8-bit up counter before the operation mode is changed.

Table 5-1 Watchdog Timer Overflow Time (fcgck=10.0 MHz; fs=32.768 kHz)

	Watchdog timer overflow time [s]							
WDTT	NORMA	SLOW						
	DV9CK = 0	DV9CK = 1	mode					
00	26.21 m	62.50 m	62.50 m					
01	104.86 m	250.00 m	250.00 m					
10	419.43 m	1.000	1.000					
11	1.678	4.000	4.000					

Note: The 8-bit up counter source clock operates out of synchronization with WDCTR<WDTEN>. Therefore, the first overflow time of the 8-bit up counter after WDCTR<WDTEN> is set to "1" may get shorter by a maximum of 1 source clock. The 8-bit up counter must be cleared within a period of the overflow time minus 1 source clock cycle.

5.3.4 Setting an overflow detection signal of the 8-bit up counter

WDCTR<WDTOUT> selects a signal to be generated when the overflow of the 8-bit up counter is detected.

1. When the watchdog timer interrupt request signal is selected (when WDCTR<WDTOUT> is "0")

Releasing WDCTR<WDTOUT> to "0" causes a watchdog timer interrupt request signal to occur when the 8-bit up counter overflows.

A watchdog timer interrupt is a non-maskable interrupt, and its request is always accepted, regardless of the interrupt master enable flag (IMF) setting.

Note: When a watchdog timer interrupt is generated while another interrupt, including a watchdog timer interrupt, is already accepted, the new watchdog timer interrupt is processed immediately and the preceding interrupt is put

Page 77 2019/08/01

5.3 Functions
TMP89FS62VUG

on hold. Therefore, if watchdog timer interrupts are generated continuously without execution of the RETN instruction, too many levels of nesting may cause a malfunction of the microcontroller.

2. When the watchdog timer reset request signal is selected (when WDCTR<WDTOUT> is "1")

Setting WDCTR<WDTOUT> to "1" causes a watchdog timer reset request signal to occur when the 8-bit up counter overflows.

This watchdog timer reset request signal resets the TMP89FS62V and starts the warm-up operation.

5.3.5 Writing the watchdog timer control codes

The watchdog timer control codes are written into WDCDR.

By writing 0x4E (clear code) into WDCDR, the 8-bit up counter is cleared to "0" and continues counting the source clock.


When WDCTR<WDTEN> is "0", writing 0xB1 (disable code) into WDCDR disables the watchdog timer operation

To prevent the 8-bit up counter from overflowing, clear the 8-bit up counter in a period shorter than the overflow time of the 8-bit up counter and within the clear time.

By designing the program so that no overflow will occur, the program malfunctions and deadlock can be detected through interrupts generated by watchdog timer interrupt request signals.

By applying a reset to the microcomputer using watchdog timer reset request signals, the CPU can be restored from malfunctions and deadlock.

Example: When WDCTR<WDTEN> is "0", set the watchdog timer detection time to 2²⁰/fcgck [s], set the counter clear time to half of the overflow time, and allow a watchdog timer reset request signal to occur if a malfunction is detected.

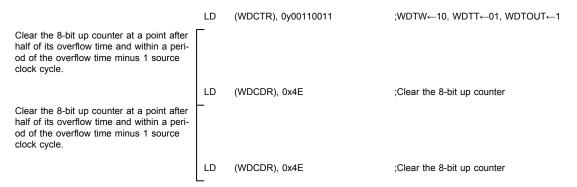

Note: If the overflow of the 8-bit up counter and writing of 0x4E (clear code) into WDCDR occur simultaneously, the 8-bit up counter is cleared preferentially and the overflow detection is not executed.

5.3.6 Reading the 8-bit up counter

The counter value of the 8-bit up counter can be read by reading WDCNT.

The stoppage of the 8-bit up counter can be detected by reading WDCNT at random times and comparing the value to the last read value.

5.3.7 Reading the watchdog timer status

The watchdog timer status can be read at WDST.

WDST<WDTST> is set to "1" when the watchdog timer operation is enabled, and it is cleared to "0" when the watchdog timer operation is disabled.



WDST<WINTST2> is set to "1" when a watchdog timer interrupt request signal occurs due to the over-flow of the 8-bit up counter.

WDST<WINTST1> is set to "1" when a watchdog timer interrupt request signal occurs due to the operation for releasing the 8-bit up counter outside the clear time.

You can know which factor has caused a watchdog timer interrupt request signal by reading WDST<WINTST2> and WDST<WINTST1> in the watchdog timer interrupt service routine.

WDST<WINTST2> and WDST<WINTST1> are cleared to "0" when WDST is read. If WDST is read at the same time as the condition for turning WDST<WINTST2> or WDST<WINTST1> to "1" is satisfied, WDST<WINTST2> or WDST<WINTST1> is set to "1", rather than being cleared.

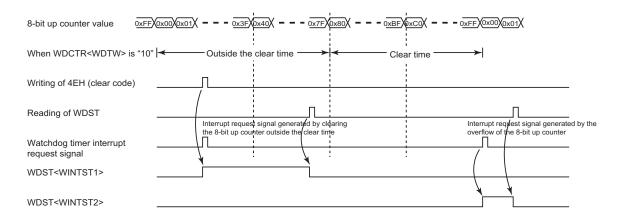


Figure 5-4 Changes in the Watchdog Timer Status

Page 79 2019/08/01

5. Watchdog Timer (WDT)

5.3 Functions

TMP89FS62VUG

6. Power-on Reset Circuit

The power-on reset circuit generates a reset when the power is turned on. When the supply voltage is lower than the detection voltage of the power-on reset circuit, a power-on reset signal is generated.

6.1 Configuration

The power-on reset circuit consists of a reference voltage generation circuit and a comparator.

The supply voltage divided by ladder resistor is compared with the voltage generated by the reference voltage generation circuit by the comparator.

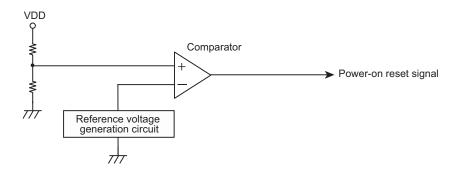


Figure 6-1 Power-on Reset Circuit

6.2 Function

When power supply voltage goes on, if the supply voltage is equal to or lower than the releasing voltage of the power-on reset circuit, a power-on reset signal is generated and if it is higher than the releasing voltage of the power-on reset circuit, a power-on reset signal is released.


When power supply voltage goes down, if the supply voltage is equal to or lower than the detecting voltage of the power-on reset circuit, a power-on reset signal is generated.

Until the power-on reset signal is generated, a warm-up circuit and a CPU is reset.

When the power-on reset signal is released, the warm-up circuit is activated. The reset of the CPU and peripheral circuits is released after the warm-up time that follows reset release has elapsed.

Increase the supply voltage into the operating range during the period from detection of the power-on reset release voltage until the end of the warm-up time that follows reset release. If the supply voltage has not reached the operating range by the end of the warm-up time that follows reset release, the TMP89FS62V cannot operate properly.

6.2 Function TMP89FS62VUG

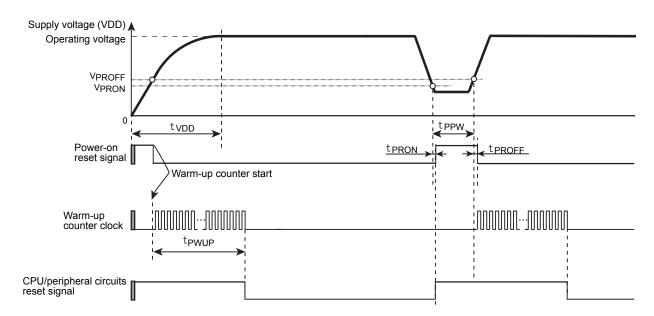

- Note 1: The power-on reset circuit may operate improperly, depending on fluctuations in the supply voltage (V_{DD}). Refer to the electrical characteristics and take them into consideration when designing equipment.
- Note 2: About turning on power supply after turning off, be sure to lower the power supply voltage below the detecting voltage of the power-on reset circuit (V_{PRON}) and hold it for 1 ms or more. After that, please follow the same constraints as when turning on the power and turn on the power supply voltage.
- Note 3: For the AC timing, refer to the electrical characteristics.

Figure 6-2 Operation Timing of Power-on Reset

Voltage Detection Circuit

The voltage detection circuit detects any decrease in the supply voltage and generates INTVLTD interrupt request signals and voltage detection reset signals.

Note: The voltage detection circuit may operate improperly, depending on fluctuations in the supply voltage (VDD). Refer to the electrical characteristics and take them into consideration when designing equipment.

7.1 Configuration

The voltage detection circuit consists of a reference voltage generation circuit, a detection voltage level selection circuit, a comparator and control registers.

The supply voltage (VDD) is divided by the ladder resistor and input to the detection voltage selection circuit. The detection voltage selection circuit selects a voltage according to the specified detection voltage (VD1LVL), and the comparator compares it with the reference voltage. When the comparator detects the selected volt-age, a voltage detection reset signal or an INTVLTD interrupt request signal can be generated.

Whether to generate a voltage detection reset signal or an INTVLTD interrupt request signal can be programmed by software. In the former case, a voltage detection reset signal is generated when the supply voltage (VDD) becomes lower than the detection voltage (VD1LVL). In the latter case, an INTVLTD interrupt request signal is generated when the supply voltage (VDD) falls to the detection voltage level.

Note: Since the comparators used for voltage detection do not have a hysteresis structure, INTVLTD interrupt request signals may be generated frequently if the supply voltage (VDD) is close to the detection voltage (VD1LVL). INTVLTD interrupt request signals may be generated not only when the supply voltage falls to the detection voltage but also when it rises to the detection voltage.

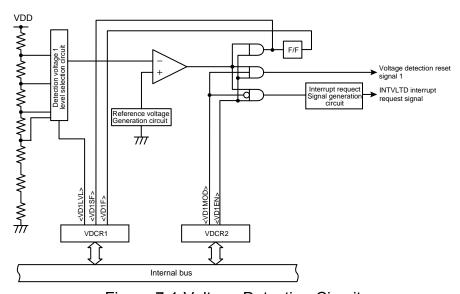


Figure 7-1 Voltage Detection Circuit

7.2 Control TMP89FS62VUG

7.2 Control

The voltage detection circuit is controlled by voltage detection control registers 1 and 2.

Voltage detection control register 1

VDCR1 (0x0FC6)

	7	6	5	4	3	2	1	0
Bit Symbol	"0"	-	"1"	"0"	VD1F	VD1SF	VD1	ILVL
Read/Write	R/W	R	R/W	R/W	R/W	R	R/W	
After reset	0	0	1	0	0	0	0	0

	Voltage detection 1 flag (Retains		Read	Write
VD1F	the state when VDD < VD1LVL is	0:	VDD ≥ VD1LVL	Clears VD1F to "0"
	detected)		VDD < VD1LVL	-
	VD1SF VD1SF VD1LVL when they are read)		VDD ≥ VD1LVL	
VD1SF			VDD < VD1LVL	
		00:	4.50 +0.2 / -0.2V	
VD1LVL	Outside the foundation of the continue of	01:	Reserved	
VDILVL	Selection for detection voltage 1	10:	Reserved	
		11:	Reserved	

Note 1: VDCR1 is initialized by a power-on reset or an external reset input.

Note 2: When VD1F is cleared by the software and is set due to voltage detection at the same time, the setting due to voltage detection is given priority.

Note 3: VD1F cannot be programmed to "1" by the software.

Note 4: Bit 6 of VDCR1 will be read as the indeterminate value.

Note 5: Bit 7 and 4 of VDCR1 should be cleared to "0". And bit 5 of VDCR1 should be set to "1".

Voltage detection control register 2

VDCR2 (0x0FC7)

	/	О	5	4	3	2	1	
Bit Symbol	-	-	"0"	"0"	"0"	"0"	VD1MOD	VD1EN
Read/Write	R	R	R/W	R/W	R/W	R/W	R/W	R/W
After reset	0	0	0	0	0	0	0	0

VD1MOD	Selects the operation mode of voltage detection 1		Generates an INTVLTD interrupt request signal Generates a voltage detection reset signal		
VD1EN	Enables/disables the operation of voltage detection 1		Disables the operation of voltage detection 1 Enables the operation of voltage detection 1		

Note 1: VDCR2 is initialized by a power-on reset or an external reset input.

Note 2: Bits 7 and 6 of VDCR2 are read as "0".

Note 3: Bit 5 to 2 of VDCR2 should be cleared to "0".

7.3 Function

One detection voltage (VD1LVL) can be set in the voltage detection circuit. For each voltage, enabling/disabling the voltage detection and the operation to be executed when the supply voltage (VDD) falls to or below the detection voltage (VD1LVL) can be programmed.

7.3.1 Enabling/disabling the voltage detection operation

Setting VDCR2<VD1EN> to "1" enables the voltage detection operation. Setting it to "0" disables the operation.

VDCR2<VD1EN> is cleared to "0" immediately after a power-on reset or a reset by an external reset input is released.

Note: When the supply voltage (VDD) is lower than the detection voltage (VD1LVL), setting VDCR2<VD1EN> to "1" generates an INTVLTD interrupt request signal or a voltage detection reset sig-nal at the time.

7.3.2 Selecting the voltage detection operation mode

When VDCR2<VD1MOD> is set to "0", the voltage detection operation mode is set to generate INTVLTD interrupt request signals. When VDCR2<VD1MOD> is set to "1", the operation mode is set to generate voltage detection reset signals.

When the operation mode is set to generate INTVLTD interrupt signals (VDCR2<VD1MOD>="0")
 When VDCR2<VD1EN>="1", an INTVLTD interrupt request signal is generated when the supply
 voltage (VDD) falls to the detection voltage (VD1LVL).

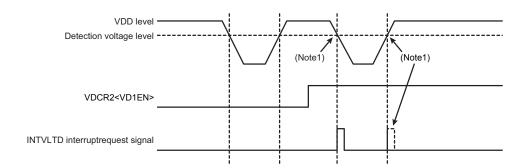


Figure 7-2 Voltage Detection Interrupt Request

Page 85

Note1: Since the comparators used for voltage detection do not have a hysteresis structure, INTVLTD interrupt request signals may be generated frequently when the supply voltage (VDD) is close to the detection volt-age (VD1LVL). INTVLTD interrupt request signals may be generated not only when the supply voltage falls to the detection voltage but also when it rises to the detection voltage.

Note2: If the supply voltage (VDD) falls to the detection voltage (VD1LVL) during IDLE0 or SLEEP0 mode, an INTVLTD interrupt request signal is generated after the TBT counts the specified period and IDLE0 or SLEEP mode is released. In the case of STOP mode, an INTLVTD interrupt request signal is generated after STOP mode is released by the STOP pin.

When the operation mode is set to generate voltage detection reset signals (VDCR2<VD1MOD>="1")
 When VDCR2<VD1EN> = "1", a voltage detection reset signal is generated when the supply voltage (VDD) becomes lower than the detection voltage (VD1LVL).

VDCR1 and VDCR2 are initialized by a power-on reset or an external reset input only. A voltage detection reset signal is generated continuously as long as the supply voltage (VDD) is lower than the detection voltage (VD1LVL).

7.3 Function TMP89FS62VUG

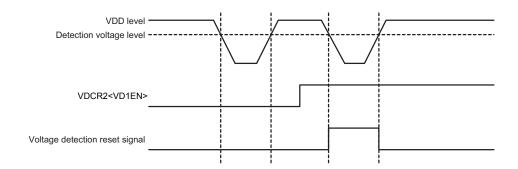


Figure 7-3 Voltage Detection Reset Signal

7.3.3 Selecting the detection voltage level

Select a detection voltage at VDCR1<VD1LVL>.

7.3.4 Voltage detection flag and voltage detection status flag

The magnitude relation between the supply voltage (VDD) and the detection voltage (VD1LVL) can be checked by reading VDCR1<VD1F> and VDCR1<VD1SF>.

If VDCR2<VD1EN> is set at "1", when the supply voltage (VDD) becomes lower than the detection voltage (VD1LVL), VDCR1<VD1F> is set to "1" and is held in this state. VDCR1<VD1F> is not cleared to "0" when the supply voltage (VDD) becomes equal to or higher than the detection voltage (VD1LVL).

When VDCR2<VD1EN> is cleared to "0" after VDCR1<VD1F> is set to "1", the previous state is still held. To clear VDCR1<VD1F>, "0" must be written to it.

If VDCR2<VD1EN> is set at "1", when the supply voltage (VDD) becomes lower than the detection voltage (VD1LVL), VDCR1<VD1SF> is set to "1". When the supply voltage (VDD) becomes equal to or higher than the detection voltage (VD1LVL), VDCR1<VD1SF> is cleared to "0".

Unlike VDCR1<VD1F>, VDCR1<VD1SF> does not hold the set state.

- Note 1: When the supply voltage (VDD) becomes lower than the detection voltage (VD1LVL) in the STOP, IDLE0 or SLEEP0 mode, the voltage detection flag and the voltage detection status flag are changed after the operation mode is returned to NORMAL or SLOW mode.
- Note 2: Depending on the voltage detection timing, the voltage detection status flag (VD1SF) may be changed earlier than the voltage detection flag (VD1F) by a maximum of 2/fcgck[s].

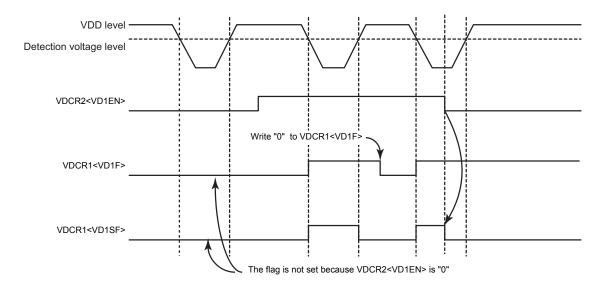


Figure 7-4 Changes in the Voltage Detection Flag and the Voltage Detection Status Flag

Page 87 2019/08/01

7.4 Register Settings
TMP89FS62VUG

7.4 Register Settings

7.4.1 Setting procedure when the operation mode is set to generate INTVLTD interrupt request signals

When the operation mode is set to generate INTVLTD interrupt request signal, make the following setting:

- 1. Clear the voltage detection circuit interrupt enable flag to "0".
- 2. Set the detection voltage at VDCR1<VD1LVL>.
- 3. Clear VDCR2<VD1MOD> to "0" to set the operation mode to generate INTVLTD interrupt request signals.
- 4. Set VDCR2<VD1EN> to "1" to enable the voltage detection operation.
- 5. Wait for 5 [µs] or more until the voltage detection circuit becomes stable.
- 6. Make sure that VDCR1<VD1SF> is "0".
- 7. Clear the voltage detection circuit interrupt latch to "0" and set the interrupt enable flag to "1" to enable interrupts.

Note: When the supply voltage (VDD) is close to the detection voltage (VD1LVL), voltage detection request signals may be generated frequently. If this may pose any problem, execute appropriate wait processing depending on fluctuations in the system power supply and clear the interrupt latch before returning from the INTVLTD interrupt service routine.

To disable the voltage detection circuit while it is enabled with the INTVLTD interrupt request, make the following setting:

- 1. Clear the voltage detection circuit interrupt enable flag to "0".
- 2. Clear VDCR2<VD1EN> to "0" to disable the voltage detection operation.

Note: If the voltage detection circuit is disabled without clearing interrupt enable flag, unexpected interrupt request may occur.

7.4.2 Setting procedure when the operation mode is set to generate voltage detection reset signals

When the operation mode is set to generate voltage detection reset signals, make the following setting:

- 1. Clear the voltage detection circuit interrupt enable flag to "0".
- 2. Set the detection voltage at VDCR1<VD1LVL>.
- 3. Clear VDCR2<VD1MOD> to "0" to set the operation mode to generate INTVLTD interrupt request signals.
- 4. Set VDCR2<VD1EN> to "1" to enable the voltage detection operation.
- 5. Wait for 5 [μ s] or more until the voltage detection circuit becomes stable.
- 6. Make sure that VDCR1<VD1SF> is "0".



- 7. Clear VDCR1<VD1F> to "0".
- 8. Set VDCR2<VD1MOD> to "1" to set the operation mode to generate voltage detection reset signals.
- Note 1: VDCR1 and VDCR2 are initialized by a power-on reset or an external reset input only. If the supply voltage (VDD) becomes lower than the detection voltage (VD1LVL) in the period from release of the voltage detection reset until clearing of VDCR2<VD1EN> to "0", a voltage detection reset signal is generated imme-diately.
- Note 2: The voltage detection reset signals are generated continuously as long as the supply voltage (VDD) is lower than the detection voltage (VD1LVL).

To disable the voltage detection circuit while it is enabled with the voltage detection reset, make the following setting:

- 1. Clear the voltage detection circuit interrupt enable flag to "0".
- 2. Clear VDCR2<VD1MOD> to "0" to set the operation mode to generate INTVLTD interrupt request signals.
- 3. Clear VDCR2<VD1EN> to "0" to disable the voltage detection operation.

Note: If the voltage detection circuit is disabled without clearing interrupt enable flag, unexpected interrupt request may occur.

7. Voltage Detection Circuit

7.4 Register Settings

TMP89FS62VUG



8. I/O Ports

The TMP89FS62V has 8 parallel input/output ports (39 pins) as follows:

Table 8-1 List of I/O Ports

Port name	Pin name	Number of pins	Input/output	Secondary functions
Port P0	P03 to P00 (Note1)	4 (Note1)	Input/output	Also used as the high-frequency oscillator connection pin and the low-frequency oscillator connection pin
Port P1	P11 to P10	2	Input/output	Also used as the external reset input, the external interrupt input and the STOP mode release signal input
Port P2	P23 to P20	4	Input/output	Also used as the UART input/output, the serial interface input/output
Port P4	P47 to P40	8	Input/output	Also used as the analog input and the key-on wakeup input
Port P7	P77 to P70	8	Input/output	Also used as the timer counter input/output, the divider output and the external interrupt input
Port P8	P81 to P80	2	Input/output	Also used as the timer counter input/output
Port P9	P94 to P90	5	Input/output	Also used as the UART input/output and the serial interface input/output
Port PB	PB5 to PB0	6	Input/output	Also used as the UART input/output

Note1:P00 and P01 pins can not be used for the I/O port, because they should be connected with the high frequency OSC input.

Note2 : The corresponding bit of the following registers and address, please change the initial value by the initial setting. For more information, refer to the description of each registers.

- Set the bit 3 and 2 to "1" of P1CR
- Set the bit 7 to 4 to "1" of P2CR
- Set the bit 4 to 2 to "1" of P8CR
- Set the bit 7 and 6 to "1" of PBCR
- Set the bit 7 to 0 to "1" of the register in 0x0F1F

Page 91 2019/08/01

TMP89FS62VUG

Each output port contains a latch, which holds the output data. No input port has a latch, so the external input data should be externally held until the input data is read from outside or reading should be performed several times before processing. Figure 8-1 shows input/output timing examples.

External data is read from an I/O port in the read cycle during execution of the read instruction. This timing cannot be recognized from outside, so that transient input such as chattering must be processed by the program. Data is output to an I/O port in the next cycle of the write cycle during execution of the write instruction.

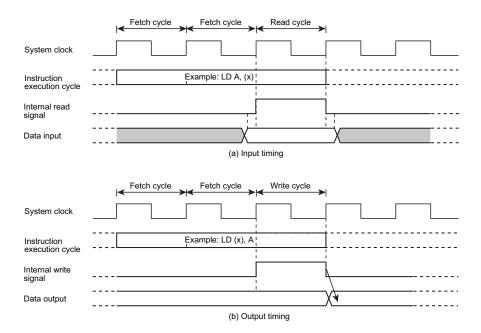


Figure 8-1 Input/Output Timing (Example)

Note: The positions of the read and write cycles may vary, depending on the instruction.

8.1 I/O Port Control Registers

The following control registers are used for I/O ports. (The port number is indicated in place of x.) Registers that can be set vary depending on the port. For details, refer to the description of each port.

· PxDR register

This is the register for setting output data. When a port is set to the "output mode", the value specified at PxDR is output from the port.

· PxPRD register

This is the register for reading input data. When a port is set to the "input mode", the current port input status can be read by reading PxPRD.

· PxCR register

This register switches a port between input and output. A port can be switched between the "input mode" and the "output mode".

· PxFC register

This register enables the secondary function output of each port. The secondary function output of each port can be enabled or disabled.

· PxOUTCR register

This register switches the port output between the C-MOS output and the open drain output.

· PxPU register

This register determines whether or not the built-in pull-up resistor is connected when a port is used in the input mode or as the open drain output.

8.2 List of I/O Port Settings
TMP89FS62VUG

8.2 List of I/O Port Settings

For the setting methods for individual I/O ports, refer to the following table.

Table 8-2 List of I/O Port Settings

Port name	Pin name	Function	Register set value				
roit name	Fill flattle	i unction	PxCR	PxOUTCR	PxFC	Other required settings	
Port P0	D00 to D00	Port input	0		0		
	P03 to P00	Port output	1		0		
	P03	XTOUT	*	Without	Without register		
	P02	XTIN	*	register	1		
	P01	XOUT	*		Without register		
	P00	XIN	*	*			
Port P1	D44	Port input	0				
	P11	Port output	1		Without register		
	D40	Port input	0]		Note 1	
	P10	Port output	1	Without register		Note 1	
	544	ĪNT5 input	0	_ register			
	P11	STOP input	0	7			
	P10	RESET input	*	1		Note 1	
Port P2		Port input	0	*	*		
	P23 to P20	Port output	1	**	0		
		SCLK0 input	0	*	*	SERSEL <srsel0>="10" SERSEL<srsel2>="0"</srsel2></srsel0>	
	P22	SCLK0 output	1	**	1	SERSEL <srsel0>="10" SERSEL<srsel2>="0"</srsel2></srsel0>	
		RXD0 input	0	*	*	SERSEL <srsel0>="0*" SERSEL<srsel2>="0" UATCNG<uat0io>="0"</uat0io></srsel2></srsel0>	
	P21	TXD0 output	1	**	1	SERSEL <srsel0>="0*" SERSEL<srsel2>="0" UATCNG<uat0io>="1"</uat0io></srsel2></srsel0>	
		SI0 input	0	*	*	SERSEL <srsel0>="10" SERSEL<srsel2>="0"</srsel2></srsel0>	
		TXD0 output		**	1	SERSEL <srsel0>="0*" SERSEL<srsel2>="0" UATCNG<uat0io>="0"</uat0io></srsel2></srsel0>	
	P20	RXD0 input	0	*	*	SERSEL <srsel0>="0*" SERSEL<srsel2>="0" UATCNG<uat0io>="1"</uat0io></srsel2></srsel0>	
		SO0 output	1	**	1	SERSEL <srsel0>="10" SERSEL<srsel2>="0"</srsel2></srsel0>	
Port P4		Port input	0	Without register	0		
		Port output	1		0		
	P47 to P40	AIN7 to AIN0	0		1		
		KWI7 to KWI4	*		*	KWUCR1	
		KWI3 to KWI0	*	╡	*	KWUCR0	



Table 8-2 List of I/O Port Settings

Port name	Pin name	Function			Register set	value
Torthame	1 III Hame	1 unction	PxCR	PxOUTCR	PxFC	Other required settings
Port P7	P77 to P70	Port input	0		*	
	P77 10 P70	Port output	1]	0	
	P77	INT4 input	0		Without register	
	P76	INT3 input	0		Without register	
	P75	INT2 input	0		Without register	
	P74	DVO output	1	Without	1	
	D70	TCA1 input	0	register	*	
	P73	PPGA1 output	1]	1	
	570	TCA0 input	0]	*	SERSEL <tca0sel>="00</tca0sel>
	P72	PPGA0 output	1]	1	
	5-4	TC01 input	0]	*	
	P71	PPG01 / PWM01 output	1]	1	
		TC00 input	0	1 1	*	
	P70	PPG00 / PWM00 output	1	1 1	1	
Port P8		Port input	0		*	
	P81 to P80	Port output	1	1	0	
		TC03 input	0	Without	*	
ļ f	P81	PPG03 / PWM03 output	1	register	1	
		TC02 input	0	1	*	
	P80	PPG02 / PWM02 output	1	1 1	1	
Port P9		Port input	0	*	*	
	P94 to P90	Port output	1	**	0	
		RXD2 input	0	*	0	UATCNG <uat2io>="0"</uat2io>
	P94	TXD2 output	1	**	1	UATCNG <uat2io>="1"</uat2io>
		TXD2 output	1	**	1	UATCNG <uat2io>="0"</uat2io>
	P93	RXD2 input	0	*	0	UATCNG <uat2io>="1"</uat2io>
		SCLK1 input	0	*	*	SERSEL <srsel1>="10"</srsel1>
	P92	SCLK1 output	1	**	1	SERSEL <srsel1>="10"</srsel1>
		RXD1 input	0	*	0	SERSEL <srsel1>="0*" UATCNG<uat1io>="0"</uat1io></srsel1>
	P91	TXD1 output	1	**	1	SERSEL <srsel1>="0*" UATCNG<uat1io>="1"</uat1io></srsel1>
		SI1 input	0	*	0	SERSEL <srsel1>="10"</srsel1>
		TXD1 output	1	**	1	SERSEL <srsel1>="0*" UATCNG<uat1io>="0"</uat1io></srsel1>
	P90	RXD1 input	0	*	0	SERSEL <srsel1>="0*" UATCNG<uat1io>="1"</uat1io></srsel1>
		SO1 output	1	**	1	SERSEL <srsel1>="10"</srsel1>
Port PB		Port input	0	*	*	
	PB5 to PB0	Port output	1	**	0	

Table 8-2 List of I/O Port Settings

Dord source	Dia nama	Function	Register set value						
Port name	Pin name	Function	PxCR	PxOUTCR	PxFC	Other required settings			
	DDS	RXD0 input	0	*	*	SERSEL <srsel0>="0*" SERSEL<srsel2>="1" UATCNG<uatoio>="0"</uatoio></srsel2></srsel0>			
	PB5	TXD0 output	1	**	1	SERSEL <srsel0>="0*" SERSEL<srsel2>="1" UATCNG<uatoio>="1"</uatoio></srsel2></srsel0>			
		TXD0 output	1	**	1	SERSEL <srsel0>="0*" SERSEL<srsel2>="1" UATCNG<uatoio>="0"</uatoio></srsel2></srsel0>			
	PB4	RXD0 input	0	*	*	SERSEL <srsel0>="0*" SERSEL<srsel2>="1" UATCNG<uatoio>="1"</uatoio></srsel2></srsel0>			

- Note 1: After the power is turned on, pin P10 serves as an external reset input. To use pin P10 as a port, refer to "How to use the external reset input pin as a port".
- Note 2: About SERSEL, please refer to "8.4 Serial Interface Selecting Function".
- Note 3: The symbol and numeric characters in the table have the following meanings:

Symbol and nu- meric characters	Meaning
0	Set "0".
1	Set "1".
*	Don't care (Operation is the same whether "1" or "0" is selected.)
**	The sink open drain output or the C-MOS output can be selected.
Without register	There is no register that corresponds to the bit.

8.3 I/O Port Registers

8.3.1 Port P0 (P03 to P00)

Port P0 is a 4-bit input/output port that can be set to input or output for each bit individually, and it is also used as the high-frequency oscillation connection pin and the low-frequency oscillation connection pin.

Port P0 contains a programmable pull-up resistor on the VDD side. This pull-up resistor can be used when the port is used in the input mode.

Table 8-3 Port P0

	-	-	1	-	P03	P02	P01	P00
Secondary function	-	-	-	-	XTOUT	XTIN	XOUT	XIN

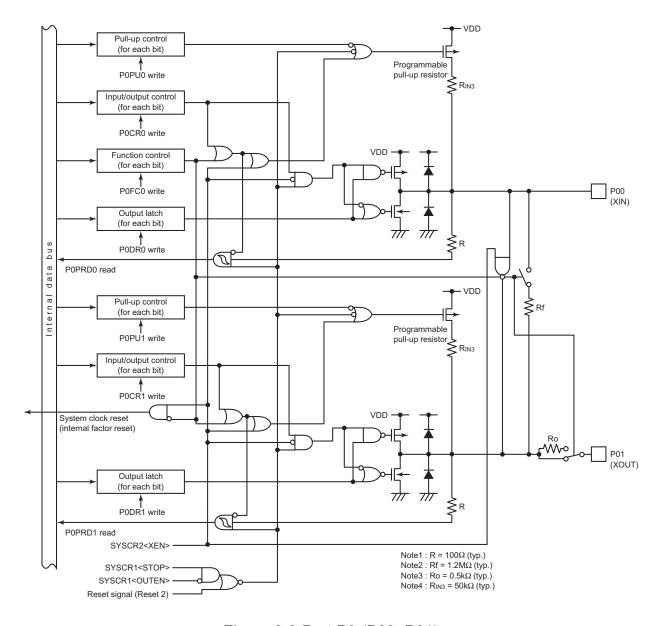


Figure 8-2 Port P0 (P00, P01)

Page 97 2019/08/01

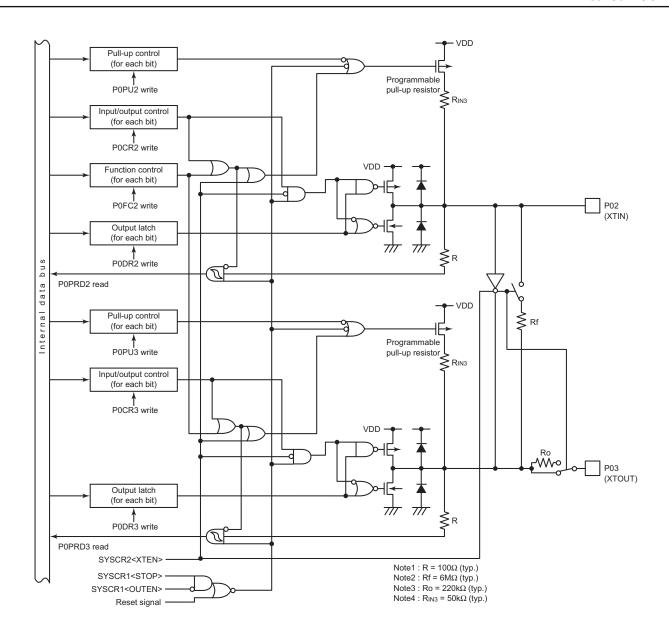


Figure 8-3 Port P0 (P02, P03)



Port P0 output latch

P0DR			7	6	5	4	3	2	1	0	
(0x0000)	Bit Symbo	ol	-	-	-	-	P03	P02	P01	P00	
	Read/Writ	te	R	R	R	R	R/W	R/W	R/W	R/W	
	After rese	et	0	0	0	0	0	0	0	0	
	Fatia.a	0:					Outputs L lev	el when the or	utput mode is	selected.	
	Function	1:					Outputs H le	vel when the output mode is selected.			

Port P0 input/output control

P0CR			7	6	5	4	3	2	1	0
(0x0F1A)	Bit Symbo	l	-	-	-	-	P0CR3	P0CR2	P0CR1	P0CR0
	Read/Writ	е	R	R	R	R	R/W	R/W	R/W	R/W
	After rese	t	0	0	0	0	0	0	0	0
	0:						Input mode (port input)		
	Function	1:					Output mode	(port output)		

Note: P0CR1 and P0CR0 must be clear to "0".

Port P0 function control

P0FC			7	6	5	4	3	2	1	0
(0x0F34)	Bit Symbo	ol	-	-	-	-	-	P0FC2	-	P0FC0
	Read/Writ	е	R	R	R	R	R	R/W	R	R/W
	After rese	t	0	0	0	0	0	0	0	1
	Function	0:						Port func- tion		Port func- tion
		1:						XTIN (I)		XIN (I)

Note 1: When SYSCR2<XEN> is "1", setting P0FC0 to "0" generates a system clock (internal factor) reset. Normally, ports P00 or P01 are not used as ports, so P0FC0 must be set to "1".

Note 2: Symbol "I" means secondary function input

Port P0 built-in pull-up resistor control

P0PU			7	6	5	4	3	2	1	0
(0x0F27)	Bit Symb	ol	-	-	-	-	P0PU2	P0PU2	P0PU1	P0PU0
	Read/Wri	te	R	R	R	R	R/W	R/W	R/W	R/W
	After rese	et	0	0	0	0	0	0	0	0
	0:						The built-in pull-up resistor is not connected.			ed.
	Function	1:					The built-in pull-up resistor is connected. (The re is connected in the input mode only. Under any conditions, setting to "1" does not make the resistanceted.)			er any other

Page 99 2019/08/01

Port P0 input data

P0PRD		7	6	5	4	3	2	1	0
(0x000D)	Bit Symbol	-	-	-	-	P0PRD3	P0PRD2	P0PRD1	P0PRD0
	Read/Write	R	R	R	R	R	R	R	R
	After reset	0	0	0	0	*	*	*	*
	Function					If the port is are read. If n	in the input mo ot, "0" is read.	ode, the conter	its of the port

Table 8-4 P0PRD Read Value (P00 to P01)

Set co	ndition	DODDD: read walve
P0FC0	P0CRi	P0PRDi read value
*	1	"0"
1	*	"0"
0	0	Contents of port

Note 1: * : Don't care Note 2: i = 0, 1

Table 8-5 P0PRD Read Value (P02 to P03)

Set co	ndition	DODDD: read value
P0FC2	P0CRj	P0PRDj read value
*	1	"0"
1	*	"0"
0	0	Contents of port

Note 1: * : Don't care Note 2: j = 2, 3

8.3.2 Port P1 (P11 to P10)

Port P1 is a 2-bit input/output port that can be set to input or output for each bit individually, and is also used as the external interrupt input, the STOP mode release signal input and the external reset input.

Port P1 contains a programmable pull-up resistor on the VDD side. This pull-up resistor can be used when the port is used in the input mode.

After reset, pin P10 serves as the external reset input. To use pin P10 as a port, refer to "How to use external reset input pin as a port".

Table 8-6 Port P1

	-	-	-	-	-	-	P11	P10
Secondary	-	-	-	-	-	-	ĪNT5	RESET
function							STOP	

Page 101 2019/08/01

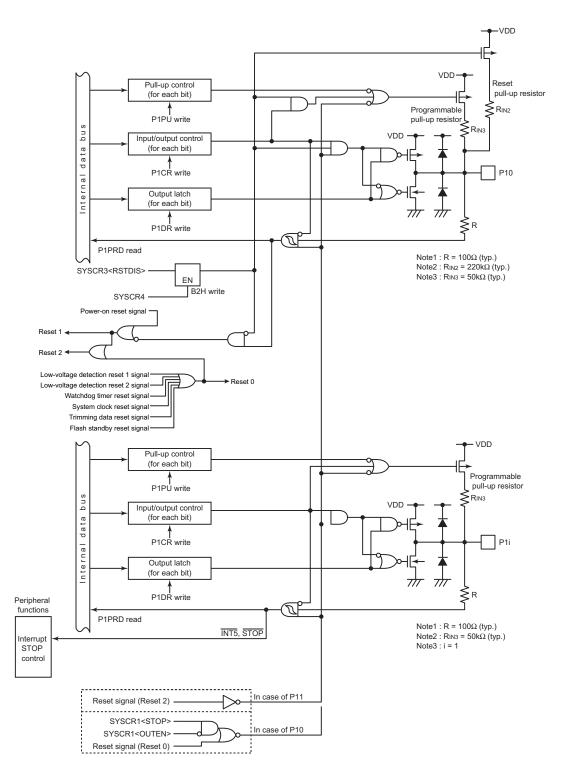


Figure 8-4 Port P1



Port P1 output latch

P1DR (0x0001)

		7	6	5	4	3	2	1	0	
Bit Symbo	ol	-	-	-	-	-	1	P11	P10	
Read/Write		R	R	R	R R		R/W	R/W	R/W	
After reset		0	0	0	0	0 0		0	0	
Function	0:					Clear thes	e bits to "0".	Outputs L level when the output mode is selected.		
Function	1:					-	-	Outputs H levoutput mode	vel when the is selected.	

Port P1 input/output control

P1CR			7	6	5	4	3	2	1	0
(0x0F1B)	Bit Symbo	ol	-	-	-	-	1	-	P1CR1	P1CR0
	Read/Writ	:e	R	R	R	R	R/W	R/W	R/W	R/W
	After rese	et	0	0	0	0	0	0	0	0
	Function								Input mode	
		0:					-	-	INT5 (I) STOP (I)	-
	(Note1)	1:					Set these bits to "1". (Note2)		Output mode	

Note 1: Symbol "I" means secondary function input

Note 2: When <IMF>=0, be sure to set bit 2 and 3 of P1CR to "1" in the initial setting of the program. And, after setting, clear bit 0 and 1 of ILE to "0".

Port P1 built-in pull-up resistor control

P1PU (0x0F28)

		7	6	5	4	3	2	1	0	
Bit Symb	ol	-	-	-	-	-	-	P1PU1	P1PU0	
Read/Wri	ite	R	R	R	R	R/W	R/W	R/W	R/W	
After res	et	0	0	0	0	0 0		0	0	
	0:					Clear thes	se bits to "0".	The built-in pull-up resistor is not connected.		
Function	1:					-	-	The built-in p is connected. is connected the port is us input mode or drain output. I other conditio "1" does not resistor connection.	(The resistor only when ed in the ras the open Under any ns, setting to nake the	

Port P1 input data

P1PRD (0x000E)

	7	6	5	4	3	2	1	0
Bit Symbol	-	-	-	-	-	-	P1PRD1	P1PRD0
Read/Write	R	R	R	R	R	R	R	R
After reset	0	0	0	0	*	*	*	*
Function					"0" is read. If the mode port a read.		If the port is i mode, the coport are read.	n the input ntents of the If not, "0" is

Page 103 2019/08/01

Table 8-7 P1PRD Read Value

Set condi- tion	P1PRDi read value
P1CRi	
0	Contents of port
1	"0"

Note 1: * : Don't care Note 2: i = 0 to 1

8.3.3 Port P2 (P23 to P20)

Port P2 is an 4-bit input/output port that can be set to input or output for each bit individually, and it is also used as the serial interface input/output, the UART input/output and the on-chip debug function.

The output circuit has the P-channel output control function and either the sink open drain output or the C-MOS output can be selected. Port P2 contains a programmable pull-up resistor on the VDD side. This pull-up resistor can be used when the port is used in the input mode or as a sink open drain output.

When this port is used as the serial interface or the UART, setting for serial interface selecting function is also needed. For details, refer to "8.4 Serial Interface Selecting Function".

For the on-chip debug function, refer to the chapter of "On-chip Debug Function (OCD)".

Table 8-8 Port P2

	-	-	-	-	P23	P22	P21	P20
	-	-	-	-	-		RXD0	TXD0
Secondary							TXD0	RXD0
function						SCLK0	SI0	SO0
							OCDIO	OCDCK

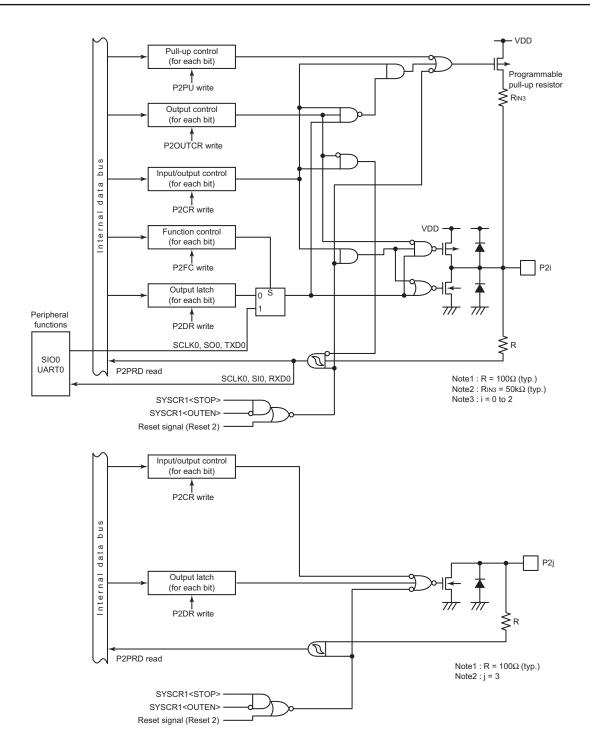


Figure 8-5 Port P2



Port P2 output latch

P2DR (0x0002)

		7	6	5	4	3	2	1	0
Bit Symbo	ol	-	1	1	-	P23	P22	P21	P20
Read/Write		R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
After reset		0	0	0	0	0	0	0	0
	0:		Clear these	bits to "0".	-	Outputs L le	vel when the c	output mode is	selected.
Function	1:	-	-	-	Outputs H level when the output (Serves as Hi-Z or pull-up dependent P2OUTCR and P2PU.)				

Port P2 input/output control

P2CR
(0x0F1C)

		7	6	5	4	3	2	1	0	
Bit Symb	ol	-	-	-	-	P2CR3	P2CR2	P2CR1	P2CR0	
Read/Wri	ite	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	
After res	et	0	0	0	0	0	0	0	0	
			-			Input mode (port input)			
	0:	_		_	_	_		RXD0 (I)		
Function							SCLK0 (I)	SI0 (I)	RXD0 (I)	
(Note1)						Output mode (port output)				
	1:		Set these I	bits to "1".		-			TXD0 (O)	
			(Not	e2)				TXD0(O)		
		_	_	_	_		SCLK0 (O)		SO0 (O)	

Note 1: Symbol "I" means secondary function input. Symbol "O" means secondary function output. Note 2: Be sure to set bit 7 to 4 of P2CR to "1" in the initial setting of the program.

Port P2 function control

P2FC			7	6	5	4	3	2	1	0
(0x0F36)	Bit Symbo	ol	-	-	-	-	-	P2FC2	P2FC1	P2FC0
	Read/Write		R	R	R/W	R/W	R/W	R/W	R/W	R/W
	After reset		0	0	0	0	0	0	0	0
		0:			CI	ear these bits t	o "0"	Port function		
	Function	1.								TXD0 (O)
		'			-	-	-		TXD0(O)	
								SCLK0 (O)		SO0 (O)

Port P2 output control

P2OUTCR			7	6	5	4	3	2	1	0
(0x0F43)	Bit Symbo	ol	-	-	-	-	-	P2OUT2	P2OUT1	P2OUT0
	Read/Writ	е	R/W	R/W	R/W	R	R	R/W	R/W	R/W
	After rese	t	0	0	0	0	0	0	0	0
	0:		Cle	ar these bits to	"0"			C-MOS outpu	ut	
	Function	1:	-	-	-			Open drain o	utput	

Port P2 built-in pull-up resistor control

P2PU			7	6	5	4	3	2	1	0
(0x0F29)	Bit Symbo	ol	-	-	-	-	-	P2PU2	P2PU1	P2PU0
	Read/Writ	:e	R/W	R/W	R/W	R	R	R/W	R/W	R/W
	After rese	et	0	0	0	0	0	0	0	0
		0:	Clea	Clear these bits to "0" The built-in pull-up resisted.				ull-up resistor i	s not connec-	
	Function	1:	-	-	-			(The resistor the port is us the open dra	oull-up resistor is connected of sed in the input in output. Unde etting to "1" do connected.)	only when mode or as er any other

Port P2 input data

P2PRD		7	6	5	4	3	2	1	0	
(0x000F)	Bit Symbol	-	1	-	-	P2PRD3	P2PRD2	P2PRD1	P2PRD0	
	Read/Write	R	R	R	R	R	R	R	R	
	After reset	*	*	*	*	*	*	*	*	
	Function		Āį	Á^æåÈ		The content of the port is always read.	If the port is used in the input mode or as the open drain output, the contents of the port are read. If not, "0" is read.			

Table 8-9 P2PRD Read Value (P20 to P22)

Set co	ndition	DODDD: read welve
P2CRi	P2OUTCRi	P2PRDi read value
0	*	Contents of port
1	0	"0"
1	1	Contents of port

Note 1: *: Don't care Note 2: i = 0 to 2

8.3.4 Port P4 (P47 to P40)

Port P4 is an 8-bit input/output port that can be set to input or output for each bit individually, and it is also used as the analog input and the key-on wakeup input.

Port P4 contains a programmable pull-up resistor on the VDD side. This pull-up resistor can be used when the port is used in the input mode.

Table 8-10 Port P4

	P47	P46	P45	P44	P43	P42	P41	P40
Secondary	AIN7	AIN6	AIN5	AIN4	AIN3	AIN2	AIN1	AIN0
function	KWI7	KWI6	KWI5	KWI4	KWI3	KWI2	KWI1	KWI0

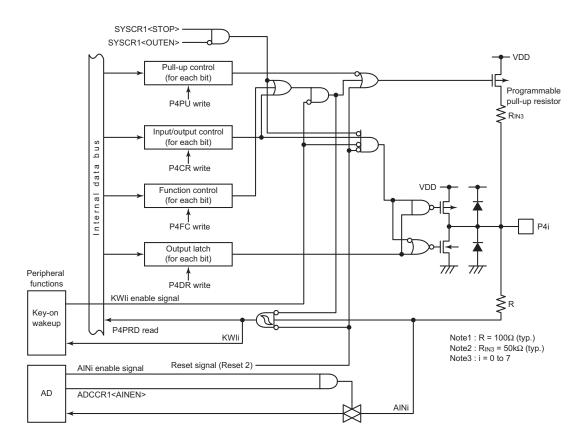


Figure 8-6 Port P4

Page 109 2019/08/01

Port P4 output latch

P4DR (0x0004)

		7	6	5	4	3	2	1	0				
Bit Symbol		P47	P46	P45	P44	P43	P42	P41	P40				
Read/Writ	te	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W				
After rese	et	0	0	0	0	0	0	0	0				
F atian	0:	Outputs L level when the output mode is selected.											
Function	1:	Outputs H le	Outputs H level when the output mode is selected.										

Port P4 input/output control

P4CR	
(0x0F1E)	

		7	6	5	4	3	2	1	0
Bit Symbol		P4CR7	P4CR6	P4CR5	P4CR4	P4CR3	P4CR2	P4CR1	P4CR0
Read/Writ	te	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
After rese	et	0	0	0	0	0	0	0	0
	٥.	Input mode (port input)						
Function	0:	AIN7 (I)	AIN6 (I)	AIN5 (I)	AIN4 (I)	AIN3 (I)	AIN2 (I)	AIN1 (I)	AIN0 (I)
	1:	Output mode	(port output)						

Note 1: Symbol "I" means secondary function input.

Note 2: When the key-on wakeup input (KWIi) is enabled (KWUCRm<KWnEN>="1"), there is no need to set P4CRi. (i=7 to 0, m=1 to 0, n=3 to 0)

Port P4 function control

P4FC
(0x0F38)

		7	6	5	4	3	2	1	0
Bit Symbol		P4FC7	P4FC6	P4FC5	P4FC4	P4FC3	P4FC2	P4FC1	P4FC0
Read/Writ	te	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
After rese	et	0	0	0	0	0	0	0	0
Function	0:	Port function							
Function	1:	AIN7 (I)	AIN6 (I)	AIN5 (I)	AIN4 (I)	AIN3 (I)	AIN2 (I)	AIN1 (I)	AIN0 (I)

Note 1: When the key-on wakeup input (KWIi) is enabled, there is no need to set P4FCi.

Port P4 built-in pull-up resistor control

P4PU (0x0F2B)

		7	6	5	4	3	2	1	0		
Bit Symbo	ol	P4PU7	P4PU6	P4PU5	P4PU4	P4PU3	P4PU2	P4PU1	P4PU0		
Read/Wri	te	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W		
After reset		0	0	0	0	0	0	0	0		
	0:	The built-in pull-up resistor is not connected.									
Function	1:	(The resistor		only when the				he port is used t make the res			



Port P4 input data

P4PRD		7	6	5	4	3	2	1	0	
(0x0011)	Bit Symbol	P4PRD7	P4PRD6	P4PRD5	P4PRD4	P4PRD3	P4PRD2	P4PRD1	P4PRD0	
	Read/Write	R	R	R	R	R	R	R	R	
	After reset	*	*	*	*	*	*	*	*	
	Function If the port is in the input mode, the contents of the port are read. If not, "0" is read.									

Table 8-11 P4PRD Read Value

Set co	ndition	DADDDi rood value					
P4CRi	P4FCi	P4PRDi read value					
0	0	Contents of port					
*	1	"0"					
1	*	"0"					

Note 1: * : Don't care Note 2: i = 0 to 7

Page 111 2019/08/01

8.3.5 Port P7 (P77 to P70)

Port P7 is an 8-bit input/output port that can be set to input or output for each bit individually, and it is also used as the external interrupt input, the divider output and the timer counter input/output.

Table 8-12 Port P7

	P77	P76	P75	P74	P73	P72	P71	P70
Secondary	INT4	INT3	INT2	DVO	PPGA1 TCA1	PPGA0 TCA0	PPG01 PWM01	PPG00 PWM00
function							TC01	TC00

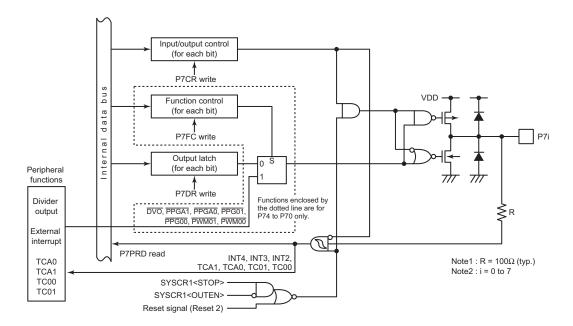


Figure 8-7 Port P7



Port P7 output latch

P7DR (0x0007)

		7	6	5	4	3	2	1	0	
Bit Symbo	ol	P77	P76	P75	P74	P73	P72	P71	P70	
Read/Writ	Read/Write		R/W							
After rese	After reset		0	0	0	0	0	0	0	
Function	0:	0: Outputs L level when the output mode is selected								
Function 1: Outputs H level when the output mode is selected										

Port P7 input/output control

P7CR (0x0F21)

			7	6	5	4	3	2	1	0
) [Bit Symbo	ol	P7CR7	P7CR6	P7CR5	P7CR4	P7CR3	P7CR2	P7CR1	P7CR0
	Read/Writ	te	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After rese	et	0	0	0	0	0	0	0	0
Input mode (port input)										
		0:	INT4 (I)	INT3 (I)	INT2 (I)	-	TCA1 (I)	TCA0 (I)	TC01 (I)	TC00 (I)
	Function		Output mode	(port output)						
		1:	-	-	-	DVO (O)	PPGA1 (O)	PPGA0 (O)	PPG01 (O)	PPG00 (O)
									PWM01 (O)	PWM00 (O)

Note: Symbol "I" means secondary function input. Symbol "O" means secondary function output.

Port P7 function control

P7FC (0x0F3B)

			7	6	5	4	3	2	1	0	
)	Bit Symbo	ol	-	-	-	P7FC3	P7FC3	P7FC2	P7FC1	P7FC0	
	Read/Write		R	R	R	R/W	R/W	R/W	R/W	R/W	
	After reset		0	0	0	0	0	0	0	0	
		0:				Port function					
	Function	1:				DVO (O)	PPGA1 (O)	PPGA0 (O)	PPG01 (O)	PPG00 (O)	
		۱ ^۰ .							PWM01 (O)	PWM00 (O)	

Port P7 input data

P7PRD (0x0014)

	/	О	5	4	3		1	U		
Bit Symbol	P7PRD7	P7PRD6	P7PRD5	P7PRD4	P7PRD3	P7PRD2	P7PRD1	P7PRD0		
Read/Write	R	R	R	R	R	R	R	R		
After reset	*	*	*	*	*	*	*	*		
Function	If the port is	f the port is used in the input mode, the contents of the port are read. If not, "0" is read.								

Table 8-13 P7PRD Read Value

Set condition	DZDDD: good walve
P7CRi	P7PRDi read value
0	Contents of port
1	"0"

Note 1: * : Don't care Note 2: i = 0 to 7

Page 113 2019/08/01

8.3 I/O Port Registers

8.3.6 Port P8 (P81 to P80)

Port P8 is a 2-bit input/output port that can be set to input or output for each bit individually, and it is also used as the timer counter input/output.

Table 8-14 Port P8

	-	-	-	-	-	-	P81	P80
Secondary function	-	-	-	-	-	-	PPG03 PWM03 TC03	PPG02 PWM02 TC02

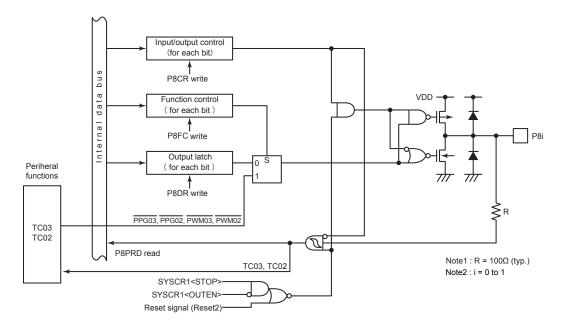


Figure 8-8 Port P8

PWM03 (O) PWM02 (O)



Port P8 output latch

P8DR (0x0008)

		7	6	5	4	3	2	1	0
Bit Symbo	ol	-	-	-	-	-	-	P81	P80
Read/Writ	:e	R	R	R	R/W	R/W	R/W	R/W	R/W
After rese	et	0	0	0	0	0	0	0	0
F	0:				Cle	ear these bits to	Outputs L level when the output mode is selected.		
Function	1:				-	-	-	Outputs H lev	

Port P8 input/output control

P8CR			7	6	5	4	3	2	1	0
(0x0F22)	Bit Symbo	ol	-	-	-	-	-	-	P8CR1	P8CR0
	Read/Wri	te	R	R	R	R/W	R/W	R/W	R/W	R/W
	After rese	et	0	0	0	0	0	0	0	0
						_	_	_	Input mode	
	Eupotion	0:							TC03 (I)	TC02 (I)
	Function (Note1)					Set these bits to "1".		. "4"	Output mode	(port output)
	, ,	1:				`	(Note2)	J I.	PPG03 (O)	PPG02 (O)
		1 1					(NOIEZ)		DWW03 (O)	DWW02 (O)

Note 1: Symbol "I" means secondary function input. Symbol "O" means secondary function output.

Note 2: Be sure to set bit 2 to 4 of P8CR to "1" in the initial setting of the program.

Port P8 function control

P8FC (0x0F3C)

		7	6	5	4	3	2	1	0
Bit Symbo	ol	-	-	-	-	-	-	P8FC1	P8FC0
Read/Writ	:e	R	R	R	R	R	R	R/W	R/W
After rese	et	0	0	0	0	0	0	0	0
	0:							Port function	
Function	1.							PPG03 (O)	PPG02 (O)
	١.							PWM03 (O)	PWM02 (O)

Port P8 input data

P8PRD (0x0015)

	7	6	5	4	3	2	1	0
Bit Symbol	-	-	-	-	-	-	P8PRD1	P8PRD0
Read/Write	R	R	R	R	R	R	R	R
After reset	0	0	0	*	*	*	*	*
Function					"0" is read.	If the port is input mode, to of the port an "0" is read.	used in the he contents e read. If not,	

Table 8-15 P8PRD Read Value

Set condition	P8PRDi read value
P8CRi	Popribli Tead Value
0	Contents of port
1	"0"

Note 1: *: Don't care

Note 2: i = 0 to 1

8.3.7 Port P9 (P94 to P90)

Port P9 is a 5-bit input/output port that can be set to input or output for each bit individually, and it is also used as the serial interface and the UART.

The output circuit has the P-channel output control function and either the sink open drain output or the C-MOS output can be selected. Port P9 contains a programmable pull-up resistor on the VDD side. This pull-up resistor can be used when the port is used in the input mode or as a sink open drain output.

When this port is used as the serial interface or the UART, setting for the serial interface selecting function is also needed. For details, refer to "8.4 Serial Interface Selecting Function".

Table 8-16 Port P9

	-	-	-	P94	P93	P92	P91	P90
Secondary	-	-	-	RXD2 TXD2	TXD2 RXD2		RXD1 TXD1	TXD1 RXD1
function						SCLK1	SI1	SO1

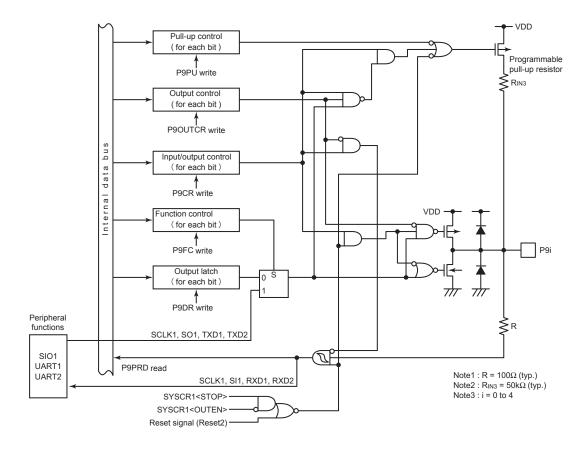


Figure 8-9 Port P9

Port P9 output latch

P9DR			7	6	5	4	3	2	1	0
(0x0009)	Bit Symbo	l	-	-	-	P94	P93	P92	P91	P90
	Bit Symbol Read/Write After reset 0:		R	R	R	R/W	R/W	R/W	R/W	R/W
	After reset		0	0	0	0	0	0	0	0
	0:					Outputs L level when the output mode is selected.				
	Function 1:								selected. (Ser TCR and P9PI	

Port P9 input/output control

P9CR			7	6	5	4	3	2	1	0	
(0x0F23)	Bit Symbo	ol	-	-	-	P9CR4	P9CR3	P9CR2	P9CR1	P9CR0	
	Read/Writ	:e	R	R	R	R/W	R/W	R/W	R/W	R/W	
	After rese	et	0	0	0	0	0	0	0	0	
						Input mode (port input)				
		0:				RXD2 (I)	RXD2 (I)		RXD1 (I)	RXD1 (I)	
	Function							SCLK1 (I)	SI1 (I)		
	Function					Output mode	(port output)				
		1:				TXD2 (O)	TXD2 (O)		TXD1 (O)	TXD1 (O)	
								SCLK1 (O)		SO1 (O)	

 $\label{lem:symbol} \textbf{"I" means secondary function input. Symbol "O" means secondary function output.}$



Port P9 function control

P9FC			7	6	5	4	3	2	1	0
(0x0F3D)	Bit Symbo	ol	-	-	-	P9FC4	P9FC3	P9FC2	P9FC1	P9FC0
	Read/Write		R	R	R	R/W	R/W	R/W	R/W	R/W
	After reset		0	0	0	0	0	0	0	0
	0:					Port function				
	Function					TXD2 (O)	TXD2 (O)		TXD1 (O)	TXD1 (O)
		<u> </u>						SCLK1 (O)		SO1 (O)

Port P9 output control

P9OUTCR			7	6	5	4	3	2	1	0
(0x0F4A)	Bit Symbo	ol	-	-	-	P9OUT4	P9OUT3	P9OUT2	P9OUT1	P9OUT0
	Read/Writ	е	R	R	R	R/W	R/W	R/W	R/W	R/W
	After reset		0	0	0	0	0	0	0	0
	0:					C-MOS outpu	ut			
	Function	1:				Open drain o	utput			

Port P9 built-in pull-up resistor control

P9PU			7	6	5	4	3	2	1	0
(0x0F30)	Bit Symbo	ol	-	-	-	P9PU4	P9PU3	P9PU2	P9PU1	P9PU0
	Read/Writ	:e	R	R	R	R/W	R/W	R/W	R/W	R/W
	After reset		0	0	0	0	0	0	0	0
		0:				The built-in p	ull-up resistor	is not connecte	ed.	
	Function	1:				ly when the p	oort is used in ny other conditi	the input mode	The resistor is one or as the open "1" does not m	en drain out-

Port P9 input data

P9PRD		7	6	5	4	3	2	1	0
(0x0016)	Bit Symbol	-	-	-	P9PRD4	P9PRD3	P9PRD2	P9PRD1	P9PRD0
	Read/Write	R	R	R	R	R	R	R	R
	After reset	0	0	0	*	*	*	*	*
	Function				If the port is the contents	used in the inp of the port are	out mode or as read. If not, "0	the sink open " is read.	drain output,

Table 8-17 P9PRD Read Value

Set co	ndition	DODDD: road value					
P9CRi	P9OUTCRi	P9PRDi read value					
0	*	Contents of port					
1	0	"0"					
1	1	Contents of port					

Note 1: * : Don't care Note 2: i = 0 to 4

Page 119 2019/08/01

8.3.8 Port PB (PB5 to PB0)

Port PB is an 6-bit input/output port that can be set to input or output for each bit individually, and it is also used as the UART input/output.

The output circuit has the P-channel output control function and either the sink open drain output or the C-MOS output can be selected.

When this port is used as the UART, setting for serial interface selecting function is also needed. For details, refer to "8.4 Serial Interface Selecting Function".

Table 8-18 Port PB

	-	-	PB5	PB4	PB3	PB2	PB1	PB0
Secondary	-	-	RXD0	TXD0	-	-	-	-
function			TXD0	RXD0				

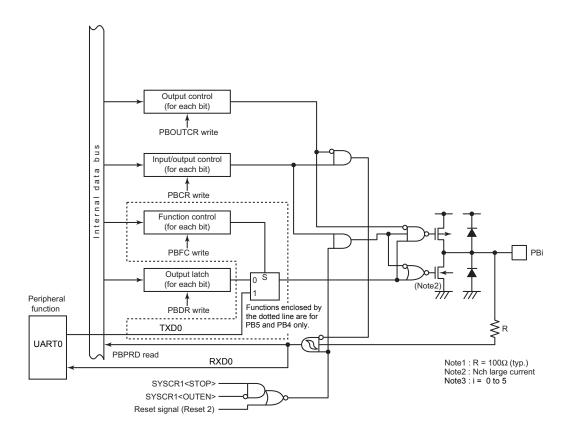


Figure 8-10 Port PB



Port PB output latch

PBDR (0x000B)

		7	6	5	4	3	2	1	0		
Bit Symbo	ol	-	-	PB5	PB4	PB3	PB2	PB1	PB0		
Read/Write		R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W		
After reset		0	0	0	0	0	0	0	0		
F	0:	Clear these	bits to "0".	Outputs L level when the output mode is selected.							
Function	1:	-	-	Outputs H le	vel when the o	utput mode is	selected.				

Port PB input/output control

PBCR	
(0x0F25)	

			7	6	5	4	3	2	1	0	
)	Bit Symbo	ol	1	-	PBCR5	PBCR4	PBCR3	PBCR2	PBCR1	PBCR0	
	Read/Writ	te	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W	
	After rese	et	0	0	0	0	0	0	0	0	
					Input mode (port input)						
		0:	-	-	RXD0 (I)					_	
	Function					RXD0 (I)	-	_	_	_	
	(Note1)		Set these	bits to "1".	Output mode (port output)						
		1:	(No	ote2)		TXD0 (O)					
					TXD0 (O)		-	-	-	-	

Note 1: Symbol "I" means secondary function input. Symbol "O" means secondary function output. Note 2: Be sure to set bit 6 to 7 of PBCR to "1" in the initial setting of the program.

Port PB function control

PBFC (0x0F3F)

		7	6	5	4	3	2	1	0
Bit Symbo	ol	-	-	PBFC5	PBFC4	-	-	-	-
Read/Wri	te	R	R/W	R/W	R/W	R	R	R	R
After rese	et	0	0	0	0	0	0	0	0
E	0:		Clear this bit to "0".	Port function					
Function	1:		-	TXD0 (O)	TXD0 (O)				
	Read/Writ	Function	Read/Write R After reset 0 0: Function	Read/Write R R/W After reset 0 0 Clear this bit to "0".	Read/Write R R/W R/W After reset 0 0 0 Clear this bit to "0". Port function	Read/Write R R/W R/W R/W After reset 0 0 0 0 Clear this bit to "0". Port function TXD0 (O)	Bit Symbol - - - PBFC5 PBFC4 - Read/Write R R/W R/W R/W R After reset 0 0 0 0 0 Clear this bit to "0". Port function TXD0 (O) TXD0 (O) TXD0 (O)	Bit Symbol - - PBFC5 PBFC4 - - Read/Write R R/W R/W R/W R R After reset 0 0 0 0 0 0 Function 0: Clear this bit to "0". Port function TXD0 (O) TXD0 (O)	Read/Write R R/W R/W R/W R R R After reset 0 0 0 0 0 0 0 0 0 Function 0: Clear this bit to "0". Port function TXD0 (O) TXD0 (O)

Port PB output control

PBOUTCR (0x0F4C)

		7	6	5	4	3	2	1	0
Bit Symbo	ol	1	-	PBOUT5	PBOUT4	PBOUT3	PBOUT2	PBOUT1	PBOUT0
Read/Writ	te	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
After rese	et	0	0	0	0	0	0	0	0
F atian	0:	Clear thes	e bit to "0".	C-MOS output					
Function	1:	-	-	Open drain output					

Port PB input data

PBPRD		7	6	5	4	3	2	1	0
(0x0018)	Bit Symbol	-	-	PBPRD5	PBPRD4	PBPRD3	PBPRD2	PBPRD1	PBPRD0
	Read/Write	R	R	R	R	R	R	R	R
	After reset	*	*	*	*	*	*	*	*
	Function	"0" is	read.		used in the inpread. If not, "0"		the open drain	n output, the co	ontents of

Table 8-19 PBPRD Read Value

Sation	andition		
Set condition		PBPRDi read value	
PBCRi	PBOUTCRi	PBPRDI lead value	
0	*	Contents of port	
1	0	"0"	
1	1	Contents of port	

Note 1: * : Don't care Note 2: i = 0 to 5

TMP89FS62VUG



8.4 Serial Interface Selecting Function

On the TMP89FS62V, the built-in serial interface (SIO, UART) communication pins and interrupt source assignment can be changed. Two out of three functions, SIO0, UART0, can be used at the same time by using this selecting function. One of two functions, SIO1 and UART1, can be used.

The input pins of the 16-bit timer counter A0 input (TCA0 input) can be changed by using this selecting function.

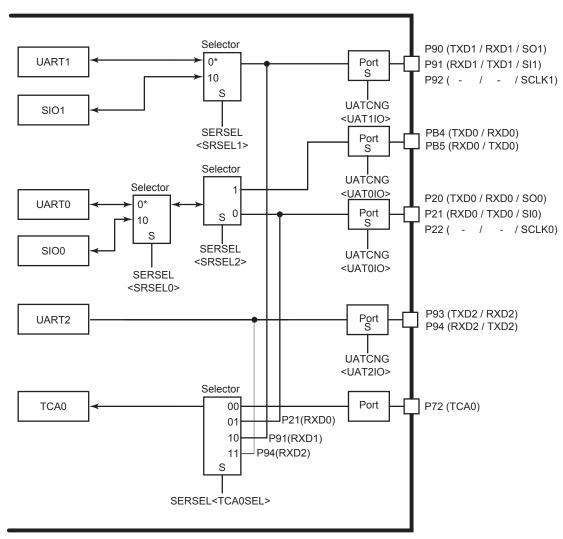


Figure 8-11 Serial Interface Selecting Function

Note: When the serial interfaces are used, the input/output control register should be configured other than configuring SERSEL register. For the detail, refer to "8.3 I/O port Registers".

Page 123 2019/08/01

8.4 Serial Interface Selecting Function

Serial interface selection control register

SERSEL
(0x0FCB)

		7	6	5	4	3	2	1	0
)	Bit Symbol	TCA	0SEL		SRSEL2	SRS	SEL1	SRS	SEL0
	Read/Write	R/W	R/W	R	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

TCA0SEL	16-bit timer counter A0 input switching	00: 01: 10: 11:	P21 input (also used as RXD0) P91 input (also used as RXD1)
SRSEL2	Select UART0 input/output port	0: 1:	Select P20, P21 Select PB4, PB5
SRSEL1	Serial interface selection 1	00: 01: 10: 11:	Select UART1 Select UART1 Select SIO1 Reserved
SRSEL0	Serial interface selection 0	00: 01: 10: 11:	Select UART0 Select UART0 Select SIO0 Reserved

- Note 1: The operation for changing SERSEL must be executed while the applicable serial interface and timer counter operations are stopped. If SERSEL is switched during operation of these peripheral functions, each peripheral function may receive (transmit) unexpected data and operate improperly.
- Note 2: It is recommended to clear the interrupt latch for the applicable serial interface immediately after changing SERSEL. Interrupt latches are common to INTRXD and INTSIO. Therefore, if an interrupt occurs be-fore or after SERSEL is switched, it is difficult to tell which function has caused the interrupt.
- Note 3: IF TCA0SEL to any values than "00", RXD pin of UART can be used timer counter input. Select the port pin for RXD pin in UATCNG (UART input/output change control register).

UART input/output change control register

UATCNG (0x0F57)

;		7	6	5	4	3	2	1	0
)	Bit Symbol	-	-	-	-	-	UAT2IO	UAT1IO	UAT0IO
	Read/Write	R	R	R	R	R	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

			RXI) pin	TXE) pin	
UAT2IO	Calact HADT2 input/ output part	0:	P94		P93		
UATZIO	Select UART2 input/ output port	1:	P93		P94		
UAT1IO	Calact HADT1 input/ output part	0:	0: P91		P90		
UATTIO	Select UART1 input/ output port	1:	P90		P91		
			SERSEL	SERSEL	SERSEL	SERSEL	
LIATOIO	JAT0IO Select UART0 input/ output port		<sersel2>="0"</sersel2>	<sersel2>="1"</sersel2>	<sersel2>="0"</sersel2>	<sersel2>="1"</sersel2>	
UATOIO			P21	PB5	P20	PB4	
			P20	PB4	P21	PB5	

Note 1: The operation for changing UATCNG must be executed while the applicable serial interface operations are stopped.

Note 2: When a read instruction is executed on UATCNG, bits 3 to 7 are read as "0".

Note 3: If you need to change the UATCNG setting, do so when UART communications are stopped.



Table 8-20 Select input/output port and interrupt

					Port				Intornunt	1	
SERSEL <srsel0></srsel0>	SERSEL <srsel2></srsel2>	UATCNG <uat0io></uat0io>		UART0/SIO0					Interrupt		
TOROLLOP	TOROLLE	10/110102	PB4	PB5	P20	P21	P22	IL7	IL6	IL15	
	0:	0:	Note 1	Note 1	TXD0	RXD0	Note 1				
00:	U:	1:	Note 1	Note 1	RXD0	TXD0	Note 1	INITTYDO	TXD0 INTRXD0	-	
00:	4.	0:	TXD0	RXD0	Note 4	Note 4	Note 4	INTIXDO			
	1:	1:	RXD0	TXD0	Note 1	Note 1	Note 1				
	0.	0:	Nata 4	Note 4	TXD0	RXD0	Note 4				
01:	0:	1:	Note 1	Note 1	RXD0	TXD0	Note 1	INTTXD0	INTRXD0	INTSIO0	
01:	1:	0:	TXD0	RXD0	Note 4	Note 1	Note 4	INTIXDO	INTRADO	INTSIOU	
	Į.	1:	RXD0	TXD0	Note 1	Note 1	Note 1				
10:	0:	0 or 1:	Note 1	Note 1	SO0	SI0	SCLK0	-	INTSIO0	-	
10:	1:	0 or 1:				F	Reserved				
11:	0 or 1:	0 or 1:		Reserved							

Note 1: Can be used as a port. (Set the function register (PxFC) to "0".)

Table 8-21 Select input/outout port and interrupt

OEDOEL	LIATONO		PORT		Interrupt		
SERSEL - SRSEL1>	UATCNG <uat1io></uat1io>	U	ART1/SIC)1			
TOROLLIF	30/11/10	P90	P91	P92	IL23	IL22	
00.	0:	TXD1	RXD1	Note 1	INTTXD1	INTRXD1	
00:	1:	RXD1	TXD1	Note 1	INTIXUI	INTRADT	
01:	0:	TXD1	RXD1	Note 1	INTTXD1	INTRXD1	
01.	1:	RXD1	TXD1	Note 1	INTIADI	INTRADT	
10:	0 or 1:	SO1	SI1	SCLK1	-	INTSIO1	
11:	0 or 1:			Reserv	red		

Note 1: Can be used as a port. (Set the function register (PxFC) to "0".)

Page 125 2019/08/01

8. I/O Ports

8.4 Serial Interface Selecting Function

TMP89FS62VUG

9. Special Function Registers

The TMP89FS62V adopts the memory mapped I/O system, and all peripheral hardware data control and transfer operations are performed through the special function registers (SFR). SFR1 is mapped on addresses 0x0000 to 0x003F, SFR2 is mapped on addresses 0x0F00 to 0x0FFF, and SFR3 is mapped on addresses 0x0E40 to 0x0EBF.

9.1 SFR1 (0x0000 to 0x003F)

Table 9-1 SFR1 (0x0000 to 0x003F)

Address	Register Name
0x0000	PODR
0x0001	P1DR
0x0002	P2DR
0x0003	Reserved
0x0004	P4DR
0x0005	Reserved
0x0006	Reserved
0x0007	P7DR
0x0008	P8DR
0x0009	P9DR
0x000A	Reserved
0x000B	PBDR
0x000C	Reserved
0x000D	P0PRD
0x000E	P1PRD
0x000F	P2PRD
0x0010	Reserved
0x0011	P4PRD
0x0012	Reserved
0x0013	Reserved
0x0014	P7PRD
0x0015	P8PRD
0x0016	P9PRD
0x0017	Reserved
0x0018	PBPRD
0x0019	Reserved
0x001A	UART0CR1
0x001B	UART0CR2
0x001C	UART0DR
0x001D	UART0SR
0x001E	TD0BUF/RD0BUF
0x001F	SIO0CR

Address	Register Name
0x0020	SIO0SR
0x0021	SIO0BUF
0x0022	Reserved
0x0023	Reserved
0x0024	Reserved
0x0025	Reserved
0x0026	T00REG
0x0027	T01REG
0x0028	T00PWM
0x0029	T01PWM
0x002A	T00MOD
0x002B	T01MOD
0x002C	T001CR
0x002D	TA0DRAL
0x002E	TA0DRAH
0x002F	TA0DRBL
0x0030	TA0DRBH
0x0031	TA0MOD
0x0032	TA0CR
0x0033	TA0SR
0x0034	ADCCR1
0x0035	ADCCR2
0x0036	ADCDRL
0x0037	ADCDRH
0x0038	DVOCR
0x0039	TBTCR
0x003A	EIRL
0x003B	EIRH
0x003C	EIRE
0x003D	EIRD
0x003E	Reserved
0x003F	PSW

Note 1: Do not access reserved addresses by the program.

9.2 SFR2 (0x0F00 to 0x0FFF)

Table 9-2 SFR2 (0x0F00 to 0x0F7F)

Address	Register Name
0x0F00	Reserved
0x0F01	Reserved
0x0F02	Reserved
0x0F03	Reserved
0x0F04	Reserved
0x0F05	Reserved
0x0F06	Reserved
0x0F07	Reserved
0x0F08	Reserved
0x0F09	Reserved
0x0F0A	Reserved
0x0F0B	Reserved
0x0F0C	Reserved
0x0F0D	Reserved
0x0F0E	Reserved
0x0F0F	Reserved
0x0F10	Reserved
0x0F11	Reserved
0x0F12	Reserved
0x0F13	Reserved
0x0F14	Reserved
0x0F15	Reserved
0x0F16	Reserved
0x0F17	Reserved
0x0F18	Reserved
0x0F19	Reserved
0x0F1A	P0CR
0x0F1B	P1CR
0x0F1C	P2CR
0x0F1D	Reserved
0x0F1E	P4CR
0x0F1F	Reserved

	1
Address	Register Name
0x0F20	Reserved
0x0F21	P7CR
0x0F22	P8CR
0x0F23	P9CR
0x0F24	Reserved
0x0F25	PBCR
0x0F26	Reserved
0x0F27	P0PU
0x0F28	P1PU
0x0F29	P2PU
0x0F2A	Reserved
0x0F2B	P4PU
0x0F2C	Reserved
0x0F2D	Reserved
0x0F2E	Reserved
0x0F2F	Reserved
0x0F30	P9PU
0x0F31	Reserved
0x0F32	Reserved
0x0F33	Reserved
0x0F34	P0FC
0x0F35	Reserved
0x0F36	P2FC
0x0F37	Reserved
0x0F38	P4FC
0x0F39	Reserved
0x0F3A	Reserved
0x0F3B	P7FC
0x0F3C	P8FC
0x0F3D	P9FC
0x0F3E	Reserved
0x0F3F	PBFC

	1
Address	Register Name
0x0F40	Reserved
0x0F41	Reserved
0x0F42	Reserved
0x0F43	P2OUTCR
0x0F44	Reserved
0x0F45	Reserved
0x0F46	Reserved
0x0F47	Reserved
0x0F48	Reserved
0x0F49	Reserved
0x0F4A	P9OUTCR
0x0F4B	Reserved
0x0F4C	PBOUTCR
0x0F4D	Reserved
0x0F4E	Reserved
0x0F4F	Reserved
0x0F50	Reserved
0x0F51	Reserved
0x0F52	Reserved
0x0F53	Reserved
0x0F54	UART1CR1
0x0F55	UART1CR2
0x0F56	UART1DR
0x0F57	UART1SR
0x0F58	TD1BUF/RD1BUF
0x0F59	Reserved
0x0F5A	UART2CR1
0x0F5B	UART2CR2
0x0F5C	UART2DR
0x0F5D	UART2SR
0x0F5E	TD2BUF/RD2BUF
0x0F5F	Reserved

Address	Register Name
0x0F60	Reserved
0x0F61	Reserved
0x0F62	Reserved
0x0F63	Reserved
0x0F64	Reserved
0x0F65	Reserved
0x0F66	Reserved
0x0F67	Reserved
0x0F68	Reserved
0x0F69	Reserved
0x0F6A	Reserved
0x0F6B	Reserved
0x0F6C	Reserved
0x0F6D	Reserved
0x0F6E	Reserved
0x0F6F	Reserved
0x0F70	SIO1CR
0x0F71	SIO1SR
0x0F72	SIO1BUF
0x0F73	Reserved
0x0F74	POFFCR0
0x0F75	POFFCR1
0x0F76	POFFCR2
0x0F77	POFFCR3
0x0F78	Reserved
0x0F79	Reserved
0x0F7A	Reserved
0x0F7B	Reserved
0x0F7C	Reserved
0x0F7D	Reserved
0x0F7E	Reserved
0x0F7F	Reserved

Note 1: Do not access reserved addresses by the program.



Table 9-3 SFR2 (0x0F80 to 0x0FFF)

Address	Register Name
0x0F80	Reserved
0x0F81	Reserved
0x0F82	Reserved
0x0F83	Reserved
0x0F84	Reserved
0x0F85	Reserved
0x0F86	Reserved
0x0F87	Reserved
0x0F88	T02REG
0x0F89	T03REG
0x0F8A	T02PWM
0x0F8B	T03PWM
0x0F8C	T02MOD
0x0F8D	T03MOD
0x0F8E	T023CR
0x0F8F	Reserved
0x0F90	Reserved
0x0F91	Reserved
0x0F92	Reserved
0x0F93	Reserved
0x0F94	Reserved
0x0F95	Reserved
0x0F96	Reserved
0x0F97	Reserved
0x0F98	Reserved
0x0F99	Reserved
0x0F9A	Reserved
0x0F9B	Reserved
0x0F9C	Reserved
0x0F9D	Reserved
0x0F9E	Reserved
0x0F9F	Reserved

Address	Register Name
0x0FA0	Reserved
0x0FA1	Reserved
0x0FA2	Reserved
0x0FA3	Reserved
0x0FA4	Reserved
0x0FA5	Reserved
0x0FA6	Reserved
0x0FA7	Reserved
0x0FA8	TA1DRAL
0x0FA9	TA1DRAH
0x0FAA	TA1DRBL
0x0FAB	TA1DRBH
0x0FAC	TA1MOD
0x0FAD	TA1CR
0x0FAE	TA1SR
0x0FAF	Reserved
0x0FB0	Reserved
0x0FB1	Reserved
0x0FB2	Reserved
0x0FB3	Reserved
0x0FB4	Reserved
0x0FB5	Reserved
0x0FB6	Reserved
0x0FB7	Reserved
0x0FB8	Reserved
0x0FB9	Reserved
0x0FBA	Reserved
0x0FBB	Reserved
0x0FBC	Reserved
0x0FBD	Reserved
0x0FBE	Reserved
0x0FBF	Reserved

Address	Register Name
0x0FC0	Reserved
0x0FC1	Reserved
0x0FC2	Reserved
0x0FC3	Reserved
0x0FC4	KWUCR0
0x0FC5	KWUCR1
0x0FC6	VDCR1
0x0FC7	VDCR2
0x0FC8	RTCCR
0x0FC9	Reserved
0x0FCA	Reserved
0x0FCB	SERSEL
0x0FCC	IRSTSR
0x0FCD	WUCCR
0x0FCE	WUCDR
0x0FCF	CGCR
0x0FD0	FLSCR1
0x0FD1	FLSCR2/FLSCRM
0x0FD2	FLSSTB
0x0FD3	Reserved
0x0FD4	WDCTR
0x0FD5	WDCDR
0x0FD6	WDCNT
0x0FD7	WDST
0x0FD8	-
0x0FD9	EINTCR2
0x0FDA	EINTCR3
0x0FDB	EINTCR4
0x0FDC	SYSCR1
0x0FDD	SYSCR2
0x0FDE	SYSCR3
0x0FDF	SYSCR4/SYSSR4

	•
Address	Register Name
0x0FE0	ILL
0x0FE1	ILH
0x0FE2	ILE
0x0FE3	ILD
0x0FE4	Reserved
0x0FE5	Reserved
0x0FE6	Reserved
0x0FE7	Reserved
0x0FE8	Reserved
0x0FE9	Reserved
0x0FEA	Reserved
0x0FEB	Reserved
0x0FEC	Reserved
0x0FED	Reserved
0x0FEE	Reserved
0x0FEF	Reserved
0x0FF0	ILPRS1
0x0FF1	ILPRS2
0x0FF2	ILPRS3
0x0FF3	ILPRS4
0x0FF4	ILPRS5
0x0FF5	ILPRS6
0x0FF6	Reserved
0x0FF7	Reserved
0x0FF8	Reserved
0x0FF9	Reserved
0x0FFA	Reserved
0x0FFB	Reserved
0x0FFC	Reserved
0x0FFD	Reserved
0x0FFE	Reserved
0x0FFF	Reserved

Note 1: Do not access reserved addresses by the program.

Page 129 2019/08/01

9.3 SFR3 (0x0E40 to 0x0EFF)

Table 9-4 SFR3 (0x0E40 to 0x0EBF)

Address	Register Name
0x0E40	Reserved
0x0E41	Reserved
0x0E42	Reserved
0x0E43	Reserved
0x0E44	Reserved
0x0E45	Reserved
0x0E46	Reserved
0x0E47	Reserved
0x0E48	Reserved
0x0E49	Reserved
0x0E4A	Reserved
0x0E4B	Reserved
0x0E4C	Reserved
0x0E4D	Reserved
0x0E4E	Reserved
0x0E4F	Reserved
0x0E50	Reserved
0x0E51	Reserved
0x0E52	Reserved
0x0E53	Reserved
0x0E54	Reserved
0x0E55	Reserved
0x0E56	Reserved
0x0E57	UATCNG
0x0E58	Reserved
0x0E59	Reserved
0x0E5A	Reserved
0x0E5B	Reserved
0x0E5C	Reserved
0x0E5D	Reserved
0x0E5E	Reserved
0x0E5F	Reserved

Address Register Name 0x0E60 Reserved 0x0E61 Reserved 0x0E62 Reserved 0x0E63 Reserved 0x0E64 Reserved 0x0E65 Reserved 0x0E66 Reserved 0x0E67 Reserved 0x0E68 Reserved 0x0E69 Reserved 0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6E Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7F Reserved 0x0E7F	Address	Desire Nove
0x0E61 Reserved 0x0E62 Reserved 0x0E63 Reserved 0x0E64 Reserved 0x0E65 Reserved 0x0E66 Reserved 0x0E67 Reserved 0x0E68 Reserved 0x0E69 Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6E Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7B Reserved 0x0E7D Reserved 0x0E7E Reserved	Address	Register Name
0x0E62 Reserved 0x0E63 Reserved 0x0E64 Reserved 0x0E65 Reserved 0x0E66 Reserved 0x0E67 Reserved 0x0E68 Reserved 0x0E69 Reserved 0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6D Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7E Reserved	0x0E60	Reserved
0x0E63 Reserved 0x0E64 Reserved 0x0E65 Reserved 0x0E66 Reserved 0x0E67 Reserved 0x0E68 Reserved 0x0E69 Reserved 0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6E Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E61	Reserved
0x0E64 Reserved 0x0E65 Reserved 0x0E66 Reserved 0x0E67 Reserved 0x0E68 Reserved 0x0E69 Reserved 0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6D Reserved 0x0E6E Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E62	Reserved
0x0E65 Reserved 0x0E66 Reserved 0x0E67 Reserved 0x0E68 Reserved 0x0E69 Reserved 0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6D Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E63	Reserved
0x0E66 Reserved 0x0E67 Reserved 0x0E68 Reserved 0x0E69 Reserved 0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6D Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E64	Reserved
0x0E67 Reserved 0x0E68 Reserved 0x0E69 Reserved 0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6D Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E65	Reserved
0x0E68 Reserved 0x0E69 Reserved 0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6D Reserved 0x0E6E Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7E Reserved	0x0E66	Reserved
0x0E69 Reserved 0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6D Reserved 0x0E6E Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7E Reserved	0x0E67	Reserved
0x0E6A Reserved 0x0E6B Reserved 0x0E6C Reserved 0x0E6D Reserved 0x0E6E Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7E Reserved	0x0E68	Reserved
0x0E6B Reserved 0x0E6C Reserved 0x0E6D Reserved 0x0E6E Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7E Reserved	0x0E69	Reserved
0x0E6C Reserved 0x0E6D Reserved 0x0E6E Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7E Reserved	0x0E6A	Reserved
0x0E6D Reserved 0x0E6E Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E6B	Reserved
0x0E6E Reserved 0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E6C	Reserved
0x0E6F Reserved 0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E6D	Reserved
0x0E70 Reserved 0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E6E	Reserved
0x0E71 Reserved 0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E6F	Reserved
0x0E72 Reserved 0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E70	Reserved
0x0E73 Reserved 0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E71	Reserved
0x0E74 Reserved 0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E72	Reserved
0x0E75 Reserved 0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E73	Reserved
0x0E76 Reserved 0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E74	Reserved
0x0E77 Reserved 0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E75	Reserved
0x0E78 Reserved 0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E76	Reserved
0x0E79 Reserved 0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E77	Reserved
0x0E7A Reserved 0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E78	Reserved
0x0E7B Reserved 0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E79	Reserved
0x0E7C Reserved 0x0E7D Reserved 0x0E7E Reserved	0x0E7A	Reserved
0x0E7D Reserved 0x0E7E Reserved	0x0E7B	Reserved
0x0E7E Reserved	0x0E7C	Reserved
	0x0E7D	Reserved
0x0E7F Reserved	0x0E7E	Reserved
	0x0E7F	Reserved

Address	Register Name
0x0E80	Reserved
0x0E81	Reserved
0x0E82	Reserved
0x0E83	Reserved
0x0E84	Reserved
0x0E85	Reserved
0x0E86	Reserved
0x0E87	Reserved
0x0E88	Reserved
0x0E89	Reserved
0x0E8A	Reserved
0x0E8B	Reserved
0x0E8C	Reserved
0x0E8D	Reserved
0x0E8E	Reserved
0x0E8F	Reserved
0x0E90	Reserved
0x0E91	Reserved
0x0E92	Reserved
0x0E93	Reserved
0x0E94	Reserved
0x0E95	Reserved
0x0E96	Reserved
0x0E97	Reserved
0x0E98	Reserved
0x0E99	Reserved
0x0E9A	Reserved
0x0E9B	Reserved
0x0E9C	Reserved
0x0E9D	Reserved
0x0E9E	Reserved
0x0E9F	Reserved

	1
Address	Register Name
0x0EA0	Reserved
0x0EA1	Reserved
0x0EA2	Reserved
0x0EA3	Reserved
0x0EA4	Reserved
0x0EA5	Reserved
0x0EA6	Reserved
0x0EA7	Reserved
0x0EA8	Reserved
0x0EA9	Reserved
0x0EAA	Reserved
0x0EAB	Reserved
0x0EAC	Reserved
0x0EAD	Reserved
0x0EAE	Reserved
0x0EAF	Reserved
0x0EB0	Reserved
0x0EB1	Reserved
0x0EB2	Reserved
0x0EB3	Reserved
0x0EB4	Reserved
0x0EB5	Reserved
0x0EB6	Reserved
0x0EB7	Reserved
0x0EB8	Reserved
0x0EB9	Reserved
0x0EBA	Reserved
0x0EBB	Reserved
0x0EBC	Reserved
0x0EBD	Reserved
0x0EBE	Reserved
0x0EBF	Reserved

Note 1: Do not access reserved addresses by the program.



Table 9-5 SFR3 (0x0EC0 to 0x0EFF)

Address	Register Name
0x0EC0	Reserved
0x0EC1	Reserved
0x0EC2	Reserved
0x0EC3	Reserved
0x0EC4	Reserved
0x0EC5	Reserved
0x0EC6	Reserved
0x0EC7	Reserved
0x0EC8	Reserved
0x0EC9	Reserved
0x0ECA	Reserved
0x0ECB	Reserved
0x0ECC	Reserved
0x0ECD	Reserved
0x0ECE	Reserved
0x0ECF	Reserved

Address	Register Name
0x0ED0	Reserved
0x0ED1	Reserved
0x0ED2	Reserved
0x0ED3	Reserved
0x0ED4	Reserved
0x0ED5	Reserved
0x0ED6	Reserved
0x0ED7	Reserved
0x0ED8	Reserved
0x0ED9	Reserved
0x0EDA	Reserved
0x0EDB	Reserved
0x0EDC	Reserved
0x0EDD	Reserved
0x0EDE	Reserved
0x0EDF	Reserved

Address	Register Name
0x0EE0	Reserved
0x0EE1	Reserved
0x0EE2	Reserved
0x0EE3	Reserved
0x0EE4	Reserved
0x0EE5	Reserved
0x0EE6	Reserved
0x0EE7	Reserved
0x0EE8	Reserved
0x0EE9	Reserved
0x0EEA	Reserved
0x0EEB	Reserved
0x0EEC	Reserved
0x0EED	Reserved
0x0EEE	Reserved
0x0EEF	Reserved

Address	Register Name
0x0EF0	Reserved
0x0EF1	Reserved
0x0EF2	Reserved
0x0EF3	Reserved
0x0EF4	Reserved
0x0EF5	Reserved
0x0EF6	Reserved
0x0EF7	Reserved
0x0EF8	Reserved
0x0EF9	Reserved
0x0EFA	Reserved
0x0EFB	Reserved
0x0EFC	Reserved
0x0EFD	Reserved
0x0EFE	Reserved
0x0EFF	Reserved

Note 1: Do not access reserved addresses by the program.

Page 131 2019/08/01

9. Special Function Registers

9.3 SFR3 (0x0E40 to 0x0EFF)

TMP89FS62VUG

10. Low Power Consumption Function for Peripherals

The TMP89FS62V has low power consumption registers (POFFCRn) that save power when specific peripheral functions are unused. Each bit of the low power consumption registers can be set to enable or disable each peripheral function. (n = 0, 1, 2, 3)

The basic clock supply to each peripheral function is disabled for power saving, by setting the corresponding bit of the low power consumption registers (POFFCRn) to "0". (The disabled peripheral functions become unavailable.) The basic clock supply to each peripheral function is enabled and the function becomes available by setting the corresponding bit of the low power consumption registers (POFFCRn) to "1".

After reset, the low power consumption registers (POFFCRn) are initialized to "0", and thus the peripheral functions are unavailable. When each peripheral function is used for the first time, be sure to set the corresponding bit of the low power consumption registers (POFFCRn) to "1" in the initial settings of the program (before operating the control register for the peripheral function).

When a peripheral function is operating, the corresponding bit of the low power consumption registers (POFFCRn) must not be changed to "0". If it is changed, the peripheral function may operate unexpectedly.

Page 133 2019/08/01

10.1 Control

10.1 Control

The low power consumption function is controlled by the low power consumption registers (POFFCRn). (n = 0, 1, 2, 3)

TMP89FS62VUG

Low power consumption register 0

POFFCR0		7	6	5	4	3	2	1	0
(0x0F74)	Bit Symbol	-	-	TC023EN	TC001EN	-	-	TCA1EN	TCA0EN
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

TC023EN	TC02 02 central	0	Disable
TCUZSEN	TC02, 03 control	1	Enable
TOOOAEN	TC00, 01 control	0	Disable
TC001EN	1Coo, or control	1	Enable
TCA1EN	TCA1 control	0	Disable
ICATEN		1	Enable
TOAOFN	TCA0 control	0	Disable
TCA0EN		1	Enable

Low power consumption register 1

POFFCR1		7	6	5	4	3	2	1	0
(0x0F75)	Bit Symbol	-	-	-	-	-	UART2EN	UART1EN	UART0EN
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

	UART2EN	LIADT2 control	0	Disable
	UARTZEN	UART2 control	1	Enable
	UART1EN	UART1 control	0	Disable
			1	Enable
	UART0EN	UART0 control	0	Disable
			1	Enable

Low power consumption register 2

POFFCR2 6 5 3 2 0 4 1 RTCEN (0x0F76) SIO1EN SIO0EN Bit Symbol R/W R/W R/W R/W Read/Write R/W R/W R/W R/W After reset 0 0 0 0 0 0

RTCEN	DTC control	0	Disable
RICEN	RTC control	1	Enable
OLOAEN	SIO1 control	0	Disable
SIO1EN		1	Enable
SIO0EN	SIO0 control	0	Disable
SIOUEIN		1	Enable



Low power consumption register 3

POFFCR3		7	6	5	4	3	2	1	0
(0x0F77)	Bit Symbol	-	-	INT5EN	INT4EN	INT3EN	INT2EN	-	-
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After recet		n	n	n		n	0	0

INITEEN	INITE control	0	Disable
INT5EN INT5 control		1	Enable
11.17.151	INITA control	0	Disable
INT4EN	INT4 control	1	Enable
INITOEN	INT3 control	0	Disable
INT3EN		1	Enable
INTOFN	INT2 control	0	Disable
INT2EN		1	Enable

Page 135 2019/08/01

10. Low Power Consumption Function for Peripherals

10.1 Control

TMP89FS62VUG

11. Divider Output (DVO)

This function outputs approximately 50% duty pulses that can be used to drive the piezoelectric buzzer or other device.

11.1 Configuration

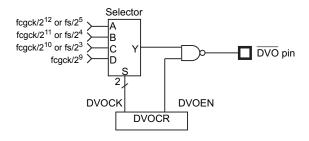


Figure 11-1 Divider Output

Page 137 2019/08/01

11.2 Control TMP89FS62VUG

11.2 Control

The divider output is controlled by the divider output control register (DVOCR).

Divider output control register

DVOCR		7	6	5	4	3	2	1	0
(0x0038)	Bit Symbol	-	-	-	-	-	DV0EN	DVOCK	
	Read/Write	R	R	R	R	R	R/W	R/W	
	After reset	0	0	0	0	0	0	0	0

DVOEN	Enables/disables the divider output		Disable the divider output Enable the divider output				
		NORMAL 1/2,	IDLE 1/2 mode	SLOW1/2			
			DV9CK=0	DV9CK=1	SLEEP1 mode		
DVOCK	Selects the divider output frequency	00	fcgck/2 ¹²	fs/2 ⁵	fs/2 ⁵		
	Unit: [Hz]	01	fcgck/2 ¹¹	fs/2 ⁴	fs/2 ⁴		
		10	fcgck/2 ¹⁰	fs/2³	fs/2 ³		
			fcgck/29	Reserved	Reserved		

Note 1: fcgck: Gear clock [Hz], fs: Low-frequency clock [Hz]

Note 2: DVOCR<DVOEN> is cleared to "0" when the operation is switched to STOP or IDLE0/SLEEP0 mode. DVOCR<DVOCK> holds the value.

Note 3: When SYSCR1<DV9CK> is "1" in the NORMAL 1/2 or IDLE 1/2 mode, the DVO frequency is subject to some fluctuations to synchronize fs and fcgck.

Note 4: Bits 7 to 3 of DVOCR are read as "0".

11.3 Function

Select the divider output frequency at DVOCR<DVOCK>.

The divider output is enabled by setting DVOCR<DVOEN> to "1". Then, The rectangular waves selected by DVOCR<DVOCK> is output from \overline{DVO} pin.

It is disabled by clearing DVOVR<DVOEN> to "0". And \overline{DVO} pin keeps "H" level.

When the operation is changed to STOP or IDLE0/SLEEP0 mode, DVOCR<DVOEN> is cleared to "0" and the \overline{DVO} pin outputs the "H" level.

The divider output source clock operates, regardless of the value of DVOCR<DVOEN>.

Therefore, the frequency of the first divider output after DVOCR<DVOEN> is set to "1" is not the frequency set at DVOCR<DVOCK>.

When the operation is changed to the software, STOP or IDLE0/SLEEP0 mode is activated and DVOCR<DVOEN> is cleared to "0", the frequency of the divider output is not the frequency set at DVOCR<DVOCK>.

 


Figure 11-2 Divider Output Timing

When the operation is changed from NORMAL mode to SLOW mode or from SLOW mode to NORMAL mode, the divider output frequency does not reach the expected value due to synchronization of the gear clock (fcgck) and the low-frequency clock (fs).

Example:2.441 kHz pulse output (fcgck = 10.0 MHz)

LD (DVOCR), 0y00000100 ;DVOCK \leftarrow "00", DVOEN \leftarrow "1"

Table 11-1 Divider Output Frequency (Example: fcgck = 10.0 MHz, fs = 32.768 kHz)

	D	z]		
DVOCK	NORMAL 1/2,	SLOW1/2, SLEEP1		
	DV9CK = 0	DV9CK = 1	mode	
00	2.441 k	1.024 k	1.024 k	
01	4.883 k	2.048 k	2.048 k	
10	9.766 k	4.096 k	4.096 k	
11	19.531 k	19.531 k Reserved		

Page 139 2019/08/01

11. Divider Output (DVO)

11.3 Function

TMP89FS62VUG

12. Time Base Timer (TBT)

The time base timer generates the time base for key scanning, dynamic display and other processes. It also provides a time base timer interrupt (INTTBT) in a certain cycle.

12.1 Time Base Timer

12.1.1 Configuration

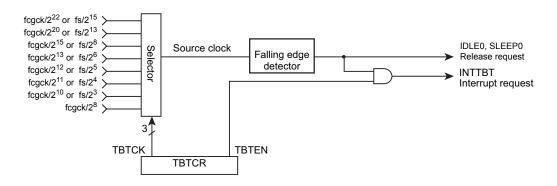


Figure 12-1 Time Base Timer Configuration

12.1.2 Control

The time base timer is controlled by the time base timer control register (TBTCR).

Time base timer control register

TBTCR		7	6	5	4	3	2	1	0
(0x0039)	Bit Symbol	-	-	-	-	TBTEN		TBTCK	
	Read/Write	R	R	R	R	R/W		R/W	
	After reset	0	0	0	0	0	0	0	0

TBTEN	Enables/disables the time base timer interrupt requests		Disables generation of interrupt request signals Enables generation of interrupt request signals				
		TDTOK	NORMAL 1/2,	IDLE 1/2 mode	SLOW1/2, SLEEP1		
		TBTCK	DV9CK = 0	DV9CK = 1	mode		
		000	fcgck/2 ²²	fs/2 ¹⁵	fs/2 ¹⁵		
		001	fcgck/2 ²⁰	fs/2 ¹³	fs/2 ¹³		
TDTOK	Selects the time base timer inter- rupt frequency	010	fcgck/2 ¹⁵	fs/2 ⁸	Reserved		
TBTCK	Unit: [Hz]	011	fcgck/2 ¹³	fs/2 ⁶	Reserved		
		100	fcgck/212	fs/2 ⁵	Reserved		
		101	fcgck/211	fs/2 ⁴	Reserved		
		110	fcgck/210	fs/2 ³	Reserved		
			fcgck/28	Reserved	Reserved		

Note 1: fcgck : Gear clock [Hz], fs : Low-frequency clock [Hz]

Note 2: When the operation is changed to the STOP mode, TBTCR<TBTEN> is cleared to "0" and TBTCR<TBTCK> maintains the value.

Note 3: TBTCR<TBTCK> should be set when TBTCR<TBTEN> is "0".

Page 141 2019/08/01

Note 4: When SYSCR1<DV9CK> is "1" in the NORMAL 1/2 or IDLE1/2 mode, the interrupt request is subject to some fluctuations to synchronize fs and fogck.

Note 5: Bits 7 to 4 of TBTCR are read as "0".

12.1.3 Functions

Select the source clock frequency for the time base timer by TBTCR<TBTCK>. TBTCR<TBTCK> should be changed when TBTCR<TBTEN> is "0". Otherwise, the INTTBT interrupt request is generated at unexpected timing.

Setting TBTCR<TBTEN> to "1" causes interrupt request signals to occur at the falling edge of the source clock. When TBTCR<TBTEN> is cleared to "0", no interrupt request signal will occur.

When the operation is changed to the STOP mode, TBTCR<TBTEN> is cleared to "0".

The source clock of the time base timer operates regardless of the TBTCR<TBTEN> value.

A time base timer interrupt is generated at the first falling edge of the source clock after a time base timer interrupt request is enabled. Therefore, the period from when the time TBTCR<TBTEN> is set to "1" to the time when the first interrupt request occurs is shorter than the frequency period set at TBTCR<TBTCK>.

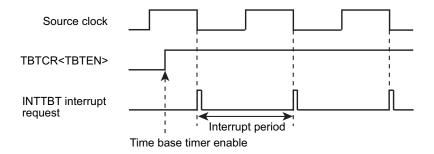


Figure 12-2 Time Base Timer Interrupt

When the operation is changed from NORMAL mode to SLOW mode or from SLOW mode to NORMAL mode, The interrupt request will not occur at the expected timing due to synchronization of the gear clock (fcgck) and the low-frequency clock (fs). It is recommend that the operation mode is changed when TBTCR<TBTEN> is "0".

Table 12-1 Time Base Timer Interrupt Frequency (Example: when fcgck = 10.0 MHz and fs = 32.768 kHz)

	Time base timer interrupt frequency [Hz]						
ТВТСК	NORMAL1/2, IDLE1/2 mode	NORMAL1/2, IDLE1/2 mode					
	DV9CK = 0	DV9CK = 1	SLOW1/2, SLEEP1 mode				
000	2.38	1	1				
001	9.54	4	4				
010	305.18	128	Reserved				
011	1220.70	512	Reserved				
100	2441.41	1024	Reserved				
101	4882.81	2048	Reserved				
110	9765.63	4096	Reserved				
111	39062.5	Reserved	Reserved				



Example:Set the time base timer interrupt frequency to fcgck/2¹⁵ [Hz] and enable interrupts.

DI ;IMF \leftarrow 0

SET (EIRL). 5 ;Set the interrupt enable register

EI ;IMF \leftarrow 1

LD (TBTCR), 0y00000010 ;Set the interrupt frequency

LD (TBTCR), 0y00001010 ;Enable generation of interrupt request signals

12. Time Base Timer (TBT)

12.1 Time Base Timer

TMP89FS62VUG

13. 16-bit Timer Counter (TCA)

The TMP89FS62V contains 2 channels of high-performance 16-bit timer counters (TCA).

This chapter describes the 16-bit timer counter A0. For the 16-bit timer counter A1, replace the SFR addresses and pin names, as shown in Table 13-1 and Table 13-2.

Table 13-1 SFR Address Assignment

	TAxDRAL (Address)	TAxDRAH (Address)	TAxDRBL (Address)	TAxDRBH (Address)	TAxMOD (Address)	TAxCR (Address)	TAxSR (Address)	Low power consumption register
Timer counter A0	TA0DRAL	TA0DRAH	TA0DRBL	TA0DRBH	TA0MOD	TA0CR	TA0SR	POFFCR0
	(0x002D)	(0x002E)	(0x002F)	(0x0030)	(0x0031)	(0x0032)	(0x0033)	<tca0en></tca0en>
Timer counter A1	TA1DRAL	TA1DRAH	TA1DRBL	TA1DRBH	TA1MOD	TA1CR	TA1SR	POFFCR0
	(0x0FA8)	(0x0FA9)	(0x0FAA)	(0x0FAB)	(0x0FAC)	(0x0FAD)	(0x0FAE)	<tca1en></tca1en>

Table 13-2 Pin Names

	Timer input pin	PPG output pin
Timer counter A0	TCA0 pin	PPGA0 pin
Timer counter A1	TCA1 pin	PPGA1 pin

13.1 Configuration TMP89FS62VUG

13.1 Configuration

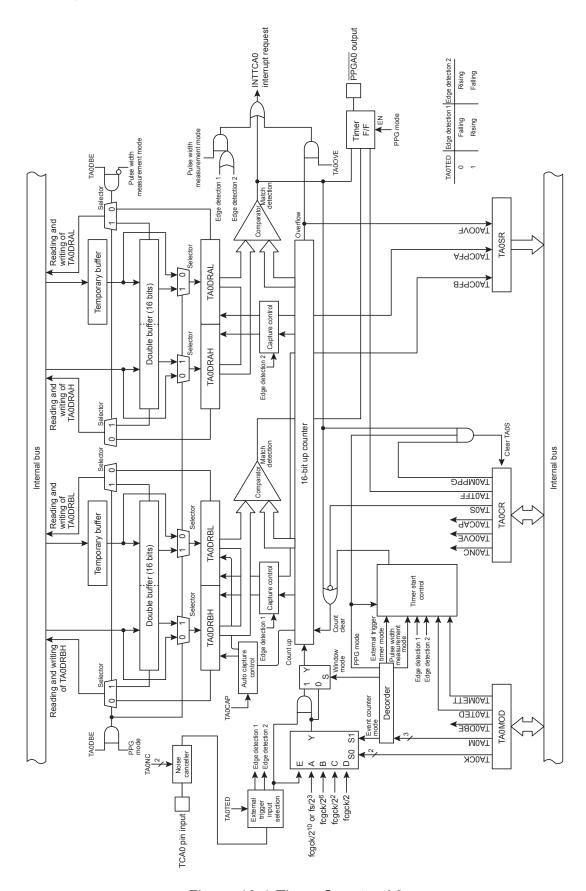


Figure 13-1 Timer Counter A0



13.2 Control

Timer Counter A0 is controlled by the low power consumption register (POFFCR0), the timer counter A0 mode register (TA0MOD), the timer counter A0 control register (TA0CR) and two 16-bit timer A0 registers (TA0DRA and TA0DRB).

Low power consumption register 0

POFFCR0		7	6	5	4	3	2	1	0
(0x0F74)	Bit Symbol	-	-	TC023EN	TC001EN	-	-	TCA1EN	TCA0EN
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

TC023EN	TC02, 03 control	0 1	Disable Enable
TC001EN	TC00, 01 control	0	Disable
TCOOTEN	1000, 01 control	1	Enable
TCA1EN	TCA1 control	0	Disable
ICATEN	TCAT control	1	Enable
TCA0EN	AOFAL TOAO control		Disable
ICAUEN	TCA0 control	1	Enable

Page 147 2019/08/01

13.2 Control

TMP89FS62VUG

Timer counter A0 mode register

After reset

1

0

TA0MOD 6 5 3 2 0 TA0MCAP (0x0031) Bit Symbol TA0DBE TA0TED TA0CK TA0M TA0METT Read/Write R/W R/W R/W R/W R/W

0

0

0

0

0

0

			1					
TA0DBE	Double buffer control	0	Disable the double buf	fer				
.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	2000.0 00	1	Enable the double buffer					
TA0TED	External trigger input selection		Rising edge/H level					
		1	Falling edge/L level					
TA0MCAP	Pulse width measurement mode	0	Double edge capture					
	control	1	Single edge capture					
TA0METT	External trigger timer mode control	0	Trigger start					
	35	1	Trigger start & stop		1			
			NORMAL 1/2 or	IDLE 1/2 mode	01.0\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\			
			SYSCR1 <dv9ck></dv9ck>	SYSCR1 <dv9ck></dv9ck>	SLOW1/2 or SLEEP1 mode			
			="0"	="1"				
TA0CK	Timer counter 1 source clock selection	00	fcgck/2 ¹⁰	fs/2 ³	fs/2 ³			
	lection	01	fcgck/26	fcgck/26	-			
		10	fcgck/2 ²	fcgck/2 ²	-			
		11	fcgck/2	fcgck/2	-			
		000	Timer mode		•			
		001	Timer mode	Timer mode				
		010	Event counter mode					
TA 014	Timer counter 1 operation mode	011	PPG output mode (Sof	tware start)				
TA0M	selection	100	External trigger timer n	node				
		101	Window mode					
		110	Pulse width measurem	ent mode				
		111	Reserved					

Note 1: fcgck, Gear clock [Hz]; fs, Low-frequency clock [Hz]

Note 2: Set TA0MOD in the stopped state (TA0CR<TA0S>="0"). Writing to TA0MOD is invalid during the operation (TA0CR<TA0S>="1").



Timer counter A0 control register

TA0CR (0x0032)

	7	6	5	4	3	2	1	0
Bit Symbol	TA00VE	TA0TFF	TAONC		-	-	TA0ACAP TA0MPPG	TA0S
Read/Write	R/W	R/W	R	/W	R	R	R/W	R/W
After reset	0	1	0	0	0	0	0	0

TA00VE	Overflow interrupt control	0	curs.	uest when the counter overflow oc-		
TA0TFF	Timer F/F control	0	Clear Set			
			NORMAL 1/2 or IDLE 1/2 mode	SLOW1/2 or SLEEP1 mode		
		00	No noise canceller	No noise canceller		
TA0NC	Noise canceller sampling interval setting	01	fcgck/2	-		
	9	10	fcgck/2 ²	-		
		11	fcgck/28	fs/2		
TA0ACAP	Auto capture function	0	Disable the auto capture			
TAUACAF	Auto capture function	1	Enable the auto capture			
TAOMPPG	PPG output control	0	Continuous			
TAUMFFG	11 G Galpat Control	1	One-shot			
TAOS	Timer counter A start control	0	Stop & counter clear			
1703	Timer counter A start control	1	Start			

- Note 1: The auto capture can be used only in the timer, event counter, external trigger timer and window modes.
- Note 2: Set TA0TFF, TA0OVE and TA0NC in the stopped state (TA0S="0"). Writing is invalid during the operation (TA0S="1").
- Note 3: When the STOP mode is started, the start control (TAOS) is automatically cleared to "0" and the timer stops. Set TAOS again to use the timer counter after the release of the STOP mode.
- Note 4: When a read instruction is executed on TA0CR, bits 3 and 2 are read as "0".
- Note 5: Do not set TA0NC to "01" or "10" when the SLOW 1/2 or SLEEP 1 mode is used. Setting TA0NC to "01" or "10" stops the noise canceller and no signal is input to the timer.

Page 149 2019/08/01

13.2 Control TMP89FS62VUG

Timer counter A0 status register

TA0SR		7	6	5	4	3	2	1	0
(0x0033)	Bit Symbol	TA00VF	-	-	-	-	-	TA0CPFA	TA0CPFB
	Read/Write	R	R	R	R	R	R	R	R
	After reset	0	0	0	0	0	0	0	0

	2		
TA00VF	Overflow flag	0	No overflow has occurred.
TAUCVF	Overnow hag	1	At least an overflow has occurred.
		0	No capture operation has been executed.
TA0CPFA	TA0CPFA Capture completion flag A		At least a pulse width capture has been executed in the double-edge capture.
		0	No capture operation has been executed.
TA0CPFB	Capture completion flag B	1	At least a capture operation has been executed in the single-edge capture.
			At least a pulse duty width capture has been executed in the double-edge capture.

Note 1: TA0OVF, TA0CPFA and TA0CPFB are cleared to "0" automatically after TA0SR is read. Writing to TA0SR is invalid.

Note 2: When a read instruction is executed on TAOSR, bits 6 to 2 are read as "0".



Timer counter A0 register AH

TA0DRAH		15	14	13	12	11	10	9	8		
(0x002E)	Bit Symbol		TAODRAH								
	Read/Write		R/W								
	After reset	1	1	1	1	1	1	1	1		

Timer counter A0 register AL

TA0DRAL		7	6	5	4	3	2	1	0	
(0x002D)	Bit Symbol		TAODRAL							
	Read/Write		R/W							
	After reset	1	1	1	1	1	1	1	1	

Timer counter A0 register BH

TA0DRBH		15	14	13	12	11	10	9	8		
(0x0030)	Bit Symbol		TA0DRBH								
	Read/Write		R/W								
	After reset	1	1	1	1	1	1	1	1		

Timer counter A0 register BL

TA0DRBL		7	6	5	4	3	2	1	0		
(0x002F)	Bit Symbol		TA0DRBL								
	Read/Write		R/W								
	After reset	1	1	1	1	1	1	1	1		

Note 1: When a write instruction is executed on TA0DRAL (TA0DRBL), the set value does not become effective immediately, but is temporarily stored in the temporary buffer. Subsequently, when a write instruction is executed on the higher-level register, TA0DRAH (TA0DRBH), the 16-bit set values are collectively stored in the double buffer or TA0DRAL/H. When setting data to the timer counter A0 register, be sure to write the data into the lower level register and the higher level in this order.

Note 2: The timer counter A0 register is not writable in the pulse width measurement mode.

Page 151 2019/08/01

13.3 Low Power Consumption Function

Timer counter A0 has the low power consumption register (POFFCR0) that saves power consumption when the timer is not used.

Setting POFFCR0<TCA0EN> to "0" disables the basic clock supply to timer counter A0 to save power. Note that this makes the timer unusable. Setting POFFCR0<TCA0EN> to "1" enables the basic clock supply to timer counter A0 and allows the timer to operate.

After reset, POFFCR0<TCA0EN> is initialized to "0", and this makes the timer unusable. When using the timer for the first time, be sure to set POFFCR0<TCA0EN> to "1" in the initial setting of the program (before the timer control register is operated).

Do not change POFFCR0<TCA0EN> to "0" during the timer operation. Otherwise timer counter A0 may operate unexpectedly.

13.4 Timer Function

Timer counter A0 has six types of operation modes; timer, external trigger timer, event counter, window, pulse width measurement and programmable pulse generate (PPG) output modes.

13.4.1 Timer mode

In the timer mode, the up-counter counts up using the internal clock, and interrupts can be generated regularly at specified times.

13.4.1.1 Setting

Setting the operation mode selection TA0MOD<TA0M> to "000" or "001" activates the timer mode. Select the source clock at TA0MOD<TA0CK>.

Setting TA0CR<TA0S> to "1" starts the timer operation. After the timer is started, writing to TA0MOD and TA0CR<TA0OVE> becomes invalid. Be sure to complete the required mode settings before starting the timer.

Table 13-3 Timer Mode Resolution and Maximum Time Setting

TA0MOD <ta0ck></ta0ck>		Source clock [Hz]		Reso	lution	Maximum time setting		
	NORMAL 1/2 or	IDLE 1/2 mode						
	SYSCR1 <dv9ck> = "0"</dv9ck>	SYSCR1 <dv9ck> = "1"</dv9ck>	SLOW1/2 or SLEEP1 mode	fcgck=10MHz	fs=32.768kHz	fcgck=10MHz	fs=32.768kHz	
00	fcgck/2 ¹⁰	fs/2 ³	fs/2 ³	102.4µs	244.1µs	6.7s	16s	
01	fcgck/26	fcgck/26	-	6.4µs	-	419.4ms	-	
10	fcgck/2 ²	fcgck/2 ²	-	400ns	-	26.2ms	-	
11	fcgck/2	fcgck/2	-	200ns	-	13.1ms	-	

13.4.1.2 Operation

Setting TA0CR<TA0S> to "1" allows the 16-bit up counter to increment based on the selected internal source clock. When a match between the up-counter value and the value set to timer register A (TA0DRA) is detected, an INTTCA0 interrupt request is generated and the up counter is cleared to "0x0000". After being cleared, the up counter continues counting. Setting TA0CR<TA0S> to "0" during the timer operation causes the up counter to stop counting and be cleared to "0x0000".

13.4.1.3 Auto capture

The latest contents of the up counter can be taken into timer register B (TA0DRB) by setting TA0CR<TA0ACAP> to "1" (auto capture function). When TA0CR<TA0ACAP> is "1", the current contents of the up counter can be read by reading TA0DRBL. TA0DRBH is loaded at the same time as TA0DRBL is read. Therefore, when reading the captured value, be sure to read TA0DRBL and TA0DRBH in this order. (The capture time is the timing when TA0DRBL is read.) The auto capture function can be used whether the timer is operating or stopped. When the timer is stopped, TA0DRBL is read as "0x00". TA0DRBH keeps the captured value after the timer stops, but it is cleared to "0x00" when TA0DRBL is read while the timer is stopped.

If the timer is started with TA0CR<TA0ACAP> written to "1", the auto capture is enabled immediately after the timer is started.

Note 1: The value set to TA0CR<TA0ACAP> cannot be changed at the same time as TA0CR<TA0S> is rewritten from "1" to "0". (This setting is invalid.)

13.4.1.4 Register buffer configuration

(1) Temporary buffer

The TMP89FS62V contains an 8-bit temporary buffer. When a write instruction is executed on TA0DRAL, the data is first stored into this temporary buffer, whether the double buffer is enabled or disabled. Subsequently, when a write instruction is executed on TA0DRAH, the set value is stored into the double buffer or TA0DRAH. At the same time, the set value in the temporary buffer is stored into the double buffer or TA0DRAL. (This structure is designed to enable the set values of the lower-level and higher-level registers simultaneously.) Therefore, when setting data to TA0DRA, be sure to write the data into TA0DRAL and TA0DRAH in this order.

See Figure 13-1 for the temporary buffer configuration.

(2) Double buffer

In the TMP89FS62V, the double buffer can be used by setting TA0CR<TA0DBF>. Setting TA0CR<TA0DBF> to "0" disables the double buffer. Setting TA0CR<TA0DBF> to "1" enables the double buffer.

See Figure 13-1 for the double buffer configuration.

- When the double buffer is enabled

When a write instruction is executed on TA0DRAH during the timer operation, the set value is first stored into the double buffer, and TA0DRAH/L are not updated immediately. TA0DRAH/L compare the up counter value to the last set values. If the values are matched, an INTTCA0 interrupt request is generated and the double buffer set value is stored in TA0DRAH/L. Subsequently, the match detection is executed using a new set value.

When a read instruction is executed on TA0DRAH/L, the double buffer value (the last set value) is read, rather than the TA0DRAH/L values (the current effective values).

When a write instruction is executed on TA0DRAH/L while the timer is stopped, the set value is immediately stored into both the double buffer and TA0DRAH/L.


- When the double buffer is disabled

When a write instruction is executed on TA0DRAH during the timer operation, the set value is immediately stored into TA0DRAH/L. Subsequently, the match detection is executed using a new set value.

If the values set to TA0DRAH/L are smaller than the up counter value, the match detection is executed using a new set value after the up counter overflows. Therefore, the interrupt request interval may be longer than the selected time. If that is a problem, enable the double buffer.

When a write instruction is executed on TA0DRAH/L while the timer is stopped, the set value is immediately stored into TA0DRAH/L.



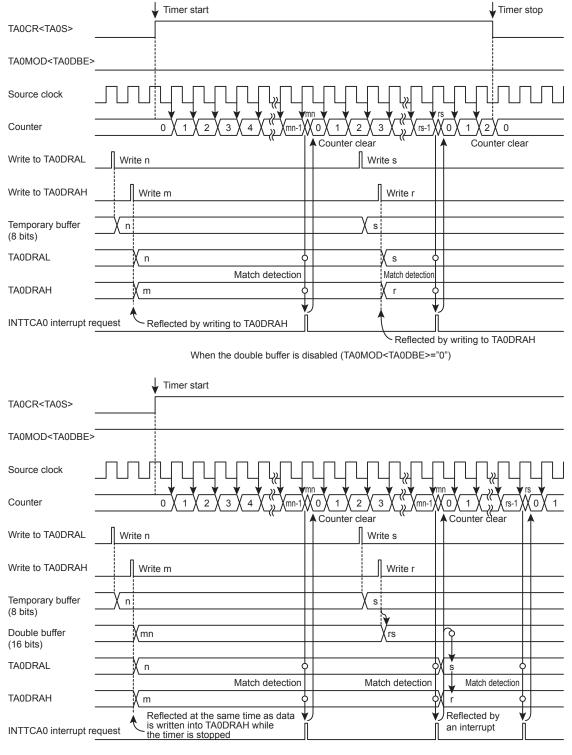

When the double buffer is enabled (TA0MOD<TA0DBE>="1")

Figure 13-2 Timer Mode Timing Chart

Page 155 2019/08/01

TMP89FS62VUG

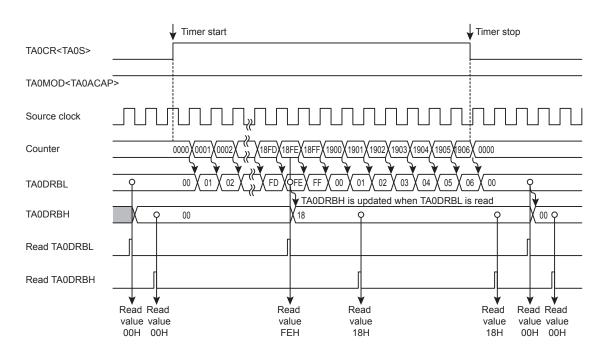


Figure 13-3 Timer Mode Timing Chart (Auto Capture)

13.4.2 External trigger timer mode

In the external trigger timer mode, the up counter starts counting when it is triggered by the input to the TCA0 pin.

13.4.2.1 Setting

Setting the operation mode selection TA0MOD<TA0M> to "100" activates the external trigger timer mode. Select the source clock at TA0MOD<TA0CK>.

Select the trigger edge at the trigger edge input selection TA0MOD<TA0TED>. Setting TA0MOD<TA0TED> to "0" selects the rising edge, and setting it to "1" selects the falling edge.

Note that this mode uses the TA0 input pin, and the TCA0 pin must be set to the input mode beforehand in port settings.

The operation is started by setting TA0CR<TA0S> to "1". After the timer is started, writing to TA0MOD and TA0CR<TA0OVE> is disabled. Be sure to complete the required mode settings before starting the timer.

13.4.2.2 Operation

After the timer is started, when the selected trigger edge is input to the TCA0 pin, the up counter increments according to the selected source clock. When a match between the up counter value and the value set to timer register A (TA0DRA) is detected, an INTTCA0 interrupt request is generated and the up counter is cleared to "0x0000". After being cleared, the up counter continues counting.

When TA0MOD<TA0METT> is "1" and the edge opposite to the selected trigger edge is detected, the up counter stops counting and is cleared to "0x0000". Subsequently, when the selected trigger edge is detected, the up counter restarts counting. In this mode, an interrupt request can be generated by detecting that the input pulse exceeds a certain pulse width. If TA0MOD<TA0METT> is "0", the detection of the selected edge and the opposite edge is ignored during the period from the detection of the specified trigger edge and the start of counting through until the match detection.


Setting TA0CR<TA0S> to "0" during the timer operation causes the up counter to stop counting and be cleared to "0x0000".

13.4.2.3 Auto capture

Refer to "13.4.1.3 Auto capture".

13.4.2.4 Register buffer configuration

Refer to "13.4.1.4 Register buffer configuration".

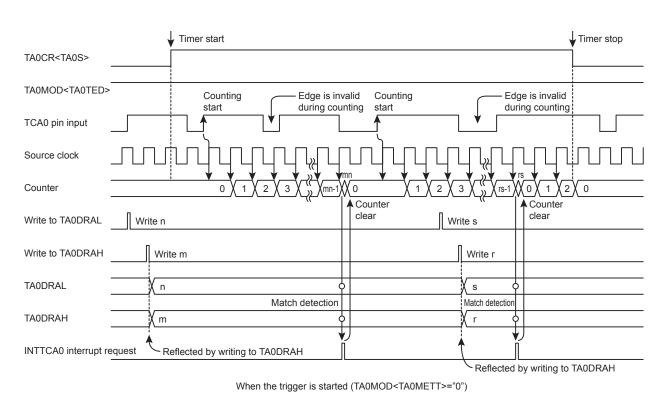

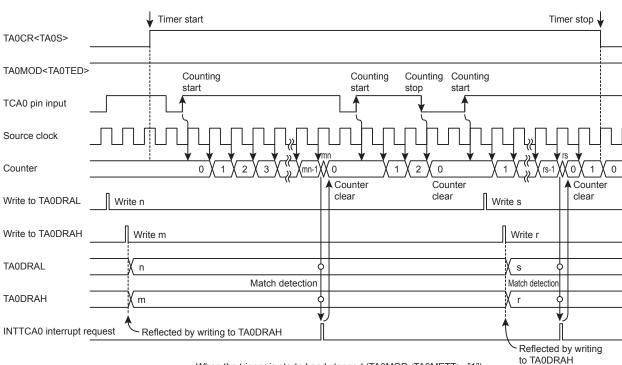


Figure 13-4 External Trigger Timer Timing Chart

When the trigger is started and stopped (TA0MOD<TA0METT>="1")

13.4.3 Event counter mode

In the event counter mode, the up counter counts up at the edge of the input to the TCA0 pin.

13.4.3.1 Setting

Setting the operation mode selection TA0MOD<TA0M> to "010" activates the event counter mode.

Set the trigger edge at the external trigger input selection TA0MOD<TA0TED>. Setting TA0MOD<TA0TED> to "0" selects the rising edge, and setting it to "1" selects the falling edge for counting up.

Note that this mode uses the TA0 input pin, and the TCA0 pin must be set to the input mode beforehand in port settings.

The operation is started by setting TA0CR<TA0S> to "1". After the timer is started, writing to TA0MOD and TA0CR<TA0OVE> is disabled. Be sure to complete the required mode settings before starting the timer.

13.4.3.2 Operation

After the event counter mode is started, when the selected trigger edge is input to the TCA0 pin, the up counter increments.

When a match between the up counter value and the value set to timer register A (TA0DRA) is detected, an INTTCA0 interrupt request is generated and the up counter is cleared to "0x0000". After being cleared, the up counter continues counting and counts up at each edge of the input to the TCA0 pin. Setting TA0CR<TA0S> to "0" during the operation causes the up counter to stop counting and be cleared to "0x0000".


The maximum frequency to be supplied is fcgck/2 [Hz] (in the NORMAL 1/2 or IDLE 1/2 mode) or fs/2 [Hz] (in the SLOW 1/2 or SLEEP 1 mode), and a pulse width of two machine cycles or more is required at both the "H" and "L" levels.

13.4.3.3 Auto capture

Refer to "13.4.1.3 Auto capture".

13.4.3.4 Register buffer configuration

Refer to "13.4.1.4 Register buffer configuration".

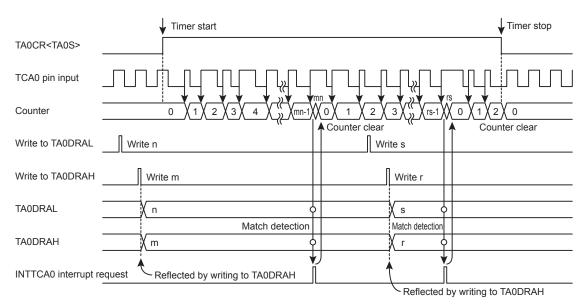

When the rising edge is selected (TA0MOD<TA0TED>="0")

Figure 13-5 Event Count Mode Timing Chart

13.4.4 Window mode

In the window mode, the up counter counts up at the rising edge of the pulse that is logical anded product of the input pulse to the TCA0 pin (window pulse) and the internal clock.

13.4.4.1 Setting

Setting the operation mode selection TA0MOD<TA0M> to "101" activates the window mode. Select the source clock at TA0MOD<TA0CK>.

Select the window pulse level at the trigger edge input selection TA0MOD<TA0TED>. Setting TA0MOD<TA0TED> to "0" enables counting up as long as the window pulse is at the "H" level. Setting TA0MOD<TA0TED> to "1" enables counting up as long as the window pulse is at the "L" level.

Note that this mode uses the TA0 input pin, and the TCA0 pin must be set to the input mode beforehand in port settings.

The operation is started by setting TA0CR<TA0S> to "1". After the timer is started, writing to TA0MOD and TA0CR<TA0OVE> is disabled. Be sure to complete the required mode settings before starting the timer.

13.4.4.2 Operation

After the operation is started, when the level selected at TA0MOD<TA0TED> is input to the TCA0 pin, the up counter increments according to the source clock selected at TA0MOD<TA0CK>. When a match between the up counter value and the value set to timer register A (TA0DRA) is detected, an IN-TTCA0 interrupt request is generated and the up counter is cleared to "0x0000". After being cleared, the up counter restarts counting.

The maximum frequency to be supplied must be slow enough for the program to analyze the count value. Define a frequency pulse that is sufficiently lower than the programmed internal source clock.

Setting TA0CR<TA0S> to "0" during the timer operation causes the up counter to stop counting and be cleared to "0x0000".


13.4.4.3 Auto capture

Refer to "13.4.1.3 Auto capture".

13.4.4.4 Register buffer configuration

Refer to "13.4.1.4 Register buffer configuration".

TMP89FS62VUG

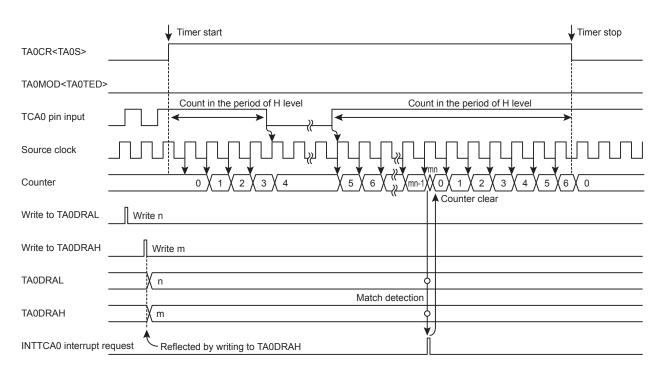

During the H-level counting (TA0MOD<TA0TED>="0")

Figure 13-6 Window Mode Timing Chart

13.4.5 Pulse width measurement mode

In the pulse width measurement mode, the up counter starts counting at the rising/falling edge(s) of the input to the TCA0 pin and measures the input pulse width based on the internal clock.

13.4.5.1 Setting

Setting the operation mode selection TA0MOD<TA0M> to "110" activates the pulse width measurement mode. Select the source clock at TA0MOD<TA0CK>.

Select the trigger edge at the trigger edge input selection TA0MOD<TA0TED>. Setting TA0MOD<TA0TED> to "0" selects the rising edge, and setting it to "1" selects the falling edge as a trigger to start the capture.

The operation after capturing is determined by the pulse width measurement mode control TA0MOD<TA0MCAP>. Setting TA0MOD<TA0MCAP> to "0" selects the double-edge capture. Setting TA0MOD<TA0MCAP> to "1" selects the single-edge capture.

The operation to be executed in case of an overflow of the up counter can be selected at the overflow interrupt control TA0CR<TA0OVE>. Setting TA0OVE to "1" makes an INTTCA0 interrupt request occur in case of an overflow. Setting TA0OVE to "0" makes no INTTCA0 interrupt request occur in case of an overflow.

Note that this mode uses the TA0 input pin, and the TCA0 pin must be set to the input mode beforehand in port settings.

The operation is started by setting TA0CR<TA0S> to "1". In this time, TA0DRA and TA0DRB register are initialized to "0x0000". After the timer is started, writing to TA0MOD and TA0CR<TA0OVE> is disabled. Be sure to complete the required mode settings before starting the timer.

13.4.5.2 Operation

After the timer is started, when the selected trigger edge (start edge) is input to the TCA0 pin, IN-TTCA0 interrupt request is generated, and then the up counter increments according to the selected source clock. Subsequently, when the edge opposite to the selected edge is detected, the up counter value is captured into TA0DRB, an INTTCA0 interrupt request is generated, and TA0SR<TA0CPFB> is set to "1". Depending on the TA0MOD<TA0MCAP> setting, the operation differs as follows:

Double-edge capture (When TA0MOD<TA0MCAP> is "0")

The up counter continues counting up after the edge opposite to the selected edge is detected. Subsequently, when the selected trigger edge is input, the up counter value is captured into TA0DRA, an INTTCA0 interrupt request is generated, and TA0SR<TA0CPFA> is set to "1". At this time, the up counter is cleared to "0x0000".

• Single-edge capture (When TA0MOD<TA0MCAP> is "1")

The up counter stops counting up and is cleared to "0x0000" when the edge opposite to the selected edge is detected. Subsequently, when the start edge is input, INTTCA0 interrupt request is generated, and then the up counter restarts increment.

When the up counter overflows during capturing, the overflow flag TA0SR<TA0OVF> is set to "1". At this time, an INTTCA0 interrupt request occurs if the overflow interrupt control TA0CR<TA0OVE> is set to "1".

The capture completion flags (TA0SR<TA0CPFA, TA0CPFB> and the overflow flag (TA0SR<TA0OVF>) are cleared to "0" automatically when TA0SR is read.

13.4 Timer Function TMP89FS62VUG

The captured value must be read from TA0DRB (and also from TA0DRA for the double-edge capture) before the next trigger edge is detected. If the captured value is not read, it becomes undefined. TA0DRA and TA0DRB must be read by using a 16-bit access instruction.

Setting TA0CR<TA0S> to "0" during the timer operation causes the up counter to stop counting and be cleared to "0x0000".

Note 1: After the timer is started, if the edge opposite to the selected trigger edge is detected first, no capture is executed and no INTTCA0 interrupt request occurs. In this case, the capture starts when the selected trigger edge is detected next.

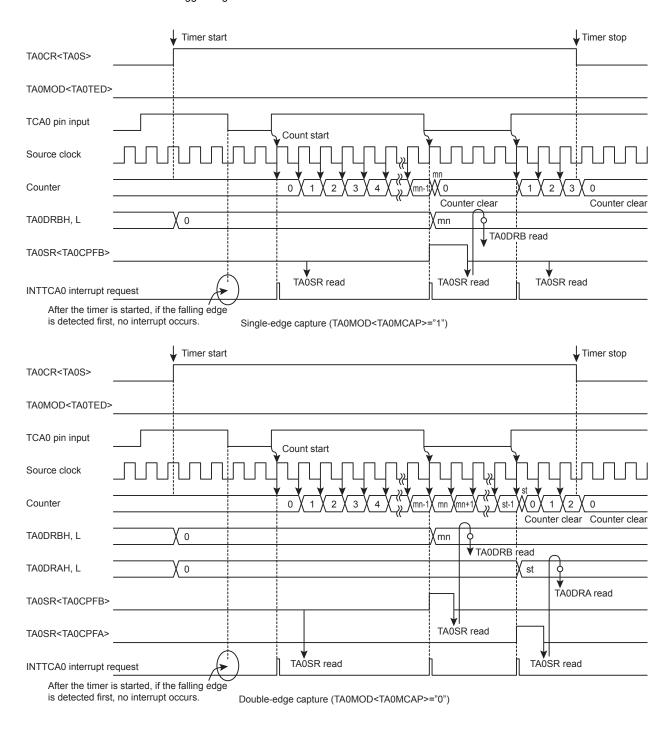


Figure 13-7 Pulse Width Measurement Mode Timing Chart



13.4.5.3 Capture process

Figure 13-8 shows an example of the capture process for INTTCA0 interrupt subroutine. The capture edge or overflow state can be easily judged by status register (TA0SR).

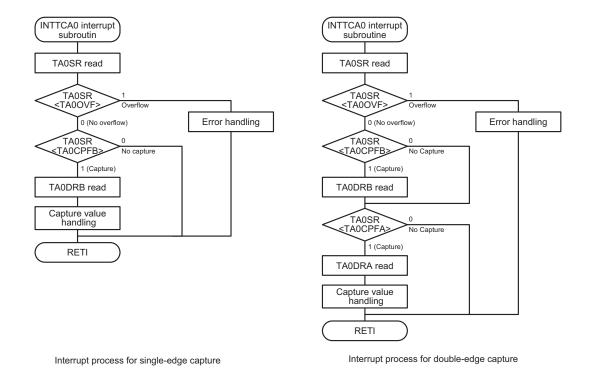


Figure 13-8 Example of capture process

Page 165 2019/08/01

TMP89FS62VUG

13.4.6 Programmable pulse generate (PPG) mode

In the PPG output mode, an arbitrary duty pulse is output by two timer registers.

13.4.6.1 Setting

Setting the operation mode selection TA0MOD<TA0M> to "011" activates the PPG output mode. Select the source clock at TA0MOD<TA0CK>. Select continuous or one-shot PPG output at TA0CR<TA0MPPG>.

Set the PPG output cycle at TA0DRA and set the time until the output is reversed first at TA0DRB. Be sure to set register values so that TA0DRA is larger than TA0DRB.

Note that this mode uses the $\overline{PPGA0}$ pin. the $\overline{PPGA0}$ pin must be set to the output mode beforehand in port settings.

Set the initial state of the $\overline{PPGA0}$ pin at the timer flip-flop TA0CR<TA0TFF>. Setting TA0CR<TA0TFF> to "1" selects the "H" level as the initial state of the $\overline{PPGA0}$ pin. Setting TA0CR<TA0TFF> to "0" selects the "L" level as the initial state of the $\overline{PPGA0}$ pin.

The operation is started by setting TA0CR<TA0S> to "1". After the timer is started, writing to TA0MOD and TA0CR<TA0OVE, TA0TFF> is disabled. Be sure to complete the required mode settings before starting the timer.

13.4.6.2 Operation

after the timer is started, the up counter increments.

When a match between the up counter value and the value set to timer register B (TA0DRB) is detected, the $\overline{PPGA0}$ pin is changed to the "H" level if TA0CR<TA0TFF> is "0", or the $\overline{PPGA0}$ pin is changed to the "L" level if TA0CR<TA0TFF> is "1".

Subsequently, the up counter continues counting. When a match between the up counter value and the value set to timer register A (TA0DRA) is detected, the $\overline{PPGA0}$ pin is changed to the "L" level if TA0CR<TA0TEFF> is "0", or the $\overline{PPGA0}$ pin is changed to the "H" level if TA0CR<TA0TFF> is "1". At this time, an INTTCA0 interrupt request occurs. If the PPG output control TA0CR<TA0MPPG> is set to "1" (one-shot), TA0CR<TA0S> is automatically cleared to "0" and the timer stops.

If TA0CR<TA0MPPG> is set to "0" (continuous), the up counter is cleared to "0x0000" and continues counting and PPG output. When TA0CR<TA0S> is set to "0" (including the auto stop by the one-shot operation) during the PPG output, the $\overline{PPGA0}$ pin returns to the level set in TA0CR<TA0TFF>.

TA0CR<TA0MPPG> can be changed during the operation. Changing TA0CR<TA0MPPG> from "1" to "0" during the operation cancels the one-shot operation and enables the continuous operation. Changing TA0CR<TA0MPPG> from "0" to "1" during the operation clears TA0CR<TA0S> to "0" and stops the timer automatically after the current pulse output is completed.

Timer registers A and B can be set to the double buffer. Setting TA0CR<TA0DBF> to "1" enables the double buffer. When the values set to TA0DRA and TA0DRB are changed during the PPG output with the double buffer enabled, the writing to TA0DRA and TA0DRB will not immediately become effective but will become effective when a match between TA0DRA and the up counter is detected. If the double buffer is disabled, the writing to TA0DRA and TA0DRB will become effective immediately. If the written value is smaller than the up counter value, the up counter overflows. After a cycle, the counter match process is executed to reverse the output.

13.4.6.3 Register buffer configuration

(1) Temporary buffer

The TMP89FS62V contains an 8-bit temporary buffer. When a write instruction is executed on TA0DRAL (TA0DRBL), the data is first stored into this temporary buffer, whether the double buffer is enabled or disabled. Subsequently, when a write instruction is executed on TA0DRAH (TA0DRBH), the set value is stored into the double buffer or TA0DRAH (TA0DRBH). At the same time, the set value in the temporary buffer is stored into the double buffer or TA0DRAL (TA0DRBL). (This structure is designed to enable the set values of the lower-level register and the higher-level register simultaneously.) Therefore, when setting data to TA0DRA (TA0DRB), be sure to write the data into TA0DRAL and TA0DRAH (TA0DRBL and TA0DRBH) in this order.

See Figure 13-1 for the temporary buffer configuration.

(2) Double buffer

In the TMP89FS62V, the double buffer can be used by setting TA0CR<TA0DBF>. Setting TA0CR<TA0DBF> to "0" disables the double buffer. Setting TA0CR<TA0DBF> to "1" enables the double buffer.

See Figure 13-1 for the double buffer configuration.

- When the double buffer is enabled

When a write instruction is executed on TA0DRAH (TA0DRBH) during the timer operation, the set value is first stored into the double buffer, and TA0DRAH/L are not updated immediately. TA0DRAH/L (TA0DRBH/L) compare the last set values to the counter value. If a match is detected, an INTTCA0 interrupt request is generated and the double buffer set value is stored into TA0DRAH/L (TA0DRBH/L). Subsequently, the match detection is executed using a new set value.

When a read instruction is executed on TA0DRAH/L (TA0DRBH/L), the double buffer value (the last set value) is read, not the TA0DRAH/L (TA0DRBH/L) values (the current effective values).

When a write instruction is executed on TA0DRAH/L (TA0DRBH/L) while the timer is stopped, the set value is immediately stored into both the double buffer and TA0DRAH/L (TA0DRBH/L).

- When the double buffer is disabled

When a write instruction is executed on TA0DRAH (TA0DRBH) during the timer operation, the set value is immediately stored in TA0DRAH/L (TA0DRBH/L). Subsequently, the match detection is executed using a new set value.

If the values set to TA0DRAH/L (TA0DRBH/L) are smaller than the up counter value, the up counter overflows and the match detection is executed using a new set value. As a result, the output pulse width may be longer than the set time. If that is a problem, enable the double buffer.

When a write instruction is executed on TA0DRAH/L (TA0DRBH/L) while the timer is stopped, the set value is immediately stored into TA0DRAH/L (TA0DRBH/L).

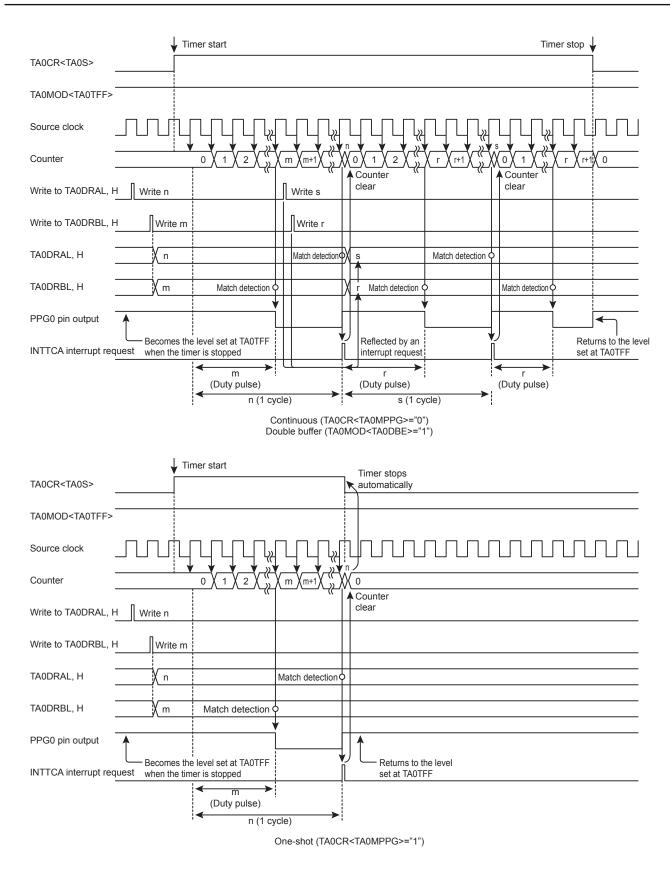


Figure 13-9 PPG Mode Timing Chart

13.5 Noise Canceller

The digital noise canceller can be used in the operation modes that use the TCA0 pin.

13.5.1 Setting

When the digital noise canceller is used, the input level is sampled at the sampling intervals set at TA0CR<TA0NC>. When the same level is detected three times consecutively, the level of the input to the timer is changed.

Setting TA0CR<TA0NC> to any values than "00" allows the noise canceller to start operation, regardless of the TA0CR<TA0S> value.

When the noise canceller is used, allow the timer to start after a period of time that is equal to four times the sampling interval after TA0CR<TA0NC> is set has elapsed. This stabilizes the input signal.

Set TA0CR<TA0NC> while the timer is stopped (TA0CR<TA0S> = "0"). When TA0CR<TA0S> is "1", writing is ignored.

In the SLOW 1/2 or SLEEP 1 mode, setting TA0CR<TA0NC> to "11" selects fs/2 as the source clock for the operation. Setting TA0CR<TA0NC> to "00" disables the noise canceller. Setting TA0CR<TA0NC> to "01" or "10" disables the TCA0 pin input.

Table 13-4 Noise Cancel Time (fcgck = 10 [MHz])

TA0NC	Sampling interval	Sampling interval Time removed as noise	
00	None -		-
01	200 ns (2/fcgck)	600 ns or less	800 ns or more
10	400 ns (4/fcgck)	1.2 µs or less	1.6 µs or more
11	25.6 µs (256/fcgck)	76.8 µs or less	102.4 µs or more

13. 16-bit Timer Counter (TCA)

13.5 Noise Canceller

TMP89FS62VUG

14. 8-bit Timer Counter (TC0)

The TMP89FS62V contains 4 channels of high-performance 8-bit timer counters (TC0). Each timer can be used for time measurement and pulse output with a prescribed width. Two 8-bit timer counters are cascadable to form a 16-bit timer.

This chapter describes 2 channels of 8-bit timer counters 00 and 01. For 8-bit timer counters 02 and 03, replace the SFR addresses and pin names as shown in Table 14-1 and Table 14-2.

Table 14-1 SFR Address Assignment

	16-bit mode	T0xREG (Address)	T0xPWM (Address)	T0xMOD (Address)	T0xxCR (Address)	Low power consumption register
Timer counter 00	Lower	T00REG (0x0026)	T00PWM (0x0028)	T00MOD (0x002A)	T001CR	POFFCR0
Timer counter 01	Higher	T01REG (0x0027)	T01PWM (0x0029)	T01MOD (0x002B)	(0x002C)	<tc001en></tc001en>
Timer counter 02	Lower	T02REG (0x0F88)	T02PWM (0x0F8A)	T02MOD (0x0F8C)	T023CR	POFFCR0
Timer counter 03	Higher	T03REG (0x0F89)	T03PWM (0x0F8B)	T03MOD (0x0F8D)	(0x0F8E)	<tc023en></tc023en>

Table 14-2 Pin Names

	Timer input pin	PWM output pin	PPG output pin
Timer counter 00	TC00 pin	PWM0 pin	PPG0 pin
Timer counter 01	TC01 pin	PWM1 pin	PPG1 pin
Timer counter 02	TC02 pin	PWM2 pin	PPG2 pin
Timer counter 03	TC03 pin	PWM3 pin	PPG3 pin

14.1 Configuration

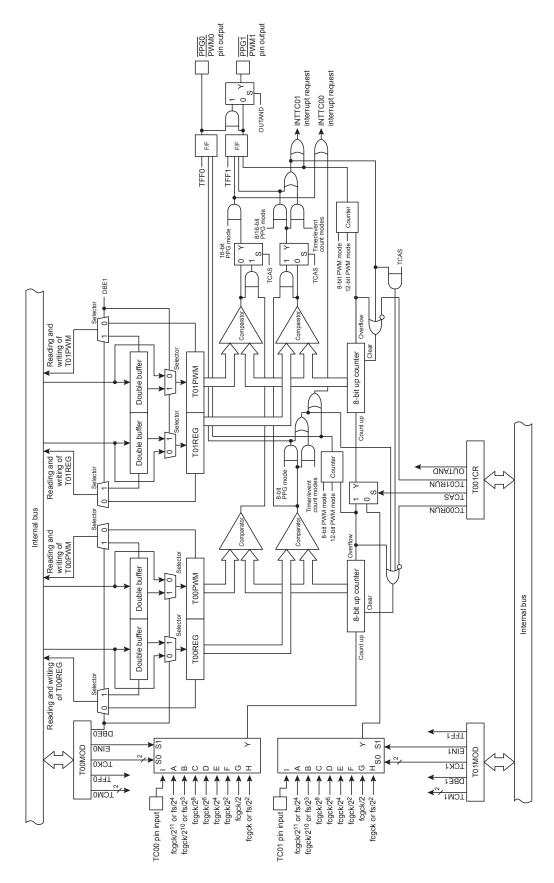


Figure 14-1 8-bit Timer Counters 00 and 01

14.2 Control

14.2.1 Timer counter 00

The timer counter 00 is controlled by the timer counter 00 mode register (T00MOD) and two 8-bit timer registers (T00REG and T00PWM).

Timer register 00

T00REG		15	14	13	12	11	10	9	8	
(0x0026)	Bit Symbol				T00	REG				
	Read/Write		RW							
	After reset	1	1	1	1	1	1	1	1	

Timer register 00

T00PWM		7	6	5	4	3	2	1	0	
(0x0028)	Bit Symbol		T00PWM							
	Read/Write		R/W							
	After reset	1	1	1	1	1	1	1	1	

Note 1: For the configuration of T00PWM in the 8-bit and 12-bit PWM modes, refer to "14.4.3 8-bit pulse width modulation (PWM) output mode" and "14.4.7 12-bit pulse width modulation (PWM) output mode".

Page 173 2019/08/01

14.2 Control

TMP89FS62VUG

Timer counter 00 mode register

T00MOD 6 5 4 3 2 0 (0x002A) Bit Symbol TFF0 DBE0 TCK0 EIN0 ТСМ0 R/W R/W R/W R/W Read/Write R/W 1 1 0 0 0 0 0 0 After reset

TFF0	Timer F/F0 control	0	Clear Set						
DBE0	Double buffer control	0	Disable the double buf	Disable the double buffer Enable the double buffer					
			NORMAL1/2 or	r IDLE1/2 mode					
			SYSCR1 <dv9ck> = "0"</dv9ck>	SYSCR1 <dv9ck> = "1"</dv9ck>	SLOW1/2 or SLEEP1 mode				
		000	fcgck/2 ¹¹	fs/2 ⁴	fs/2 ⁴				
		001	fcgck/210	fs/2 ³	fs/2 ³				
TCK0	Operation clock selection	010	fcgck/28	fcgck/2 ⁸	-				
		011	fcgck/26	fcgck/26	-				
		100	fcgck/24	fcgck/2 ⁴	-				
		101	fcgck/2 ²	fcgck/2 ²	-				
		110	fcgck/2	fcgck/2	-				
		111	fcgck	fcgck	fs/2 ²				
	Coloction for using outernal	0	Select the internal cloc	k as the source clock.	•				
EIN0	Selection for using external source clock	1		Select an external clock as the source clock.					
			(the falling edge of the	TC00 pin)					
		00	8-bit timer/event count	er modes					
TCM0	Operation mode selection	01	8-bit timer/event count	er modes					
1 31010	Operation mode selection	10	8-bit pulse width modu	lation output (PWM) mo	ode				
		11	8-bit programmable pu	lse generate (PPG) mod	de				

- Note 1: fcgck: Gear clock [Hz], fs: Low-frequency clock [Hz]
- Note 2: Set T00MOD while the timer is stopped. Writing data into T00MOD is invalid during the timer operation.
- Note 3: In the 8-bit timer/event modes, the TFF0 setting is invalid. In this mode, when the $\overline{PWM0}$ and $\overline{PPG0}$ pins are set as the function output pins in the port setting, the pins always output the "H" level.
- Note 4: When EIN0 is set to "1" and the external clock input is selected as the source clock, the TCK0 setting is ignored.
- Note 5: When the T001CR<TCAS> bit is "1", timer 00 operates in the 16-bit mode. The T00MOD setting is invalid and timer 00 cannot be used independently in this mode. When the PWM0 and PPG0 pins are set to the function output pins in the port setting, the pins always output the "H" level.
- Note 6: When the 16-bit mode is selected at T001CR<TCAS>, the timer start is controlled at T001CR<T01RUN>. Timer 00 is not started by writing data into T001CR<T00RUN>.



14.2.2 Timer counter 01

Timer counter 01 is controlled by timer counter 01 mode register (T01MOD) and two 8-bit timer registers (T01REG and T01PWM).

Timer register 01

T01REG		15	14	13	12	11	10	9	8		
(0x0027)	Bit Symbol		T01REG								
	Read/Write		R/W								
	After reset	1	1	1	1	1	1	1	1		

Timer register 01

T01PWM		7	6	5	4	3	2	1	0	
(0x0029)	Bit Symbol		T01PWM							
	Read/Write		R/W							
	After reset	1	1	1	1	1	1	1	1	

Note 1: For the configuration of T00PWM in the 8-bit and 12-bit PWM modes, refer to "14.4.3 8-bit pulse width modulation (PWM) output mode" and "14.4.7 12-bit pulse width modulation (PWM) output mode".

Page 175 2019/08/01

14.2 Control

TMP89FS62VUG

Timer counter 01 mode register

T01MOD 6 5 4 3 2 0 TFF1 DBE1 TCK1 EIN1 TCM1 (0x002B) Bit Symbol Read/Write R/W R/W R/W R/W R/W 1 0 0 0 0 After reset 0 0

	1							
TFF1	Timer F/F1 control	0	Clear					
	Times 171 1 control	1	Set					
DBE1	Double buffer control	0	Disable the double buf	Disable the double buffer				
DBEI	Double buller control	1	Enable the double buff	er				
			NORMAL1/2 or	r IDLE1/2 m	ode			
			SYSCR1 <dv9ck></dv9ck>	SYSCR1	<dv9ck></dv9ck>	SLOW1/2 or SLEEP1 mode		
			= "0"	=	"1"			
		000	fcgck/2 ¹¹	fs	/2 ⁴	fs/2 ⁴		
		001	fcgck/210	fs	/2³	fs/2³		
TCK1	TCK1 Operation clock selection	010	fcgck/28	fcgo	ck/2 ⁸	-		
		011	fcgck/26	fcgck/26		-		
		100	fcgck/24	fcgck/2⁴		-		
		101	fcgck/2 ²	fcgck/2 ²		-		
		110	fcgck/2	fcgck/2		-		
		111	fcgck	fcgck		fs/2²		
		0	Select the internal cloc	k as the so	ırce clock.			
EIN1	Selection for using external source clock	1	Select an external clock as the source clock. (t TC01 pin)			the falling edge of the		
			T001CR <tcas></tcas>	>="0"	T00	1CR <tcas>="1"</tcas>		
			(8-bit mode))		(16-bit mode)		
		00	8-bit timer/event count	er modes	16-bit time	er/event counter modes		
TCM1	Operation mode selection	01	8-bit timer/event count	er modes	16-bit time	er/event counter modes		
		10	8-bit pulse width modu put (PWM) mode	lation out-	12-bit puls put (PWM)	e width modulation out-) mode		
		11	8-bit programmable pu ate (PPG) mode	lse gener-	16-bit prog ate (PPG)	grammable pulse gener- mode		

Note 1: fcgck: Gear clock [Hz], fs: Low-frequency clock [Hz]

Note 2: Set T01MOD while the timer is stopped. Writing data into T01MOD is invalid during the timer operation.

Note 3: In the 8-bit timer/event modes, the TFF1 setting is invalid. In this mode, when the $\overline{PWM1}$ and $\overline{PPG1}$ pins are set as the function output pins in the port setting, the pins always output the "H" level.

Note 4: When EIN1 is set to "1" and the external clock input is selected as the source clock, the TCK1 setting is ignored.



14.2.3 Common to timer counters 00 and 01

Timer counters 00 and 01 have the low power consumption register (POFFCR0) and timer 00 and 01 control registers in common.

Low power consumption register 0

POFFCR0		7	6	5	4	3	2	1	0
(0x0F74)	Bit Symbol	ı	1	TC023EN	TC001EN	ı	ı	TCA1EN	TCA0EN
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

TC023EN	C023EN TC02, 03 control	0	Disable
I CUZSEN	1C02, 03 control	1	Enable
TC001EN	T000 04	0	Disable
ICOUTEN	TC00, 01 control	1	Enable
TCA1EN	TOMA	0	Disable
ICATEN	TCA1 control	1	Enable
TCA0EN	TOAC	0	Disable
ICAUEN	TCA0 control	1	Enable

Page 177 2019/08/01

14.2 Control

TMP89FS62VUG

Timer counter 01 control register

T001CR 2 6 5 3 1 0 OUTAND TCAS T01RUN T00RUN (0x002C) Bit Symbol R R/W R/W R/W R/W Read/Write R R R 0 0 0 0 0 0 0 0 After reset

OUTAND	Timers 00 and 01 output control	0	Output the timer 00 output from the PWM0 and PPG0 pins and the timer 01 output from the PWM1 and PPG1 pins. Output a pulse that is a logical ANDed product of the outputs of timers 00 and 01 from the PWM1 and PPG1 pins.
TCAS	Timers 00 and 01 cascade control	0 1	Use timers 00 and 01 independently (8-bit mode). Cascade timers 00 and 01 (16-bit mode).
T01RUN	Timer 01 control Timers 00/01 control (16-bit mode)	0	Stop and clear the counter Start
T00RUN	Timer 00 control	0	Stop and clear the counter Start

- Note 1: When STOP mode is started, T00RUN and T01RUN are cleared to "0" and the timers stop. Set T001CR again to use timers 00 and 01 after STOP mode is released.
- Note 2: When a read instruction is executed on T001CR, bits 7 to 4 are read as "0".
- Note 3: When OUTAND is "1", output is obtained from the PWM1 and PPG1 pins only. There is no timer output to the PWM0 and PPG0 pins. If the PWM0 and PPG0 pins are set as the function output pins in the port setting, the pins always output "H".
- Note 4: OUTAND and TCAS can be changed only when both TC01RUN and TC00RUN are "0". When either TC01RUN or TC00RUN is "1" or both are "1", the register values remain unchanged by executing write instructions on OUTAND and TCAS. OUTAND and TCAS can be changed at the same time as TC01RUN and TC00RUN are changed from "0" to "1".



14.2.4 Operation modes and usable source clocks

The operations modes of the 8-bit timers and the usable source clocks are listed below.

Table 14-3 Operation Modes and Usable Source Clocks (NORMAL1/2 and IDLE1/2 modes)

	TCK0	000	001	010	011	100	101	110	111	
Ol	peration mode	fcgck/2 ¹¹ or fs/2 ⁴	fcgck/2 ¹⁰ or fs/2 ³	fcgck/2 ⁸	fcgck/2 ⁶	fcgck/2 ⁴	fcgck/2 ²	fcgck/2	fcgck	TC0i pin input
	8-bit timer	0	0	0	0	0	0	0	0	-
8-bit	8-bit event counter	-	-	-	-	-	-	-	-	0
timer modes	8-bit PWM	0	0	0	0	0	0	0	0	-
	8-bit PPG	0	0	0	0	0	0	0	0	-
	16-bit timer	0	0	0	0	0	0	0	0	-
16-bit	16-bit event counter	-	-	-	-	-	-	-	-	0
timer modes	12-bit PWM	0	0	0	0	0	0	0	0	0
	16-bit PPG	0	0	0	0	0	0	0	0	0

Note 1: O: Usable, -: Unusable

Note 2: Set the source clock in the 16-bit modes on the TC01 side (TCK1).

Note 3: When the low-frequency clock, fs, is not oscillating, it must not be selected as the source clock. If fs is selected when it is not oscillating, no source clock is supplied to the timer, and the timer remains stopped.

Note 4: i=0, 1 (i=0 only in the 16-bit modes)

Note 5: The operation modes of the 8-bit timers and the usable source clocks are listed below.

Table 14-4 Operation Modes and Usable Source Clocks (SLOW1/2 and SLEEP1 modes)

	TCK0	000	001	010	011	100	101	110	111	TC0i
Ol	peration mode	fs/2 ⁴	fs/2 ³	-	-	-	-	-	fs/2 ²	pin input
	8-bit timer	0	0	-	-	-	-	-	0	-
8-bit	8-bit event counter	1	-	-	-	-	-	-	-	0
timer modes	8-bit PWM	0	0	-	-	-	-	-	0	-
	8-bit PPG	0	0	-	-	-	-	-	0	-
	16-bit timer	0	0	-	-	-	-	-	0	-
16-bit	16-bit event counter	-	-	-	-	-	-	-	-	0
timer modes	12-bit PWM	0	0	-	-	-	-	-	0	0
	16-bit PPG	0	0	-	-	-	-	-	0	0

Note 1: O: Usable, -: Unusable

Note 2: Set the source clock in the 16-bit modes on the TC01 side (TCK1).

Note 3: i=0, 1 (i=0 only in the 16-bit modes)

Page 179 2019/08/01

14.3 Low Power Consumption Function

Timer counters 00 and 01 have the low power consumption registers (POFFCR0) that save power when the timers are not used.

Setting POFFCR0<TC001EN> to "0" disables the basic clock supply to timer counters 00 and 01 to save power. Note that this renders the timers unusable. Setting POFFCR0<TC001EN> to "1" enables the basic clock supply to timer counters 00 and 01 and allows the timers to operate.

After reset, POFFCR0<TC001EN> are initialized to "0", and this makes the timers unusable. When using the timers for the first time, be sure to set POFFCR0<TC001EN> to "1" in the initial setting of the program (before the timer control registers are operated).

Do not change POFFCR0<TC001EN> to "0" during the timer operation. Otherwise timer counters 00 and 01 may operate unexpectedly.

Timer counters TC00 and TC01 have 8-bit modes in which they are used independently and 16-bit modes in which they are cascaded.

The 8-bit modes include four operation modes; the 8-bit timer mode, the 8-bit event counter mode, the 8-bit pulse width modulation output (PWM) mode and the 8-bit programmable pulse generated output (PPG) mode.

The 16-bit modes include four operation modes; the 16-bit timer mode, the 16-bit event counter mode, the 12-bit PWM mode and the 16-bit PPG mode

14.4.1 8-bit timer mode

In the 8-bit timer mode, the up-counter counts up using the internal clock, and interrupts can be generated regularly at specified times. The operation of TC00 is described below, and the same applies to the operation of TC01. (Replace TC00- by TC01-).

14.4.1.1 Setting

TC00 is put into the 8-bit timer mode by setting T00MOD<TCM0> to "00" or "01", T001CR<TCAS> to "0" and T00MOD<EIN0> to "0". Select the source clock at T00MOD<TCK0>. Set the count value to be used for the match detection as an 8-bit value at the timer register T00REG.

Set T00MOD<DBE0> to "1" to use the double buffer.

Setting T001CR<T00RUN> to "1" starts the operation. After the timer is started, writing to T00MOD becomes invalid. Be sure to complete the required mode settings before starting the timer.

14.4.1.2 Operation

Setting T001CR<T00RUN> to "1" allows the 8-bit up counter to increment based on the selected internal source clock. When a match between the up counter value and the T00REG set value is detected, an INTTC00 interrupt request is generated and the up counter is cleared to "0x00". After being cleared, the up counter restarts counting. Setting T001CR<T00RUN> to "0" during the timer operation makes the up counter stop counting and be cleared to "0x00".

14.4.1.3 Double buffer

The double buffer can be used for T00REG by setting T00MOD<DBE0>. The double buffer is disabled by setting T00MOD<DBE0> to "0" or enabled by setting T00MOD<DBE0> to "1".

· When the double buffer is enabled

When a write instruction is executed on T00REG during the timer operation, the set value is initially stored in the double buffer, and T00REG is not immediately updated. T00REG compares the previous set value with the up counter value. When the values match, an INTTC00 interrupt request is generated and the double buffer set value is stored in T00REG. Subsequently, the match detection is executed using a new set value.

When a write instruction is executed on T00REG while the timer is stopped, the set value is immediately stored in both the double buffer and T00REG.

When the double buffer is disabled

When a write instruction is executed on T00REG during the timer operation, the set value is immediately stored in T00REG. Subsequently, the match detection is executed using a new set value.

If the value set to T00REG is smaller than the up counter value, the match detection is executed using a new set value after the up counter overflows. Therefore, the interrupt request interval may be longer than the selected time. If the value set to T00REG is equal to the up coun-

TMP89FS62VUG

ter value, the match detection is executed immediately after data is written into T00REG. Therefore, the interrupt request interval may not be an integral multiple of the source clock (Figure 14-3). If these are problems, enable the double buffer.

When a write instruction is executed on T00REG while the timer is stopped, the set value is immediately stored in T00REG.

When a read instruction is executed on T00REG, the last value written into T00REG is read out, regardless of the T00MOD<DBE0> setting.


Table 14-5 8-bit Timer Mode Resolution and Maximum Time Setting

		Source clock [Hz]		Reso	lution	Maximum time setting	
T00MOD	NORMAL1/2 or	IDLE1/2 mode					
<tck0></tck0>	<tck0> SYSCR1<dv9ck> SYSCR1<dv9ck> SLEEP1 mode SLEEP1 mode</dv9ck></dv9ck></tck0>		fcgck=10MHz	fs=32.768kHz	fcgck=10MHz	fs=32.768kHz	
000	fcgck/2 ¹¹	fs/2 ⁴	fs/2 ⁴	204.8µs	488.2µs	52.2ms	124.5ms
001	fcgck/2 ¹⁰	fs/2³	fs/2 ³	102.4µs	244.1µs	26.1ms	62.3ms
010	fcgck/28	fcgck/28	-	25.6µs	-	6.5ms	-
011	fcgck/2 ⁶	fcgck/2 ⁶	-	6.4µs	-	1.6ms	-
100	fcgck/24	fcgck/2⁴	-	1.6µs	-	408µs	-
101	fcgck/2 ²	fcgck/2 ²	-	400ns	-	102µs	-
110	fcgck/2	fcgck/2	-	200ns	-	51µs	-
111	fcgck	fcgck	fs/2 ²	100ns	122.1µs	25.5µs	31.1ms

(Example) Operate TC00 in the 8-bit timer mode with the operation clock of fcgck/ 2^2 [Hz] and generate interrupts at 64 μ s intervals (fcgck = 10 MHz)

LD	(POFFCR0),0x10	; Sets TC001EN to "1"
DI		; Sets the interrupt master enable flag to "disable"
SET	(EIRH).4	; Sets the INTTC00 interrupt enable register to "1"
El		; Sets the interrupt master enable flag to "enable"
LD	(T00MOD),0xE8	; Selects the 8-bit timer mode and fcgck/ 2^2
LD	(T00REG),0xA0	; Sets the timer register (64 μ s / (2 2 /fcgck) = 0xA0)
SET	(T001CR).0	; Starts TC00



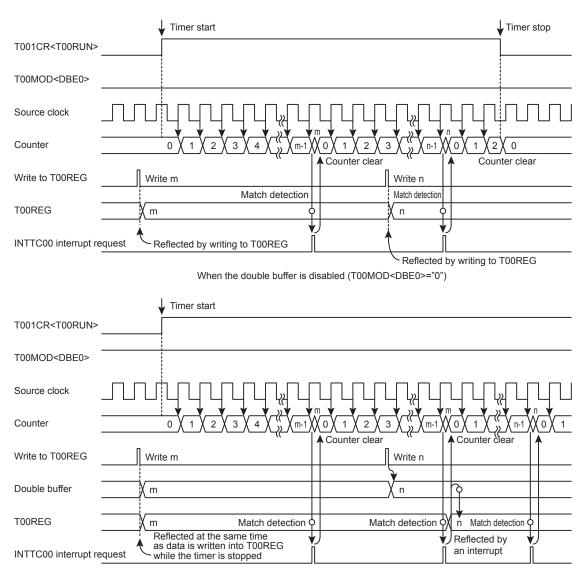

When the double buffer is enabled (T00MOD<DBE0>="1")

Figure 14-2 Timer Mode Timing Chart

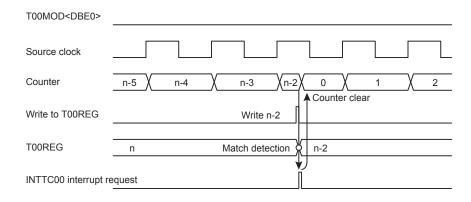


Figure 14-3 Operation When T00REG and the Up Counter Have the Same Value

Page 183 2019/08/01

TMP89FS62VUG

14.4.2 8-bit event counter mode

In the 8-bit event counter mode, the up counter counts up at the falling edge of the input to the TC00 or TC01 pin. The operation of TC00 is described below, and the same applies to the operation of TC01.

14.4.2.1 Setting

TC00 is put into the 8-bit event counter mode by setting T00MOD<TCM0> to "00", T001CR<TCAS> to "0" and T00MOD<EIN0> to "1". Set the count value to be used for the match detection as an 8-bit value at the timer register T00REG.

Set T00MOD<DBE0> to "1" to use the double buffer.

Setting T001CR<T00RUN> to "1" starts the operation. After the timer is started, writing to T00MOD becomes invalid. Be sure to complete the required mode settings before starting the timer.

14.4.2.2 Operation

Setting T001CR<T00RUN> to "1" allows the 8-bit up counter to increment at the falling edge of the TC00 pin. When a match between the up-counter value and the T00REG set value is detected, an INTTC00 interrupt request is generated and the up counter is cleared to "0x00". After being cleared, the up counter restarts counting. Setting T001CR<T00RUN> to "0" during the timer operation makes the up counter stop counting and be cleared to "0x00".

The maximum frequency to be supplied is fcgck/2² [Hz] (in NORMAL1/2 or IDLE1/2 mode) or fs/24 [Hz] (in SLOW1/2 or SLEEP1 mode), and a pulse width of two machine cycles or more is required at both the "H" and "L" levels.


14.4.2.3 Double buffer

Refer to "14.4.1.3 Double buffer".

(Example) Operate TC00 in the 8-bit event counter mode and generate an interrupt each time 16 falling edges are detected at the TC00 pin.

LD	(POFFCR0),0x10	; Sets TC001EN to "1"
DI		; Sets the interrupt master enable flag to "disable"
SET	(EIRH).4	; Sets the INTTC00 interrupt enable register to "1"
EI		; Sets the interrupt master enable flag to "enable"
LD	(T00MOD),0xC4	; Selects to the 8-bit event counter mode
LD	(T00REG),0x10	; Sets the timer register
SET	(T001CR).0	; Starts TC00



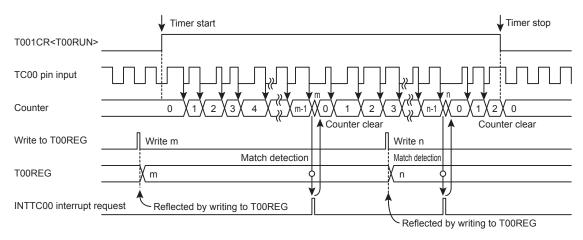

When the double buffer is disabled (T00MOD<DBE0>="0")

Figure 14-4 Event Counter Mode Timing Chart

Page 185 2019/08/01

TMP89FS62VUG

14.4.3 8-bit pulse width modulation (PWM) output mode

The pulse-width modulated pulses with a resolution of 7 bits are output in the 8-bit PWM mode. An additional pulse can be added to the $2 \times n$ -th duty pulse. This enables PWM output with a resolution nearly equivalent to 8 bits. (n=1, 2, 3...)

The operation of TC00 is described below, and the same applies to the operation of TC01.

14.4.3.1 Setting

TC00 is put into the 8-bit PWM mode by setting T00MOD<TCM0> to "10" and T001CR<TCAS> to "0". Set T00MOD<EIN0> to "0" and select the clock at T00MOD<TCK0>. Set the count value to be used for the match detection and the additional pulse value at the PWM register T00PWM.

Set T00MOD<DBE0> to "1" to use the double buffer.

Setting T001CR<T00RUN> to "1" starts the operation. After the timer is started, writing to T00MOD becomes invalid. Be sure to complete the required mode settings before starting the timer.

In the 8-bit PWM mode, the T00PWM register is configured as follows:

Timer register 00

T00PWM		7	6	5	4	3	2	1	0
(0x0028)	Bit Symbol				PWMDUTY				PWMAD
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	1	1	1	1	1	1	1	1

Timer register 01

T0 / D) / / /

T01PWM		/	6	5	4	3	2	1	
(0x0029)	Bit Symbol				PWMDUTY				PWMAD
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	1	1	1	1	1	1	1	1

PWMDUTY is a 7-bit register used to set the duty pulse width value (the time before the first output change) in a cycle (128 counts of the source clock).

PWMAD is a register used to set the additional pulse. When PWMAD is "1", an additional pulse that corresponds to 1 count of the source clock is added to the $2 \times n$ -th duty pulse (n=1, 2, 3...). In other words, the $2 \times n$ -th duty pulse has the output of PWMDUTY+1.

The additional pulse is not added when PWMAD is "0".

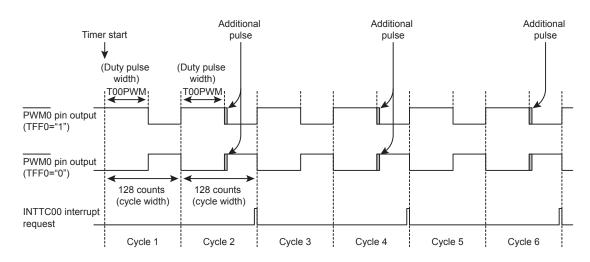


Figure 14-5 PWM0 Pulse Output

Set the initial state of the $\overline{PWM0}$ pin at T00MOD<TFF0>. Setting T00MOD<TFF0> to "0" selects the "L" level as the initial state of the $\overline{PWM0}$ pin. Setting T00MOD<TFF0> to "1" selects the "H" level as the initial state of the $\overline{PWM0}$ pin. If the $\overline{PWM0}$ pin is set as the function output pin in the port setting while the timer is stopped, the value of T00MOD<TFF0> is output to the $\overline{PWM0}$ pin. Table 14-6 shows the list of output levels of the $\overline{PWM0}$ pin.

		PWM0 pin	output level	
TFF0	Before the start of operation (initial state)	T00PWM <pwmduty> matched (after the additional pulse)</pwmduty>	Overflow	Operation stop- ped (initial state)
0	L	Н	L	L
1	Н	L	Н	Н

Table 14-6 List of Output Levels of PWM0 Pin

And by setting "1" to $\overline{T001CR}$ <0UTAND> bit, a logical product (AND) pulse of TC00 and TC01's output can be output to $\overline{PWM0}$ pin. By using this function, the remote-control waveform can be created eaily.

14.4.3.2 Operations

Setting T001CR<T00RUN> to "1" allows the up counter to increment based on the selected source clock. When a match between the lower 7 bits of the up counter value and the value set to T00PWM<PWMDUTY> is detected, the output of the $\overline{PWM0}$ pin is reversed. When T00MOD<TFF0> is "0", the $\overline{PWM0}$ pin changes from the "L" to "H" level. When T00MOD<TFF0> is "1", the $\overline{PWM0}$ pin changes from the "H" to "L" level.

If T00PWM<PWMAD> is "1", an additional pulse that corresponds to 1 count of the source clock is added at the $2 \times n$ -th match detection (n=1, 2, 3...). In other words, the $\overline{PWM0}$ pin output is reversed at the timing of T00PWM<PWMDUTY>+1. When T00MOD<TFF0> is "0", the period of the "L" level becomes longer than the value set to T00<PWMDUTY> by 1 source clock. When T00MOD<TFF0> is "1", the period of the "H" level becomes longer than the value set to T00PWM<PWMDUTY> by 1 source clock. This function allows two cycles of output pulses to be handled with a resolution nearly equivalent to 8 bits.

No additional pulse is inserted when T00PWM<PWMAD> is "0".

Subsequently, the up counter continues counting up. When the up counter value reaches 128, an over-flow occurs and the up counter is cleared to "0x00". At the same time, the output of the $\overline{PWM0}$ pin is reversed. When T00MOD<TFF0> is "0", the $\overline{PWM0}$ pin changes from the "H" to "L" level. When

Page 187

TMP89FS62VUG

T00MOD<TFF0> is "1", the $\overline{PWM0}$ pin changes from the "L" to "H" level. If the 2 × n-th overflow occurs at this time, an INTTC00 interrupt request is generated. (No interrupt request is generated at the 2 × n-th -1 overflow.) Subsequently, the up counter continues counting up.

When T001CR<T00RUN> is set to "0" during the timer operation, the up counter is stopped and cleared to "0x00". The $\overline{PWM0}$ pin returns to the level selected at T00MOD<TFF0>.

(Example) Operate TC00 in the 8-bit PWM mode with the operation clock of fcgck/2 and output a duty pulse nearly equivalent to 11.6 μs (fcgck = 10 MHz)

(Actually, output a total duty pulse of 23.2 µs in 2 cycles (51.2 µs))

SET	(P7FC).0	; Sets P7FC0 to "1"
SET	(P7CR).0	; Sets P7CR0 to "1"
LD	(POFFCR0),0x10	; Sets TC001EN to "1"
DI		; Sets the interrupt master enable flag to "disable"
SET	(EIRH).4	; Sets the INTTC00 interrupt enable register to "1"
EI		; Sets the interrupt master enable flag to "enable"
LD	(T00MOD),0xF2	; Selects the 8-bit PWM mode and fcgck/2
LD	(T00PWM),0x74	; Sets the timer register (duty pulse)
		; $(11.6\mu s \times 2) / (2/fcgck) = 0x74$
SET	(T001CR).0	; Starts TC00

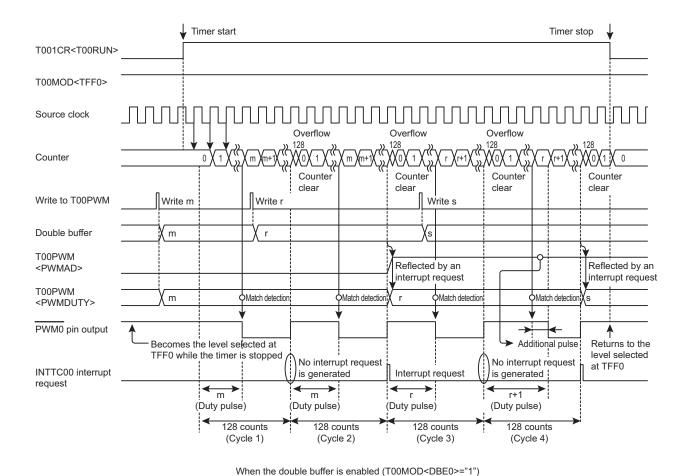


Figure 14-6 8-bit PWM Mode Timing Chart



14.4.3.3 Double buffer

The double buffer can be used for T00PWM by setting T00MOD<DBE0>. The double buffer is disabled by setting T00MOD<DBE0> to "0" or enabled by setting T00MOD<DBE0> to "1".

· When the double buffer is enabled

When a write instruction is executed on T00PWM during the timer operation, the set value is first stored in the double buffer, and T00PWM is not updated immediately. T00PWM compares the previous set value with the up counter value. When the $2 \times n$ -th overflow occurs, an INTTC00 interrupt request is generated and the double buffer set value is stored in T00PWM. Subsequently, the match detection is executed using a new set value.

When a read instruction is executed on T00PWM, the value in the double buffer (the last set value) is read out, not the T00PWM value (the currently effective value).

When a write instruction is executed on T00PWM while the timer is stopped, the set value is immediately stored in both the double buffer and T00PWM.

· When the double buffer is disabled

When a write instruction is executed on T00PWM during the timer operation, the set value is immediately stored in T00PWM. Subsequently, the match detection is executed using a new set value. If the value set to T00PWM is smaller than the up counter value, the $\overline{PWM0}$ pin is not reversed until the up counter overflows and a match detection is executed using a new set value. If the value set to T00PWM is equal to the up counter value, the match detection is executed immediately after data is written into T00PWM. Therefore, the timing of changing the $\overline{PWM0}$ pin may not be an integral multiple of the source clock (Figure 14-7). Similarly, if T00PWM is set during the additional pulse output, the timing of changing the $\overline{PWM0}$ pin may not be an integral multiple of the source clock. If these are problems, enable the double buffer.

When a write instruction is executed on T00PWM while the timer is stopped, the set value is immediately stored in T00PWM.

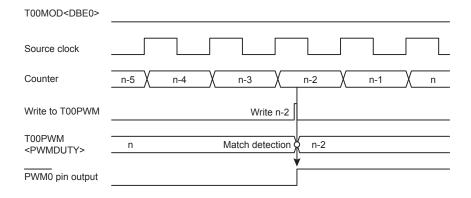


Figure 14-7 Operation When T00PWM and the Up Counter Have the Same Value

Page 189 2019/08/01

TMP89FS62VUG

Table 14-7 Resolutions and Cycles in the 8-bit PWM Mode

		Source clock [Hz]		Reso	lution	7-bit cycle (period × 2)	
T00MOD <tck0></tck0>	NORMAL1/2 or	IDLE1/2 mode					
TOROS	SYSCR1 <dv9ck> = "0"</dv9ck>	SYSCR1 <dv9ck> = "1"</dv9ck>	SLOW1/2 or SLEEP1 mode	fcgck=10MHz	fs=32.768kHz	fcgck=10MHz	fs=32.768kHz
000	fcgck/2 ¹¹	fs/2 ⁴	fs/2 ⁴	204.8µs	488.2µs	26.2ms (52.4ms)	62.5ms (125ms)
001	fcgck/2 ¹⁰	fs/2 ³	fs/2 ³	102.4μs	244.1µs	13.1ms (26.2ms)	31.3ms (62.5ms)
010	fcgck/28	fcgck/2 ⁸	-	25.6µs	-	3.3ms (6.6ms)	-
011	fcgck/2 ⁶	fcgck/2 ⁶	-	6.4µs	-	819.2µs (1638.4µs)	-
100	fcgck/2⁴	fcgck/2 ⁴	-	1.6µs	-	204.8µs (409.6µs)	-
101	fcgck/2 ²	fcgck/2 ²	-	400ns	-	51.2μs (102.4μs)	-
110	fcgck/2	fcgck/2	-	200ns	-	25.6µs (51.2µs)	-
111	fcgck	fcgck	fs/2 ²	100ns	122.1µs	12.8µs (25.6µs)	15.6ms (31.3ms)

14.4.4 8-bit programmable pulse generate (PPG) output mode

In the 8-bit PPG mode, the pulses with arbitrary duty and cycle are output by using the T00REG and T00PWM registers.

By setting the T001CR<OUTAND> register, a pulse that is a logical ANDed product of the TC00 and TC01 outputs can be output to the TC01 pin. This function facilitates the generation of remote-controlled waveforms, for example.

The operation of TC00 is described below, and the same applies to the operation of TC01.

14.4.4.1 Setting

TC00 is put into the 8-bit PPG mode by setting T00MOD<TCM0> to "10" and T001CR<TCAS> to "0". Set T00MOD<EIN0> to "0" and select the clock at T00MOD<TCK0>. Set the duty pulse width at T00PWM and the cycle width at T00REG.

Set T00MOD<DBE0> to "1" to use the double buffer.

Setting T001CR<T00RUN> to "1" starts the operation. After the timer is started, writing to T00MOD becomes invalid. Be sure to complete the required mode settings before starting the timer.

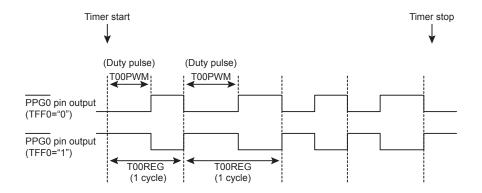


Figure 14-8 PPG0 Pulse Output

Set the initial state of the $\overline{PPG0}$ pin at T00MOD<TFF0>. Setting T00MOD<TFF0> to "0" selects the "L" level as the initial state of the $\overline{PPG0}$ pin. Setting T00MOD<TFF0> to "1" selects the "H" level as the initial state of the $\overline{PPG0}$ pin. If the $\overline{PPG0}$ pin is set as the function output pin in the port setting while the timer is stopped, the value of T00MOD<TFF0> is output to the $\overline{PPG0}$ pin. Table 14-8 shows the list of output levels of the $\overline{PPG0}$ pin.

Table 14-8 List of Output Levels of PPG0 Pin

		PPG0 pin o	output level	
TFF0	Before the start of operation (initial state)	T00PWM matched	T00REG matched	Operation stop- ped (initial state)
0	L	Н	L	L
1	Н	L	Н	Н

Setting the T001CR<OUTAND> bit to "1" allows the $\overline{PPG0}$ pin to output a pulse that is a logical ANDed product of the TC00 and TC01 outputs.

TMP89FS62VUG

14.4.4.2 Operation

Setting T001CR<T00RUN> to "1" allows the up counter to increment based on the selected source clock. When a match between the internal up counter value and the value set to T00PWM is detected, the output of the $\overline{PPG0}$ pin is reversed. When T00MOD<TFF0> is "0", the $\overline{PPG0}$ pin changes from the "L" to "H" level. When T00MOD<TFF0> is "1", the $\overline{PPG0}$ pin changes from the "H" to "L" level.

Subsequently, the up counter continues counting up. When a match between the up counter value and $\overline{100}$ REG is detected, the output of the $\overline{PPG0}$ pin is reversed again. When $\overline{100}$ MOD $\overline{100}$ is "0", the $\overline{PPG0}$ pin changes from the "H" to "L" level. When $\overline{100}$ MOD $\overline{100}$ is "1", the $\overline{PPG0}$ pin changes from the "L" to "H" level. At this time, an INTTC00 interrupt request is generated.

When T001CR<T00RUN> is set to "0" during the operation, the up counter is stopped and cleared to "0x00". The $\overline{PPG0}$ pin returns to the level selected at T00MOD<TFF0>.

14.4.4.3 Double buffer

The double buffer can be used for T00PWM and T00REG by setting T00MOD<DBE0>. The double buffer is disabled by setting T00MOD<DBE0> to "0" or enabled by setting T00MOD<DBE0> to "1".

· When the double buffer is enabled

When a write instruction is executed on T00PWM (T00REG) during the timer operation, the set value is first stored in the double buffer, and T00PWM (T00REG) is not updated immediately. T00PWM (T00REG) compares the previous set value with the up counter value. When an INTTC00 interrupt request is generated, the double buffer set value is stored in T00PWM (T00REG). Subsequently, the match detection is executed using a new set value.

When a read instruction is executed on T00PWM (T00REG), the value in the double buffer (the last set value) is read out, not the T00PWM (T00REG) value (the currently effective value).

When a write instruction is executed on T00PWM (T00REG) while the timer is stopped, the set value is immediately stored in both the double buffer and T00PWM (T00REG).

· When the double buffer is disabled

When a write instruction is executed on T00PWM (T00REG) during the timer operation, the set value is immediately stored in T00PWM (T00REG). Subsequently, the match detection is executed using a new set value. If the value set to T00PWM (T00REG) is smaller than the up counter value, the $\overline{PPG0}$ pin is not reversed until the up counter overflows and a match detection is executed using a new set value. If the value set to T00PWM (T00REG) is equal to the up counter value, the match detection is executed immediately after data is written into T00PWM (T00REG). Therefore, the timing of changing the $\overline{PPG0}$ pin may not be an integral multiple of the source clock (Figure 14-10). If these are problems, enable the double buffer.

When a write instruction is executed on T00PWM (T00REG) while the timer is stopped, the set value is immediately stored in T00PWM (T00REG).



(Example) Operate TC00 in the 8-bit PPG mode with the operation clock of fcgck/2 and output the 8µs duty pulse in $32\mu s$ cycles (fcgck = 10 MHz)

SET	(P7FC).0	; Sets P7FC0 to "1"
SET	(P7CR).0	; Sets P7CR0 to "1"
LD	(POFFCR0),0x10	; Sets TC001EN to "1"
DI		; Sets the interrupt master enable flag to "disable"
SET	(EIRH).4	; Sets the INTTC00 interrupt enable register to "1"
EI		; Sets the interrupt master enable flag to "enable"
LD	(T00MOD),0xF3	; Selects the 8-bit PPG mode and fcgck/2
LD	(T00REG),0xA0	; Sets the timer register (cycle)
		; 32µs / (2/fcgck) = 0xA0
LD	(T00PWM),0x28	; Sets the timer register (duty pulse)
		; 8µs / (2/fcgck) = 0x28
SET	(T001CR).0	; Starts TC00

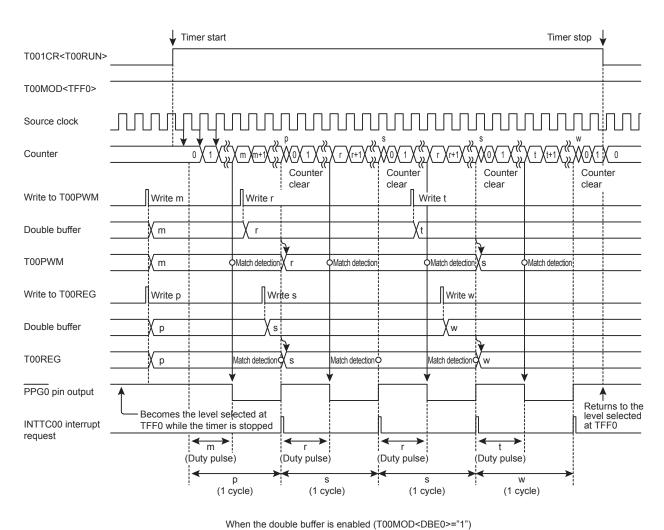


Figure 14-9 8-bit PPG Mode Timing Chart

TMP89FS62VUG

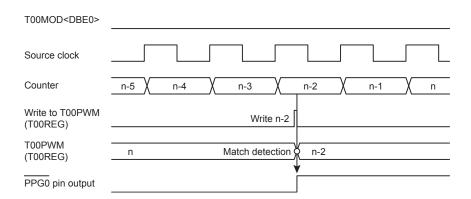


Figure 14-10 Operation When T00PWM (T00REG) and the Up Counter Have the Same Value

14.4.5 16-bit timer mode

In the 16-bit timer mode, TC00 and TC01 are cascaded to form a 16-bit timer counter, which can measure a longer period than an 8-bit timer.

14.4.5.1 Setting

Setting T001CR<TCAS> to "1" connects TC00 and TC01 and activates the 16-bit mode. All the settings of TC00 are ignored and those of TC01 are effective in the 16-bit mode.

The 16-bit timer mode is activated by setting T01MOD<TCM1> to "00" or "01" and T01MOD<EIN1> to "0". Select the source clock at T01MOD<TCK1>.

Set the count value to be used for the match detection as a 16-bit value at the timer registers T00REG and T01REG. Set the lower 8 bits of the 16-bit value at T00REG and the higher 8 bits at T01REG. (Hereinafter, the 16-bit value specified by the combined setting of T01REG and T00REG is indicated as T01+00REG.) The timer register settings are reflected on the double buffer or T01+00REG when a write instruction is executed on T01REG. Be sure to execute the write instructions on T00REG and T01REG in this order. (When data is written to the high-order register, the set values of the low-order and high-order registers become effective at the same time.)

Set T01MOD<DBE1> to "1" to use the double buffer.

Setting T001CR<T01RUN> to "1" starts the operation. After the timer is started, writing to T01MOD becomes invalid. Be sure to complete the required mode settings before starting the timer. (Make settings when T001CR<T00RUN> and <T01RUN> are "0".)

14.4.5.2 Operations

Setting T001CR<T01RUN> to "1" allows the 16-bit up counter to increment based on the selected internal source clock. When a match between the up counter value and the T00+01REG set value is detected, an INTTC01 interrupt request is generated and the up counter is cleared to "0x0000". After being cleared, the up counter restarts counting. Setting T001CR<T01RUN> to "0" during the timer operation makes the up counter stop counting and be cleared to "0x0000".

14.4.5.3 Double buffer

The double buffer can be used for T01+00REG by setting T01MOD<DBE1>. The double buffer is disabled by setting T01MOD<DBE1> to "0" or enabled by setting T01MOD<DBE1> to "1".

· When the double buffer is enabled

When write instructions are executed on T00REG and T01REG in this order during the timer operation, the set value is first stored in the double buffer, and T01+00REG is not updated immediately. T01+00REG compares the previous set value with the up counter value. When the values are matched, an INTTC01 interrupt request is generated and the double buffer set value is stored in T01+00REG. Subsequently, the match detection is executed using a new set value.

When write instructions are executed on T00REG and T01REG in this order while the timer is stopped, the set value is immediately stored in both the double buffer and T01+00REG.

· When the double buffer is disabled

When write instructions are executed on T00REG and T01REG in this order during the timer operation, the set value is immediately stored in T01+00REG. Subsequently, the match detection is executed using a new set value.

If the value set to T01+00REG is smaller than the up counter value, the match detection is executed using a new set value after the up counter overflows. Therefore, the interrupt request inter-

Page 195

TMP89FS62VUG

val may be longer than the selected time. If the value set to T01+00REG is equal to the up counter value, the match detection is executed immediately after data is written into T01+00REG. Therefore, the interrupt request interval may not be an integral multiple of the source clock. If these are problems, enable the double buffer.

When write instructions are executed on T00REG and T01REG in this order while the timer is stopped, the set value is immediately stored in T01+00REG.

When a read instruction is executed on T01+00REG, the last value written into T01+00REG is read out, regardless of the T00MOD<DBE1> setting.

(Example) Operate TC00 and TC01 in the 16-bit timer mode with the operation clock of fcgck/2 [Hz] and generate interrupts at 96 μs intervals (fcgck = 10 MHz)

LD	(POFFCR0),0x10	; Sets TC001EN to "1"
DI		; Sets the interrupt master enable flag to "disable"
SET	(EIRH).4	; Sets the INTTC00 interrupt enable register to "1"
EI		; Sets the interrupt master enable flag to "enable"
LD	(T01MOD),0xF0	; Selects the 16-bit timer mode and fcgck/2
LD	(T00REG),0xE0	; Sets the timer register (96 μ s / (2/fcgck) = 0x1E0)
LD	(T01REG),0x01	; Sets the timer register
LD	(T001CR),0x06	; Starts TC00 and TC001 (16-bit mode)



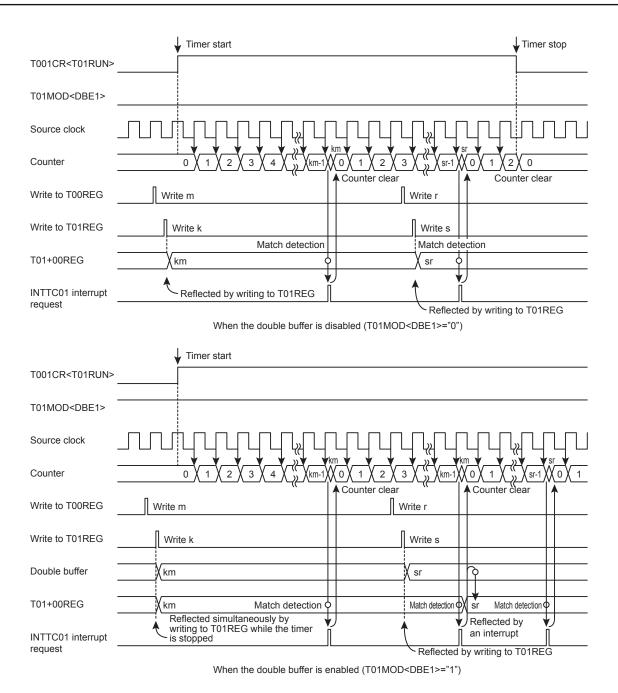


Figure 14-11 16-bit Timer Counter Timing Chart

Page 197

2019/08/01

TMP89FS62VUG

Table 14-9 16-bit Timer Mode Resolution and Maximum Time Setting

		Source clock [Hz]		Reso	lution	Maximum time setting	
T01MOD	NORMAL1/2 or	IDLE1/2 mode			fs=32.768kHz	fcgck=10MHz	fs=32.768kHz
<tck1></tck1>	SYSCR1 <dv9ck> = "0"</dv9ck>	SYSCR1 <dv9ck> = "1"</dv9ck>	SLOW1/2 or SLEEP1 mode	fcgck=10MHz			
000	fcgck/2 ¹¹	fs/2 ⁴	fs/2 ⁴	204.8µs	488.2µs	13.4s	32s
001	fcgck/2 ¹⁰	fs/2 ³	fs/2 ³	102.4µs	244.1µs	6.7s	16s
010	fcgck/28	fcgck/28	-	25.6µs	-	1.7s	-
011	fcgck/2 ⁶	fcgck/2 ⁶	-	6.4µs	-	419.4ms	-
100	fcgck/2 ⁴	fcgck/24	-	1.6µs	-	104.9ms	-
101	fcgck/2 ²	fcgck/2 ²	-	400ns	-	26.2ms	-
110	fcgck/2	fcgck/2	-	200ns	-	13.1ms	-
111	fcgck	fcgck	fs/2 ²	100ns	122.1µs	6.6ms	8s

14.4.6 16-bit event counter mode

In the 16-bit event counter mode, the up counter counts up at the falling edge of the input to the TC00 pin. TC00 and TC01 are cascaded to form a 16-bit timer counter, which can measure a longer period than an 8-bit timer.

14.4.6.1 Setting

Setting T001CR<TCAS> to "1" connects TC00 and TC01 and activates the 16-bit timer mode. All the settings of TC00 are ignored and those of TC01 are effective in the 16-bit timer mode.

The 16-bit timer mode is activated by setting T01MOD<TCM1> to "00" or "01" and T01MOD<EIN0> to "1".

Set the count value to be used for the match detection as a 16-bit value at the timer registers T00REG and T01REG. Set the lower 8 bits of the 16-bit value at T00REG and set the higher 8 bits at T01REG. (Hereinafter, the 16-bit value specified by the combined setting of T01REG and T00REG is indicated as T01+00REG.) The timer register settings are reflected on the double buffer or T01+00REG when a write instruction is executed on T01REG. Be sure to execute the write instructions on T00REG and T01REG in this order. (When data is written to the high-order register, the set values of the low-order and high-order registers become effective at the same time.)

Set T01MOD<DBE1> to "1" to use the double buffer.

Setting T001CR<T01RUN> to "1" starts the operation. After the timer is started, writing to T01MOD becomes invalid. Be sure to complete the required mode settings before starting the timer. (Make settings when T001CR<T00RUN> and <T01RUN> are "0".)

14.4.6.2 Operations

Setting T001CR<T01RUN> to "1" allows the 16-bit up counter to increment at the falling edge of the TC00 pin. When a match between the up counter value and the T00+01REG set value is detected, an INTTC01 interrupt request is generated and the up counter is cleared to "0x0000". After being cleared, the up counter restarts counting. Setting T001CR<T01RUN> to "0" during the timer operation makes the up counter stop counting and be cleared to "0x0000".


The maximum frequency to be supplied is fcgck/2 [Hz] (in NORMAL1/2 or IDLE1/2 mode) or fs/2⁴ [Hz] (in SLOW1/2 or SLEEP1 mode), and a pulse width of two machine cycles or more is required at both the "H" and "L" levels.

14.4.6.3 Double buffer

Refer to 14.4.5.3.

(Example) Operate TC00 and TC01 in the 16-bit event counter mode and generate an interrupt each time the 384th falling edge is detected at the TC00 pin

LD	(POFFCR0),0x10	; Sets TC001EN to "1"
DI		; Sets the interrupt master enable flag to "disable"
SET	(EIRH).4	; Sets the INTTC00 interrupt enable register to "1"
EI		; Sets the interrupt master enable flag to "enable"
LD	(T00MOD),0xC4	; Selects the 16-bit event counter mode
LD	(T00REG),0x80	; Sets the timer register
LD	(T01REG),0x10	; Sets the timer register
LD	(T001CR),0x06	; Starts TC00 and TC001 (16-bit mode)

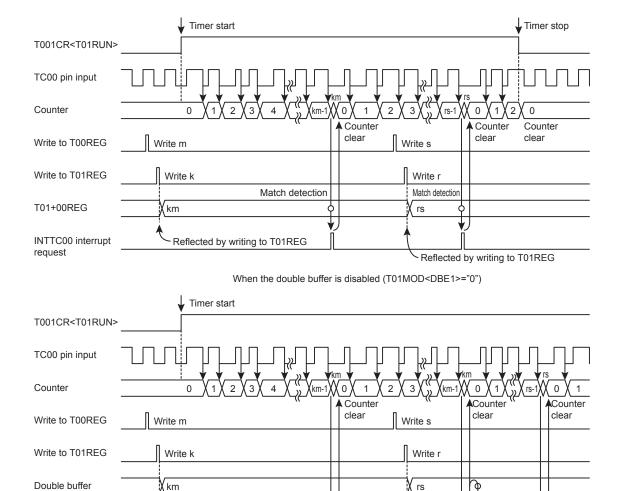

When the double buffer is enabled (T01MOD<DBE1>="1")

Match detection

Match detection

Reflected by an interrupt

Reflected by writing to T01REG

Figure 14-12 16-bit Event Counter Mode Timing Chart

Match detection

Reflected by writing to T01REG

2019/08/01 Page 200

T01+00REG

request

INTTC00 interrupt

14.4.7 12-bit pulse width modulation (PWM) output mode

In the 12-bit PWM output mode, TC00 and TC01 are cascaded to output the pulse-width modulated pulses with a resolution of 8 bits. An additional pulse of 4 bits can be inserted, which enables PWM output with a resolution nearly equivalent to 12 bits.

14.4.7.1 Setting

Setting T001CR<TCAS> to "1" connects TC00 and TC01 and activates the 16-bit timer mode. All the settings of TC00 are ignored and those of TC01 are effective in the 16-bit timer mode.

The 12-bit PWM mode is selected by setting T01MOD<TCM1> to "10". To use the internal clock as the source clock, set T01MOD<EIN1> to "0" and select the clock at T01MOD<TCK1>. To use an external clock as the source clock, set T01MOD<EIN1> to "1".

Set T01MOD<DBE1> to "1" to use the double buffer.

Setting T001CR<T01RUN> to "1" starts the operation. After the timer is started, writing to T01MOD becomes invalid. Be sure to complete the required mode settings before starting the timer. (Make settings when T001CR<T00RUN> and <T01RUN> are "0".)

Set the count value to be used for the match detection and the additional pulse value as a 12-bit value at the timer registers T00PWM and T01PWM. Set bits 11 to 8 of the 12-bit value at the lower 4 bits of T01PWM and set bits 7 to 0 at T00PWM. Refer to the following table for the register configuration. Hereinafter, the 12-bit value specified by the combined setting of T00PWM and T01PWM is indicated as T01+00PWM. The timer register settings are reflected on the double buffer or T01+00PWM when a write instruction is executed on T01PWM. Be sure to execute the write instructions on T00PWM and T01PWM in this order. (When data is written to the high-order register, the set values of the low-order and high-order registers become effective at the same time.)

Timer register 00

T00PWM		7	6	5	4	3	2	1	0
(0x0028)	Bit Symbol		PWMDUTYL			PWMAD3	PWMAD2	PWMAD1	PWMAD0
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	1	1	1	1	1	1	1	1

Timer register 01

T01PWM		7	6	5	4	3	2	1	0
(0x0029)	Bit Symbol					PWMDUTYH			
	Read/Write					R/W	R/W	R/W	R/W
	After reset	1	1	1	1	1	1	1	1

Bits 7 to 4 of T01PWM are not used in the 12-bit PWM mode. However, data can be written to these bits of T01PWM and the written values are read out as they are when the bits are read. Normally, set these bits to "0".

PWMDUTYH and PWMDUTYL are 4-bit registers. They are combined to set an 8-bit value of duty pulse width (time before the first change in the output) for one cycle (256 counts of the source clock). Hereinafter, an 8-bit value specified by the combined setting of PWMDUTYH and PWMDUTYL is indicated as PWMDUTY.

PWMAD3 to 0 are the additional pulse setting register. Additional pulses can be inserted in specific cycles of the duty pulse by setting each bit to "1". The additional pulses are inserted in the positions listed

14.4 Functions

TMP89FS62VUG

in Table 14-10. PWMAD 3 to 0 can be combined to specify the number of times of inserting the additional pulses in 16 cycles to any number from 1 to 16. Examples of inserting additional pulses are shown in Figure 14-13.


Table 14-10 Cycles in Which Additional Pulses Are Inserted

	Cycles in which additional pulses are inserted among cycles 1 to 16
PWMAD0="1"	9
PWMAD1="1"	5, 13
PWMAD2="1"	3, 7, 11, 15
PWMAD3="1"	2, 4, 6, 8, 10, 12, 14, 16

Set the initial state of the $\overline{PWM1}$ pin at T01MOD<TFF1>. Setting T01MOD<TFF1> to "0" selects the "L" level as the initial state of the $\overline{PWM1}$ pin. Setting T01MOD<TFF1> to "1" selects the "H" level as the initial state of the $\overline{PWM1}$ pin. If the $\overline{PWM1}$ pin is set as the function output pin in the port setting while the timer is stopped, the value of T01MOD<TFF1> is output to the PWM1 pin. Table 14-11 shows the list of output levels of the $\overline{PWM1}$ pin.

Table 14-11 List of Output Levels of PWM1 Pin

	PWM1pin output level						
TFF1	Before the start of operation (initial state) PWMDUTY matched (after the additional pulse)		Overflow	Operation stop- ped (initial state)			
0	L	Н	L	L			
1	Н	L	Н	Н			

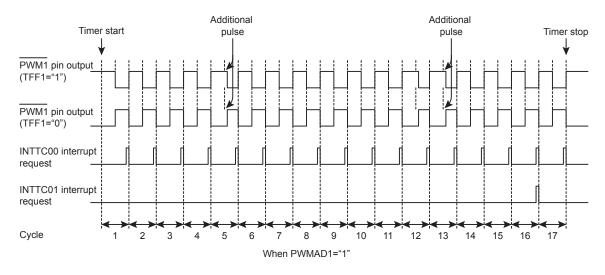

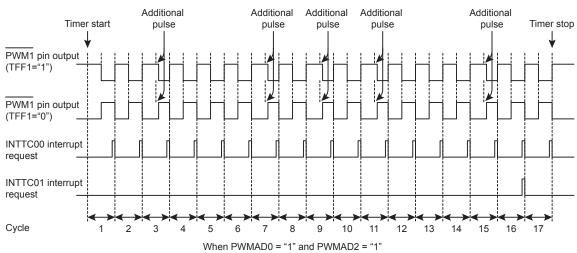


Figure 14-13 Examples of Inserting Additional Pulses

14.4.7.2 Operations

Setting T001CR<T01RUN> to "1" allows the up counter to increment based on the selected source clock. When a match between the lower 8 bits of the up counter value and the value set to $\overline{PWMDUTY}$ is detected, the output of the $\overline{PWM1}$ pin is reversed. When T01MOD<TFF1> is "0", the $\overline{PWM1}$ pin changes from the "L" to "H" level. When T01MOD<TFF1> is "1", the $\overline{PWM1}$ pin changes from the "H" to "L" level.

If any of PWMAD3 to 0 is "1", an additional pulse that corresponds to 1 count of the source clock is inserted in specific cycles of the duty pulse. In other words, the PWM1 pin output is reversed at the timing of PWMDUTY+1. When T00MOD<TFF0> is "0", the period of the "L" level becomes longer than the value set to PWMDUTY by 1 source clock. When T00MOD<TFF0> is "1", the period of the "H" level becomes longer than the value set to PWMDUTY by 1 source clock. This function allows 16 cycles of output pulses to be handled with a resolution nearly equivalent to 12 bits.

No additional pulse is inserted when PWMAD3 to 0 are all "0".

Subsequently, the up counter continues counting up. When the up counter value reaches 256, an overflow occurs and the up counter is cleared to "0x00". At the same time, the output of the $\overline{PWM1}$ pin is reversed. When T01MOD<TFF1> is "0", the $\overline{PWM1}$ pin changes from the "H" to "L" level. When T01MOD<TFF1> is "1", the $\overline{PWM1}$ pin changes from the "L" to "H" level. At this time, an INTTC00 interrupt request is generated (an INTTC00 interrupt request is generated each time an overflow occurs.) An INTTC01 interrupt request is generated at the 16 × n-th overflow (n=1, 2, 3...). Subsequently, the up counter continues counting up.

Page 203 2019/08/01

TMP89FS62VUG

When T001CR<T01RUN> is set to "0" during the timer operation, the up counter is stopped and cleared to "0x00". The $\overline{PWM1}$ pin returns to the level selected at T01MOD<TFF1>.

When an external source clock is selected, input the clock at the TC00 pin. The maximum frequency to be supplied is fcgck/2 [Hz] (in NORMAL1/2 or IDLE1/2 mode) or fs/2⁴ [Hz] (in SLOW1/2 or SLEEP1 mode), and a pulse width of two machine cycles or more is required at both the "H" and "L" levels.

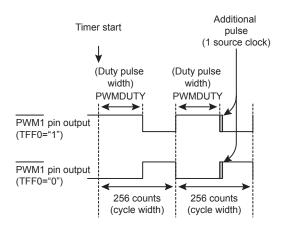


Figure 14-14 PWM1 Pin Output

14.4.7.3 Double buffer

The double buffer can be used for T01+00PWM by setting T01MOD<DBE1>. The double buffer is disabled by setting T01MOD<DBE1> to "0" or enabled by setting T01MOD<DBE1> to "1".

· When the double buffer is enabled

When write instructions are executed on T00PWM and T01PWM in this order during the timer operation, the set value is first stored in the double buffer, and T01+00PWM is not updated immediately. T01+00PWM compares the previous set value with the up counter value. When the $16 \times n$ -th overflow occurs, an INTTC01 interrupt request is generated and the double buffer set value is stored in T01+00PWM. Subsequently, the match detection is executed using a new set value.

When a read instruction is executed on T01+00PWM (T00REG), the value in the double buffer (the last set value) is read out, not the T01+00PWM value (the currently effective value).

When write instructions are executed on T00PWM and T01PWM in this order while the timer is stopped, the set value is immediately stored in both the double buffer and T01+00PWM.

· When the double buffer is disabled

When write instructions are executed on T00PWM and T01PWM in this order during the timer operation, the set value is immediately stored in T01+00PWM. Subsequently, the match detection is executed using a new set value. If the value set to T01+00PWM is smaller than the up counter value, the $\overline{PWM1}$ pin is not reversed until the up counter overflows and a match detection is executed using a new set value. If the value set to T01+00PWM is equal to the up counter value, the match detection is executed immediately after data is written into T01+00PWM. Therefore, the timing of changing the $\overline{PWM1}$ pin may not be an integral multiple of the source clock. Similarly, if T01+00PWM is set during the additional pulse output, the timing of changing the $\overline{PWM1}$ pin may not be an integral multiple of the source clock. If these are problems, enable the double buffer.


When write instructions are executed on T00PWM and T01PWM in this order while the timer is stopped, the set value is immediately stored in T01+00PWM.



(Example) Operate TC00 and TC01 in the 12-bit PWM mode with the operation clock of fcgck/2 and output a duty pulse nearly equivalent to 14.0625 μs in 51.2μs cycles (fcgck = 10 MHz)

(Actually, output a duty pulse of 225 µs in total in 16 cycles (819.2 µs))

SET	(P7FC).1	; Sets P7FC1 to "1"
SET	(P7CR).1	; Sets P7CR1 to "1"
LD	(POFFCR0),0x10	; Sets TC001EN to "1"
DI		; Sets the interrupt master enable flag to "disable"
SET	(EIRH).4	; Sets the INTTC00 interrupt enable register to "1"
EI		; Sets the interrupt master enable flag to "enable"
LD	(T01MOD),0xF2	; Selects the 12-bit PWM mode and fcgck/2
LD	(T00PWM),0x65	; Sets the timer register (duty pulse)
		; $(14.0625\mu s \times 16) / (2/fcgck) = 0x465$
LD	(T01PWM),0x04	; Sets the timer register (duty pulse)
LD	(T001CR),0x06	; Starts TC00 and TC01

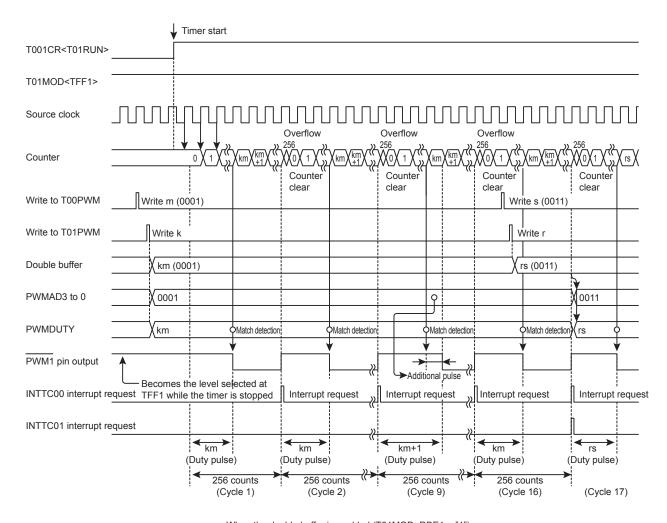

When the double buffer is enabled (T01MOD<DBE1>="1")

Figure 14-15 12-bit PWM Mode Timing Chart

Page 205 2019/08/01

14.4 Functions

TMP89FS62VUG

Table 14-12 Resolutions and Cycles in the 12-bit PWM Mode

		Source clock [Hz]		Reso	lution	8-bit cycle (period × 16)	
T01MOD <tck1></tck1>	NORMAL1/2 or	IDLE1/2 mode					
TOKE	SYSCR1 <dv9ck> = "0"</dv9ck>	SYSCR1 <dv9ck> = "1"</dv9ck>	SLOW1/2 or SLEEP1 mode	fcgck=10MHz	fs=32.768kHz	fcgck=10MHz	fs=32.768kHz
000	fcgck/2 ¹¹	fs/2 ⁴	fs/2 ⁴	204.8µs	488.2μs	52.4ms (838.9ms)	125ms (2000ms)
001	fcgck/2 ¹⁰	fs/2³	fs/2 ³	102.4μs	244.1μs	26.2ms (419.4ms)	62.5ms (1000ms)
010	fcgck/28	fcgck/2 ⁸	-	25.6µs	-	6.6ms (104.9ms)	-
011	fcgck/2 ⁶	fcgck/2 ⁶	-	6.4µs	-	1.6ms (26.2ms)	-
100	fcgck/2 ⁴	fcgck/2⁴	-	1.6µs	-	409.6µs (6.6ms)	-
101	fcgck/2 ²	fcgck/2 ²	-	400ns	-	102.4μs (1.6ms)	-
110	fcgck/2	fcgck/2	-	200ns	-	51.2μs (819.2μs)	-
111	fcgck	fcgck	fs/2²	100ns	122.1µs	25.6µs (409.6µs)	31.3ms (500ms)

14.4.8 16-bit programmable pulse generate (PPG) output mode

In the 16-bit PPG mode, TC00 and TC01 are cascaded to output the pulses that have a resolution of 16 bits and arbitrary pulse width and duty. Two 16-bit registers, T01+00REG and T01+00PWM, are used to output the pulses. This enables output of longer pulses than an 8-bit timer.

14.4.8.1 Setting

Setting T001CR<TCAS> to "1" connects TC00 and TC01 and activates the 16-bit mode. All the settings of TC00 are ignored and those of TC01 are effective in the 16-bit mode.

The 16-bit PPG mode is selected by setting T01MOD<TCM1> to "11". To use the internal clock as the source clock, set T01MOD<EIN1> to "0" and select the clock at T01MOD<TCK1>. To use an external clock as the source clock, set T01MOD<EIN0> to "1".

Set T01MOD<DBE1> to "1" to use the double buffer.

Set the count value that corresponds to a cycle as a 16-bit value at the timer registers T01REG and T00REG. Set the count value that corresponds to a duty pulse as a 16-bit value at T01PWM and T00PWM (hereinafter, the 16-bit value specified by the combined setting of T01REG and T00REG is indicated as T01+00REG, and the 16-bit value specified by the combined setting of T01PWM and T00PWM is indicated as T01+00PWM). The timer register settings are reflected on the double buffer or T01+00PWM and T01+00REG when a write instruction is executed on T01PWM. Be sure to execute the write instructions on T00REG, T01REG and T00PWM before executing a write instruction on T01PWM. (When data is written to T01PWM, the set values of the four timer registers become effective at the same time.)

Set the initial state of the $\overline{PPG1}$ pin at T01MOD<TFF1>. Setting T01MOD<TFF1> to "0" selects the "L" level as the initial state of the $\overline{PPG1}$ pin. Setting T01MOD<TFF1> to "1" selects the "H" level as the initial state of the $\overline{PPG1}$ pin. If the $\overline{PPG1}$ pin is set as the function output pin in the port setting while the timer is stopped, the value of T01MOD<TFF1> is output to the $\overline{PPG1}$ pin. Table 14-13 shows the list of output levels of the $\overline{PPG1}$ pin.

		PPG1 pin o	output level	
TFF1	Before the start of operation (initial state)	T01+00PWM matched	T01+00REG matched	Operation stop- ped (initial state)
0	L	Н	L	L
1	Н	L	Н	Н

Table 14-13 List of Output Levels of PPG1 Pin

14.4.8.2 Operations

Setting T001CR<T01RUN> to "1" allows the up counter to increment based on the selected source clock. When a match between the up counter value and the value set to T01+00PWM is detected, the output of the $\overline{PPG1}$ pin is reversed. When T01MOD<TFF1> is "0", the $\overline{PPG1}$ pin changes from the "L" to "H" level. When T01MOD<TFF1> is "1", the $\overline{PPG1}$ pin changes from the "H" to "L" level. At this time, an INTTC00 interrupt request is generated.

The up counter continues counting up. When a match between the up counter value and the value set to T01+00REG is detected, the output of the $\overline{PPG1}$ pin is reversed again. When T01MOD < TFF1 > is "0", the $\overline{PPG1}$ pin changes from the "H" to "L" level. When T01MOD < TFF1 > is "1", the $\overline{PPG1}$ pin changes from the "L" to "H" level. At this time, an INTTC01 interrupt request is generated and the up counter is cleared to "0x0000".

TMP89FS62VUG

When T001CR<T01RUN> is set to "0" during the timer operation, the up counter is stopped and cleared to "0x0000". The $\overline{PPG1}$ pin returns to the level selected at T01MOD<TFF1>.

When an external source clock is selected, input the clock at the TC00 pin. The maximum frequency to be supplied is fcgck/2 [Hz] (in NORMAL1/2 or IDLE1/2 mode) or fs/2⁴ [Hz] (in SLOW1/2 or SLEEP1 mode), and a pulse width of two machine cycles or more is required at both the "H" and "L" levels.

14.4.8.3 Double buffer

The double buffer can be used for T01+00PWM and T01+00REG by setting T01MOD<DBE1>. The double buffer is enabled by setting T01MOD<DBE1> to "0" or disabled by setting T01MOD<DBE1> to "1".

· When the double buffer is enabled

When a write instruction is executed on T01PWM after write instructions are executed on T00REG, T01REG and T00PWM during the timer operation, the set values are first stored in the double buffer, and T01+00PWM and T01+00REG are not updated immediately. T01 +00PWM and T01+00REG compare the previous set values with the up counter value. When a match between the up counter value and the T01+00REG set value is detected, an INTTC01 interrupt request is generated and the double buffer set values are stored in T01+00PWM and T01+00REG. Subsequently, the match detection is executed using new set values.

When a write instruction is executed on T01PWM after write instructions are executed on T00REG, T01REG and T00PWM while the timer is stopped, the set values are immediately stored in both the double buffer and T01+00PWM and T01+00REG.

· When the double buffer is disabled

When a write instruction is executed on T01PWM after write instructions are executed on T00REG, T01REG and T00PWM during the timer operation, the set values are immediately stored in T01+00PWM and T01+00REG. Subsequently, the match detection is executed using new set values.

If the value set to T01+00PWM or T01+00REG is smaller than the up counter value, the $\overline{PPG1}$ pin is not reversed until the up counter overflows and a match detection is executed using a new set value. If the value set to T01+00PWM or T01+00REG is equal to the up counter value, the match detection is executed immediately after data is written into T01+00PWM and T01+00REG. Therefore, the timing of changing the $\overline{PPG1}$ pin may not be an integral multiple of the source clock. If these are problems, enable the double buffer.

When a write instruction is executed on T01PWM after write instructions are executed on T00REG, T01REG and T00PWM while the timer is stopped, the set values are immediately stored in T01+00PWM and T01+00REG.


When read instructions are executed on T01+00PWM and T01+00REG, the last value written into T01+00REG is read out, regardless of the T00MOD<DBE1> setting.



(Example) Operate TC00 and TC01 in the 16-bit PPG mode with the operation clock of fcgck/2 and output the 68µs duty pulse in 96µs cycles (fcgck = 10 MHz)

SET	(P7FC).1	; Sets P7FC0 to "1"
SET	(P7CR).1	; Sets P7CR0 to "1"
LD	(POFFCR0),0x10	; Sets TC001EN to "1"
DI		; Sets the interrupt master enable flag to "disable"
SET	(EIRH).4	; Sets the INTTC00 interrupt enable register to "1"
EI		; Sets the interrupt master enable flag to "enable"
LD	(T01MOD),0xF3	; Selects the 8-bit PPG mode and fcgck/2
LD	(T00REG),0xE0	; Sets the timer register (cycle)
LD	(T01REG),0x01	; Sets the timer register (cycle)
		; 96µs / (2/fcgck) = 0x01E0
LD	(T00PWM),0x54	; Sets the timer register (duty pulse)
LD	(T01PWM),0x01	; Sets the timer register (duty pulse)
		; 68µs / (2/fcgck) = 0x0154
LD	(T001CR),0x06	; Starts TC00 and TC01

Page 209 2019/08/01

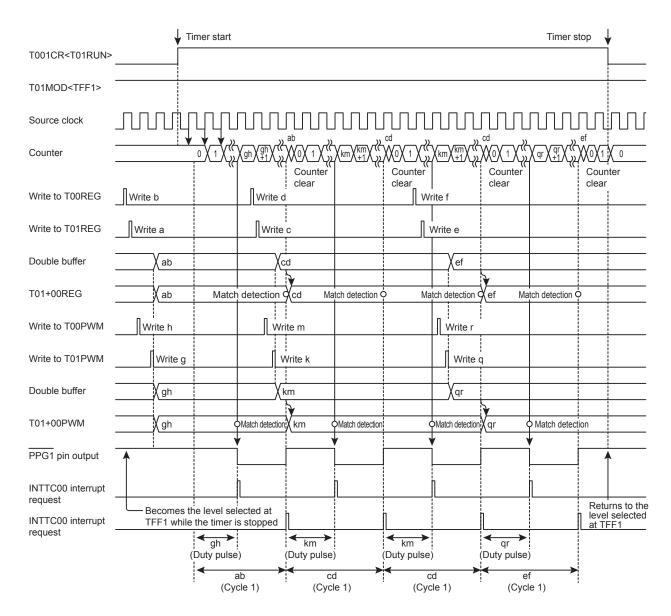

When the double buffer is enabled (T01MOD<DBE1>="1")

Figure 14-16 16-bit PPG Output Mode Timing Chart

15. Real Time Clock (RTC)

The real time clock is a function that generates interrupt requests at certain intervals using the low-frequency clock.

The number of interrupts is counted by the software to realize the clock function.

The real time clock can be used only in the operation modes where the low-frequency clock oscillates, except for SLEEP0.

15.1 Configuration

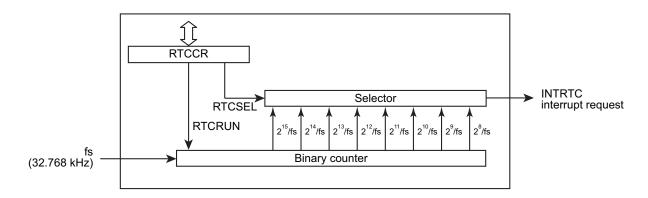


Figure 15-1 Real Time Clock

15.2 Control

The real time clock is controlled by following resisters.

Low power consumption register 2

POFFCR2		7	6	5	4	3	2	1	0
(0x0F76)	Bit Symbol	-	ı	RTCEN	-	ı	ı	SIO1EN	SIO0EN
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

RTCEN	RTC control	0	Disable
RICEN RIC CONIIO		1	Enable
SIO1EN	SIO1EN SIO1 control	0	Disable
SIOTEN		1	Enable
CIOOEN	OLOOFIL OLOO AAAAA	0	Disable
SIOUEN	SIO0EN SIO0 control		Enable

Page 211 2019/08/01

15.3 Function

TMP89FS62VUG

Real time clock control register

RTCCR		7	6	5	4	3	2	1	0
(0x0FC8)	Bit Symbol	-	-	-	-		RTCSEL		RTCRUN
	Read/Write	R	R	R	R	R/W		R/W	
	After reset	0	0	0	0	0	0	0	0

RTCSEL	Selects the interrupt generation interval	000 : 2 ¹⁵ /fs (1.000 [s] @fs=32.768kHz) 001 : 2 ¹⁴ /fs (0.500 [s] @fs=32.768kHz) 010 : 2 ¹³ /fs (0.250 [s] @fs=32.768kHz) 011 : 2 ¹² /fs (125.0 [ms] @fs=32.768kHz) 100 : 2 ¹¹ /fs (62.50 [ms] @fs=32.768kHz) 101 : 2 ¹⁰ /fs (31.25 [ms] @fs=32.768kHz) 110 : 2 ⁹ /fs (15.62 [ms] @fs=32.768kHz) 111 : 2 ⁸ /fs (7.81 [ms] @fs=32.768kHz)
RTCRUN	Enables/disables the real time clock operation	0 : Disable 1 : Enable

Note 1: fs: Low-frequency clock [Hz]

Note 2: RTCCR<RTCSEL> can be rewritten only when RTCCR<RTCRUN> is "0". If data is written into RTCCR<RTCSEL> when RTCCR<RTCRUN> is "1", the existing data remains effective. RTCCR<RTCSEL> can be rewritten at the same time as enabling the real time clock, but it cannot be rewritten at the same time as disabling the real time clock.

Note 3: If the real time clock is enabled and when 1) SYSCR2<XTEN> is cleared to "0" to stop the low-frequency clock oscillation circuit or 2) the operation is changed to the STOP mode or the SLEEP0 mode, the data in RTCCR<RTCSEL> is maintained and RTCCR<RTCRUN> is cleared to "0".

15.3 Function

15.3.1 Low Power Consumption Function

Real time clock has the low power consumption registers (POFFCR2) that save power when the real time clock is not being used.

Setting POFFCR2<RTCEN> to "0" disables the basic clock supply to real time clock to save power. Note that this renders the real time clock unusable. Setting POFFCR2<RTCEN> to "1" enables the basic clock supply to real time clock and allows the real time clock to operate.

After reset, POFFCR2<RTCEN> are initialized to "0", and this renders the real time clock unusable. When using the real time clock for the first time, be sure to set POFFCR2<RTCEN> to "1" in the initial setting of the program (before the real time clock control registers are operated).

Do not change POFFCR2<RTCEN> to "0" during the real time clock operation. Otherwise real time clock may operate unexpectedly.

15.3.2 Enabling/disabling the real time clock operation

Setting RTCCR<RTCRUN> to "1" enables the real time clock operation. Setting RTCCR<RTCRUN> to "0" disables the real time clock operation.

RTCCR<RTCRUN> is cleared to "0" just after reset release.

15.3.3 Selecting the interrupt generation interval

The interrupt generation interval can be selected at RTCCR<RTCSEL>.



RTCCR<RTCSEL> can be rewritten only when RTCCR<RTCRUN> is "0". If data is written into RTCCR<RTCSEL> when RTCCR<RTCRUN> is "1", the existing data remains effective.

RTCCR<RTCSEL> can be rewritten at the same time as enabling the real time clock operation, but it cannot be rewritten at the same time as disabling the real time clock operation.

15.4 Real Time Clock Operation

15.4.1 Enabling the real time clock operation

Set the interrupt generation interval to RTCCR<RTCSEL>, and at the same time, set RTCCR<RTCRUN> to "1".

When RTCCR<RTCRUN> is set to "1", the binary counter for the real time clock starts counting of the low-frequency clock.

When the interrupt generation interval selected at RTCCR<RTCSEL> is reached, a real time clock interrupt request (INTRTC) is generated and the counter continues counting.

15.4.2 Disabling the real time clock operation

Clear RTCCR<RTCRUN> to "0".

When RTCCR<RTCRUN> is cleared to "0", the binary counter for the real time clock is cleared to "0" and stops counting of the low-frequency clock.

15. Real Time Clock (RTC)

15.4 Real Time Clock Operation

TMP89FS62VUG

16. Asynchronous Serial Interface (UART)

The TMP89FS62V contains 3 channels of asynchronous serial interfaces (UART).

This chapter describes asynchronous serial interface 0 (UART0). For UART1 and UART2, replace the SFR addresses and pin names as shown in Table 16-1 and Table 16-2.

Table 16-1 SFR Address Assignment

	UARTxCR1	UARTxCR2	UARTxDR	UARTxSR	RDxBUF	TDxBUF
	(address)	(address)	(address)	(address)	(address)	(address)
LIADTO	UART0CR1	UART0CR2	UART0DR	UART0SR	RD0BUF	TD0BUF
UART0	(0x001A)	(0x001B)	(0x001C)	(0x001D)	(0x001E)	(0x001E)
IIADT4	UART1CR1	UART1CR2	UART1DR	UART1SR	RD1BUF	TD1BUF
UART1	(0x0F54)	(0x0F55)	(0x0F56)	(0x0F57)	(0x0F58)	(0x0F58)
LIADTO	UART2CR1	UART2CR2	UART2DR	UART2SR	RD2BUF	TD2BUF
UART2	(0x0F5A)	(0x0F5B)	(0x0F5C)	(0x0F5D)	(0x0F5E)	(0x0F5E)

Table 16-2 Pin Names

	Serial data input pin	Serial data output pin
UART0	RXD0 pin	TXD0 pin
UART1	RXD1 pin	TXD1 pin
UART2	RXD2 pin	TXD2 pin

16.1 Configuration

UART0 transmit data buffer UART0 control register 1 UART0CR1 UART0CR1 UART0 receive data buffer RD0BUF 2 Receive control circuit Shift register Transmit control circuit Parity bit Shift register Stop bit INTTXD0 interrupt request RXD0 Noise rejection circuit TXD0 IrDA control INTRXD0 interrupt request Baud rate generator Receive ' RT clock В PPGA0 output > Frequency В (TCA0 output) divider Transmit RT clock Counter Counter **1**214 Transmission start UART0SR UART0CR2 fcgck or fs > 8-bit counter UART0 status UART0 control register 2 8-bit counter register

TMP89FS62VUG

Figure 16-1 Asynchronous Serial Interface (UART)

Match detection

UART0DR
UART0 baud rate register



16.2 Control

UART0 is controlled by the low power consumption registers (POFFCR1), UART0 control registers 1 and 2 (UART0CR1 and UART0CR2) and the UART0 baud rate register (UART0DR). The operating status can be monitored using the UART status register (UART0SR).

Low power consumption register 1

POFFCR1		7	6	5	4	3	2	1	0
(0x0F75)	Bit Symbol	-	-	-	-	-	UART2EN	UART1EN	UART0EN
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

UART2EN	UART2 control	0	Disable Enable
		0	Disable
UART1EN	UART1EN UART1 control	1	Enable
UART0EN	UART0EN UART0 control	0	Disable
UARTUEN	OAR 10 CONTION	1	Enable

Page 217 2019/08/01

TMP89FS62VUG

UART0 control register 1

UART0CR1 7 6 5 4 3 2 1 0 RXE STOPBT IRDASEL BRG (0x001A) Bit Symbol TXE EVEN PΕ Read/Write R/W R/W R/W R/W R/W R/W R/W R 0 0 After reset 0 0 0 0 0 0

TXE	Transmit operation	0: Disable 1: Enable					
RXE	Receive operation	0: 1:					
STOPBT	Transmit stop bit length	0: 1 bit 1: 2 bits					
EVEN	Parity selection	0: Odd-numbered parity 1: Even-numbered parity					
PE	Parity addition	0: 1:	No parity Parity added				
IRDASEL	TXD pin output selection	0: 1:	UART output IrDA output				
			When SYSCR2 <sysck> is "0"</sysck>	When SYSCR2 <sysck> is "1"</sysck>			
BRG	Transfer base clock selection	0:	D: fcgck fs				
		1:	TCA0	output			

- Note 1: fcgck, Gear clock; fs, Low-frequency clock
- Note 2: If the TXE or RXE bit is set to "0" during the transmission or receiving of data, the operation is not disabled until the data transfer is completed. At this time, the data stored in the transmit data buffer is discarded.
- Note 3: EVEN, PE and BRG settings are common to transmission and receiving.
- Note 4: Set RXE and TXE to "0" before changing BRG.
- Note 5: When BRG is set to the TCA0 output, the RT clock becomes asynchronous and the start bit of the transmitted/received data may get shorter by a maximum of (UART0DR+1)/(Transfer base clock frequency)[s].

 If the pin is not used for the TCA0 output, control the TCA0 output by using the port function control register.
- Note 6: To prevent STOPBT, EVEN, PE, IRDASEL and BRG from being changed accidentally during the UART communication, the register cannot be rewritten during the UART operation. For details, refer to "16.4 Protection to Prevent UARTOCR1 and UARTOCR2 Registers from Being Changed".
- Note 7: When the STOP, IDLE0 or SLEEP0 mode is activated, TXE and RXE are cleared to "0" and the UART stops. Other bits keep their values.



UART0 control register 2

UART0CR2		7	6	5	4	3	2	1	0
(0x001B)	Bit Symbol	-	-		RTSEL		RXI	ONC	STOPBR
	Read/Write	R	R		R/W		R	W	R/W
	After reset	0	0	0	0	0	0	0	0

			Odd-numbered bits of transfer frame	Even-numbered bits of transfer frame			
		000:	16 clocks	16 clocks			
		001:	16 clocks	17 clocks			
RTSEL	Selects the number of RT clocks	010:	15 clocks	15 clocks			
		011:	15 clocks	16 clocks			
		100:	17 clocks 17 clocks				
		101:	Reserved				
		11*:	Rese	erved			
	Selects the RXD input noise rejection time	00: 01:	No noise rejection 1 x (UART0DR+1)/(Transfer base clock frequency) [s]				
RXDNC	(Time of pulses to be removed as	10:	2 x (UART0DR+1)/(Transfer base clock frequency) [s]				
	noise)	11:	4 x (UART0DR+1)/(Transfer base	clock frequency) [s]			
STOPBR	Receive stop bit length	0: 1:	1 bit 2 bits				

- Note 1: When a read instruction is executed on UART0CR2, bits 7 and 6 are read as "0".
- Note 2: RTSEL can be set to two kinds of RT clocks for the even- and odd-numbered bits of the transfer frame. For details, refer to "16.8.1 Transfer baud rate calculation method".
- Note 3: For details of the RXDNC noise rejection time, refer to "16.10 Received Data Noise Rejection".
- Note 4: When the STOP, IDLE0 or SLEEP0 mode is activated, the UART stops automatically but each bit value of UART0CR2 remains unchanged.
- Note 5: When STOPBR is set to 2 bits, the first bit of the stop bits (during data receiving) is not checked for a framing error.
- Note 6: To prevent RTSEL, RXDNC and STOPBR from being changed accidentally during the UART communication, the register cannot be rewritten during the UART operation. For details, refer to "16.4 Protection to Prevent UART0CR1 and UART0CR2 Registers from Being Changed ".

UART0 baud rate register

UART0DR		7	6	5	4	3	2	1	0
(0x001C)	Bit Symbol	UART0DR7	UART0DR6	UART0DR5	UART0DR4	UART0DR3	UART0DR2	UART0DR1	UART0DR0
	Read/Write	R/W							
	After reset	0	0	0	0	0	0	0	0

- Note 1: Set UART0CR1<RXE> and UART0CR1<TXE> to "0" before changing UART0DR. For the set values, refer to "16.8 Transfer Baud Rate".
- Note 2: When UART0CR1<BRG> is set to the TCA0 output, the value set to UART0DR has no meaning.
- Note 3: When the STOP, IDLE0 or SLEEP0 mode is activated, the UART stops automatically but each bit value of UART0DR remains unchanged.

Page 219 2019/08/01

16.2 Control

TMP89FS62VUG

UART0 status register

UART0SR		7	6	5	4	3	2	1	0
(0x001D)	Bit Symbol	PERR	FERR	OERR	-	RBSY	RBFL	TBSY	TBFL
	Read/Write	R	R	R	R	R	R	R	R
	After reset	0	0	0	0	0	0	0	0

PERR	Parity error flag	0: 1:	No parity error Parity error
FERR	Framing error flag	0: 1:	No framing error Framing error
OERR	Overrun error flag	0: 1:	No overrrun error Overrun error
RBSY	Receive busy flag	0: 1:	Before receiving or end of receiving On receiving
RBFL	Receive buffer full flag	0: 1:	Receive buffer empty Receive buffer full
TBSY	Transmit busy flag	0: 1:	Before transmission or end of transmission On transmitting
TBFL Transmit buffer full flag		0: 1:	Transmit buffer empty Transmit buffer full (Transmit data writing is completed)

Note 1: TBFL is cleared to "0" automatically after an INTTXD0 interrupt request is generated, and is set to "1" when data is set to TD0BUF.

Note 2: When a read instruction is executed on UARTOSR, bit 4 is read as "0".

Note 3: When the STOP, IDLE0 or SLEEP0 mode is activated, each bit of UART0SR is cleared to "0" and the UART stops.

UART0 receive data buffer

RD0BUF		7	6	5	4	3	2	1	0
(0x001E)	Bit Symbol	RD0DR7	RD0DR6	RD0DR5	RD0DR4	RD0DR3	RD0DR2	RD0DR1	RD0DR0
	Read/Write	R	R	R	R	R	R	R	R
	After reset	0	0	0	0	0	0	0	0

Note 1: When the STOP, IDLE0 or SLEEP0 mode is activated, the RD0BUF values become undefined. If received data is required, read it before activating the mode.

UART0 transmit data buffer

TD0BUF		7	6	5	4	3	2	1	0
(0x001E)	Bit Symbol	TD0DR7	TD0DR6	TD0DR5	TD0DR4	TD0DR3	TD0DR2	TD0DR1	TD0DR0
	Read/Write	W	W	W	W	W	W	W	W
	After reset	0	0	0	0	0	0	0	0

Note 1: When the STOP, IDLE0 or SLEEP0 mode is activated, the TD0BUF values become undefined.

16.3 Low Power Consumption Function

UART0 has a low power consumption register (POFFCR1) that saves power consumption when the UART function is not used.

Setting POFFCR1<UART0EN> to "0" disables the basic clock supply to UART0 to save power. Note that this renders the UART unusable. Setting POFFCR1<UART0EN> to "1" enables the basic clock supply to UART0 and renders the UART usable.

After reset, POFFCR1<UART0EN> is initialized to "0", and this renders the UART unusable. When using the UART for the first time, be sure to set POFFCR1<UART0EN> to "1" in the initial setting of the program (before the UART control register is operated).

Do not change POFFCR1<UART0EN> to "0" during the UART operation, otherwise UART0 may operate unexpectedly.

Page 221 2019/08/01

16.4 Protection to Prevent UART0CR1 and UART0CR2 Registers from Being Changed

The TMP89FS62V has a function that protects the registers from being changed so that the UART communication settings (for example, stop bit and parity) are not changed accidentally during the UART operation.

Specific bits of UART0CR1 and UART0CR2 can be changed only under the conditions shown in Table 16-3. If a write instruction is executed on the register when it is protected from being changed, the bits remain unchanged and keep their previous values.

Table 16-3 Changing of UART0CR1 and UART0CR2

		Cor	nditions that allow	the bit to be chan	ged		
Bit to be changed	Function	UART0CR1 <txe></txe>			UARTOSR <rbsy></rbsy>		
UART0CR1 <stopbt></stopbt>	Transmit stop bit length	Both of these	Both of these bits are "0" -				
UART0CR1 <even></even>	Parity selection		All of those	hita ara "O"			
UART0CR1 <pe></pe>	Parity addition		All of these bits are "0"				
UART0CR1 <irdasel></irdasel>	TXD pin output selection	Both of thes	-	-			
UART0CR1 <brg></brg>	Transfer base clock selection		All of these bits are "0"				
UART0CR2 <rtsel></rtsel>	Selection of number of RT clocks		All of these	bits are "U"			
UART0CR2 <rxdnc></rxdnc>	UART0CR2 <rxdnc> Selection of RXD pin input noise rejection time</rxdnc>		-	Both of these	e bits are "0"		
UART0CR2 <stopbr></stopbr>	Receive stop bit length						



16.5 Activation of STOP, IDLE0 or SLEEP0 Mode

16.5.1 Transition of register status

When the STOP, IDLE0 or SLEEP0 mode is activated, the UART stops automatically and each register becomes the status as shown in Table 16-4. For the registers that do not hold their values, make settings again as needed after the operation mode is recovered.

Table 16-4 Transition of Register Status

	7	6	5	4	3	2	1	0
	TXE	RXE	STOPBT	EVEN	PE	IRDASEL	BRG	-
UART0CR1	Cleared to 0	Cleared to 0	Hold the value	-				
	-	-		RTSEL		RXI	ONC	STOPBR
UART0CR2	-	-	Hold the value					
LIADTOCD	PERR	FERR	OERR	-	RBSY	RBFL	TBSY	TBFL
UART0SR	Cleared to 0	Cleared to 0	Cleared to 0	-	Cleared to 0	Cleared to 0	Cleared to 0	Cleared to 0
	UART0DR7	UART0DR6	UART0DR5	UART0DR4	UART0DR3	UART0DR2	UART0DR1	UART0DR0
UART0DR	Hold the value							
	RD0DR7	RD0DR6	RD0DR5	RD0DR4	RD0DR3	RD0DR2	RD0DR1	RD0DR0
RD0BUF	Indetermi- nate							
	TD0DR7	TD0DR6	TD0DR5	TD0DR4	TD0DR3	TD0DR2	TD0DR1	TD0DR0
TD0BUF	Indetermi- nate							

16.5.2 Transition of TXD pin status

When the IDLE0, SLEEP0 or STOP mode is activated, the TXD pin reverts to the status shown in Table 16-5, whether data is transmitted/received or the operation is stopped.

Table 16-5 TXD Pin Status When the STOP, IDLE0 or SLEEP0 Mode Is Activated

UART0CR1	IDI E0 or CI EED0 made	STOP	mode	
<irdasel></irdasel>	IDLE0 or SLEEP0 mode	SYSCR1 <outen>="1"</outen>	SYSCR1 <outen>="0"</outen>	
"0"	H level	H level	11: 7	
"1"	L level	L level	Hi-Z	

Page 223 2019/08/01

16.6 Transfer Data Format

The UART transfers data composed of the following four elements. The data from the start bit to the stop bit is collectively defined as a "transfer frame". The start bit consists of 1 bit (L level) and the data consists of 8 bits. Parity bits are determined by UART0CR1<PE> that selects the presence or absence of parity and UART0CR1<EVEN> that selects even- or odd-numbered parity. The bit length of the stop bit can be selected at UART0CR1<STBT>.

Figure 16-2 shows the transfer data format.

- Start bit (1 bit)
- · Data (8 bits)
- · Parity bit (selectable from even-numbered, odd-numbered or no parity)
- Stop bit (selectable from 1 bit or 2 bits)

							Т	ransfer	frame					
PE	STBT		1	2	3	4	5	6	7	8	9	10	11	12
0	0	\neg	Start	Bit 0	Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Stop 1		
0	1		Start	Bit 0	Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Stop 1	Stop 2	
1	0		Start	Bit 0	Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Parity	Stop 1	1
1	1		Start	Bit 0	Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Parity	Stop 1	Stop 2

Figure 16-2 Transfer Data Format

16.7 Infrared Data Format Transfer Mode

The TXD0 pin can output data in the infrared data format (IrDA) by the setting of the IrDA output control register. Setting UART0CR1<IRDASEL> to "1" allows the TXD0 pin to output data in the infrared data format.

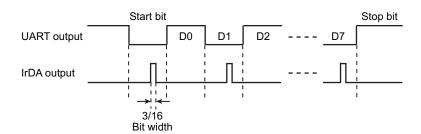


Figure 16-3 Example of Infrared Data Format (Comparison between Normal Output and Ir-DA Output)



16.8 Transfer Baud Rate

The transfer baud rate of UART is set by UART0CR1<BRG>, UART0DR and UART0CR2<RTSEL>. The settings of UART0DR and UART0CR2<RTSEL> for general baud rates and operating frequencies are shown below.

For independent calculation of transfer baud rates, refer to "16.8.1 Transfer baud rate calculation method".

Table 16-6 Set Values of UART0DR and UART0CR2<RTSEL> for Transfer Baud Rates (fcgck=10 to 1 MHz, UART0CR2<RXDNC>=0y00)

Basic		Operating frequency											
baud rate [baud]	Register	10MHz	8MHz	7.3728 MHz	6.144 MHz	6MHz	5MHz	4.9152 MHz	4.19MHz	4MHz	2MHz	1MHz	
	UART0DR	0x04	0x03	-	0x02	0x02	-	-	0x01	0x01	0x00	-	
128000	RTSEL	0y011	0y011	-	0y000	0y011	-	-	0y001	0y011	0y011	-	
	Error	(+0.81%)	(+0.81%)	-	(0%)	(+0.81%)	-	-	(-0.80%)	(+0.81%)	(+0.81%)	-	
	UART0DR	0x04	0x03	0x03	-	0x02	-	-	-	0x01	0x00	-	
115200	RTSEL	0y100	0y100	0y000	-	0y100	-	-	-	0y100	0y100	-	
	Error	(+2.12%)	(+2.12%)	(0%)	-	(+2.12%)	-	-	-	(+2.12%)	(+2.12%)	-	
	UART0DR	0x07	0x06	0x05	0x04	0x04	0x03	0x03	-	0x02	-	-	
76800	RTSEL	0y001	0y010	0y000	0y000	0y011	0y001	0y000	-	0y100	-	-	
	Error	(-1.36%)	(-0.79%)	(0%)	(0%)	(+0.81%)	(-1.36%)	(0%)	-	(+2.12%)	-	-	
	UART0DR	0x09	0x07	0x06	0x05	0x05	0x04	0x04	0x03	0x03	0x01	0x00	
62500	RTSEL	0y000	0y000	0y100	0y001	0y000	0y000	0y011	0y100	0y000	0y000	0y000	
	Error	(0%)	(0%)	(-0.87%)	(-0.70%)	(0%)	(0%)	(+1.48%)	(-1.41%)	(0%)	(0%)	(0%)	
	UART0DR	0x0A	0x08	0x07	0x06	0x06	0x04	0x04	-	0x03	0x01	0x00	
57600	RTSEL	0y000	0y011	0y000	0y010	0y010	0y100	0y100	-	0y100	0y100	0y100	
	Error	(-1.36%)	(-0.44%)	(0%)	(+1.59%)	(-0.79%)	(+2.12%)	(+0.39%)	-	(+2.12%)	(+2.12%)	(+2.12%)	
	UART0DR	0x10	0x0C	0x0B	0x09	0x09	0x07	0x07	0x06	0x06	0x02	-	
38400	RTSEL	0y011	0y000	0y000	0y000	0y011	0y001	0y000	0y011	0y010	0y100	-	
	Error	(-1.17%)	(+0.16%)	(0%)	(0%)	(+0.81%)	(-1.36%)	(0%)	(+0.57%)	(-0.79%)	(+2.12%)	-	
	UART0DR	0x22	0x19	0x17	0x13	0x12	0x10	0x0F	0x0D	0x0C	0x06	0x02	
19200	RTSEL	0y010	0y000	0y000	0y000	0y001	0y011	0y000	0y011	0y000	0y010	0y100	
	Error	(-0.79%)	(+0.16%)	(0%)	(0%)	(-0.32%)	(-1.17%)	(0%)	(+0.57%)	(+0.16%)	(-0.79%)	(+2.12%)	
	UART0DR	0x40	0x30	0x2F	0x27	0x26	0x22	0x1F	0x1C	0x19	0x0C	0x06	
9600	RTSEL	0y000	0y100	0y000	0y000	0y000	0y010	0y000	0y010	0y000	0y000	0y010	
	Error	(+0.16%)	(+0.04%)	(0%)	(0%)	(+0.16%)	(-0.79%)	(0%)	(+0.34%)	(+0.16%)	(+0.16%)	(-0.79%)	
	UART0DR	0x8A	0x64	0x5F	0x4F	0x4D	0x40	0x3F	0x34	0x30	0x19	0x0C	
4800	RTSEL	0y010	0y001	0y000	0y000	0y000	0y000	0y000	0y001	0y100	0y000	0y000	
	Error	(-0.08%)	(+0.01%)	(0%)	(0%)	(+0.16%)	(+0.16%)	(0%)	(-0.18%)	(+0.04%)	(+0.16%)	(+0.16%)	
	UART0DR	0xF4	0xC9	0xBF	0x9F	0x92	0x8A	0x7F	0x6C	0x64	0x30	0x19	
2400	RTSEL	0y100	0y001	0y000	0y000	0y100	0y010	0y000	0y000	0y001	0y100	0y000	
	Error	(+0.04%)	(+0.01%)	(0%)	(0%)	(+0.04%)	(-0.08%)	(0%)	(+0.11%)	(+0.01%)	(+0.04%)	(+0.16%)	
	UART0DR	-	-	-	-	-	0xF4	0xFF	0xE8	0xC9	0x64	0x30	
1200	RTSEL	-	-	-	-	-	0y100	0y000	0y010	0y001	0y001	0y100	
	Error	-	-	-	-	-	(+0.04%)	(+0%)	(-0.10%)	(+0.01%)	(+0.01%)	(+0.04%)	

Page 225 2019/08/01

Table 16-7 Set Values of UART0DR and UART0CR2<RTSEL> for Transfer Baud Rates (fs=32.768 kHz, UART0CR2<RXDNC>=0y00)

Basic baud		Operating frequency				
rate [baud]	Register	32.768 kHz				
	UART0DR	0x06				
300	RTSEL	0y011				
	Error	(+0.67%)				
	UART0DR	0x0D				
150	RTSEL	0y011				
	Error	(+0.67%)				
	UART0DR	0x0E				
134	RTSEL	0y001				
	Error	(-1.20%)				
	UART0DR	0x11				
110	RTSEL	0y001				
	Error	(+0.30%)				
	UART0DR	0x1C				
75	RTSEL	0y010				
	Error	(+0.44%)				

Note 1: The overall error from the basic baud rate must be within ±3%. Even if the overall error is within ±3%, the communication may fail due to factors such as frequency errors in external controllers (for example, a personal computer) and oscillators and the load capacity of the communication pin.

16.8.1 Transfer baud rate calculation method

16.8.1.1 Bit width adjustment using UART0CR2<RTSEL>

The bit width of transmitted/received data can be finely adjusted by changing UART0CR2<RTSEL>. The number of RT clocks per bit can be changed in a range of 15 to 17 clocks by changing UART0CR2<RTSEL>. The RT clock is the transfer base clock, which is the pulses obtained by counting the clock selected at UART0CR1<BRG> the number of times of (UART0DR set value) + 1. Especially, when UART0CR2<RTSEL> is set to "0y001" or "0y011", two types of RT clocks alternate at each bit, so that the pseudo baud rates of RT × 15.5 clocks and RT × 16.5 clocks can be generated. The number of RT clocks per bit of transfer frame is shown in Figure 16-4.

For example, when fcgck is 4 [MHz], UART0CR2<RTSEL> is set to "0y000" and UART0DR is set to "0x19", the baud rate calculated using the formula in Figure 16-4 is expressed as:

fcgck / $(16 \times (UART0DR + 1) = 9615 [baud]$

These settings generate a baud rate close to 9600 [baud] (+0.16%).



	Transfer frame														
PE	STBT		1	2	3	4	5	6	7	8	9	10	11	12	
0	0	¬	Start	Bit 0	Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Stop 1			
0	1		Start	Bit 0	Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Stop 1	Stop 2		
1	0		Start	Bit 0	Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Parity	Stop 1		
1	1	$\lceil \neg \rceil$	Start	Bit 0	Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Parity	Stop 1	Stop 2	
RT	SEL		! ! !				Nu	mber of	RT clo	cks			 		Generated baud rate
00	00		16	16	16	16	16	16	16	16	16	16	16	16	fcgck 16 × (UARTDR+1) [baud]
00	01		16	17	16	17	16	17	16	17	16	17	16	17	fcgck 16.5 × (UARTDR+1) [baud]
0	10		15	15	15	15	15	15	15	15	15	15	15	15	fcgck 15 × (UARTDR+1) [baud]
0.	11		15	16	15	16	15	16	15	16	15	16	15	16	fcgck 15.5×(UARTDR+1) [baud]
10	00		17	17	17	17	17	17	17	17	17	17	17	17	fcgck 17 × (UARTDR+1) [baud]

*When BRG is set to fcgck

Figure 16-4 Fine Adjustment of Baud Rate Clock Using UART0CR2<RTSEL>

16.8.1.2 Calculation of set values of UART0CR2<RTSEL> and UART0DR

The set value of UART0DR for an operating frequency and baud rate can be calculated using the calculation formula shown in Figure 16-5. For example, to generate a basic baud rate of 38400 [baud] with fcgck=4 [MHz], calculate the set value of UART0DR for each setting of UART0CR2<RTSEL> and compensate the calculated value to a positive number to obtain the generated baud rate as shown in Figure 16-6. Basically, select the set value of UART0CR2<RTSEL> that has the smallest baud rate error from among the generated baud rates. In Figure 16-6, the setting of UART0CR2<RTSEL>="0y010" has the smallest error among the calculated baud rates, and thus the generated baud rate is 38095 [baud] (-0.79%) against the basic baud rate of 38400 [baud].

Note: The error from the basic baud rate should be accurate to within ±3%. Even if the error is within ±3%, the communication may fail due to factors such as frequency errors of external controllers (for example, a personal computer) and oscillators and the load capacity of the communication pin.

RTSEL	UARTDR set value					
000	$UARTDR = \frac{fcgck [Hz]}{16 \times A [baud]} - 1$					
001	$UARTDR = \frac{fcgck [Hz]}{16.5 \times A [baud]} - 1$					
010	$UARTDR = \frac{fcgck [Hz]}{15 \times A [baud]} - 1$					
011	$UARTDR = \frac{fcgck [Hz]}{15.5 \times A [baud]} - 1$					
100	$UARTDR = \frac{fcgck [Hz]}{17 \times A [baud]} - 1$					

Figure 16-5 UARTODR Calculation Method (When BRG Is Set to fcgck)

RTSEL	UARTDR calculation	Generated baud rate		
000	UARTDR = $\frac{4000000 \text{ [Hz]}}{16 \times 38400 \text{ [baud]}}$ −1 ≈ 6	$\frac{4000000 \text{ [Hz]}}{16 \times (6+1)} = 35714 \text{ [baud] } (-6.99\%)$		
001	UARTDR = $\frac{4000000 \text{ [Hz]}}{16.5 \times 38400 \text{ [baud]}}$ −1 ≈ 5	$\frac{4000000 \text{ [Hz]}}{16.5 \times (5+1)} = 40404 \text{ [baud] (+5.22\%)}$		
010	UARTDR = $\frac{4000000 \text{ [Hz]}}{15 \times 38400 \text{ [baud]}}$ -1 ≈ 6	$\frac{4000000 \text{ [Hz]}}{15 \times (6+1)} = 38095 \text{ [baud] } (-0.79\%)$		
011	UARTDR = $\frac{4000000 \text{ [Hz]}}{15.5 \times 38400 \text{ [baud]}} - 1 \approx 6$	$\frac{4000000 \text{ [Hz]}}{15.5 \times (6+1)} = 36866 \text{ [baud] } (-3.99\%)$		
100	UARTDR = $\frac{4000000 \text{ [Hz]}}{17 \times 38400 \text{ [baud]}}$ -1 ≈ 5	$\frac{4000000 \text{ [Hz]}}{17 \times (5+1)} = 39216 \text{ [baud] (+2.12\%)}$		

Figure 16-6 Example of UART0DR Calculation



16.9 Data Sampling Method

The UART receive control circuit starts RT clock counting when it detects a falling edge of the input pulses to the RXD0 pin. 15 to 17 RT clocks are counted per bit and each clock is expressed as RTn (n=16 to 0). In a bit that has 17 RT clocks, RT16 to RT0 are counted. In a bit that has 16 RT clocks, RT15 to RT0 are counted. In a bit that has 15 RT clocks, RT14 to RT0 are counted (Decrement). During counting of RT8 to RT6, the UART receive control circuit samples the input pulses to the RXD0 pin to make a majority decision. The same level detected twice or more from among three samplings is processed as the data for the bit.

The number of RT clocks can be changed in a range of 15 to 17 by setting UART0CR2<RTSEL>. However, sampling is always executed in RT8 to RT6, even if the number of RT clocks is changed (Figure 16-7).

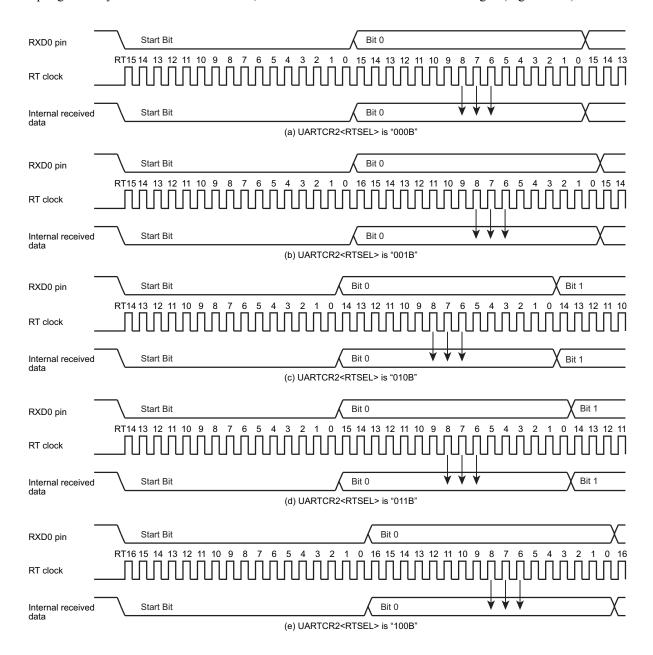


Figure 16-7 Data Sampling in Each Case of UARTCR2<RTSEL>

The sampling (a majority decision) is done at the timing of a data bit, parity bit and STOP bit.

The sampling (a majority decision) is not done at the timing of the START bit. After the falling edge of the RXD0 pin is detected, the counting by the RT clock is continued regardless of the RXD0 pin's level after the falling edge and the UART starts receiving a data.

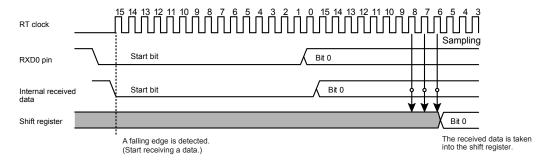


Figure 16-8 Start Bit Sampling

Not to start receiving a data by the influence of a noise on the RXD0 pin, a noise should be reject. For a detail, refer to "16.10 Received Data Noise Rejection". Generally, it is recommend that the program has a error recovery procedure beforehand to reject the influence of a noise on the RXD0 pin.




16.10 Received Data Noise Rejection

When noise rejection is enabled at UART0CR2<RXDNC>, the time of pulses to be regarded as signals is as shown in Table 16-8.

Table 16-8 Received Data Noise Rejection Time

RXDNC	Noise rejection time [s]	Time of pulses to be regarded as signals				
00	No noise rejection	-				
01	(UART0DR+1)/(Transfer base clock frequency)	2 × (UART0DR+1)/(Transfer base clock frequency)				
10	2 × (UART0DR+1)/(Transfer base clock frequency)	4 × (UART0DR+1)/(Transfer base clock frequency)				
11	4 × (UART0DR+1)/(Transfer base clock frequency)	8 × (UART0DR+1)/(Transfer base clock frequency)				

Note 1: The transfer base clock frequency is the clock frequency selected at UARTCR1<BRG>.

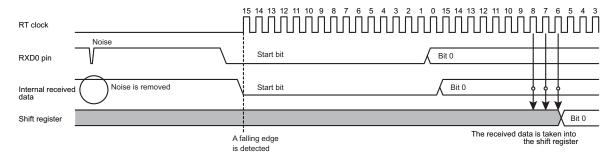

When the noise rejection circuit is used

Figure 16-9 Received Data Noise Rejection

16.11 Transmit/Receive Operation

16.11.1 Data transmit operation

Set UART0CR1<TXE> to "1". Check UART0SR<TBFL> = "0", and then write data into TD0BUF (transmit data buffer). Writing data into TD0BUF sets UART0SR<TBFL> to "1", transfers the data to the transmit shift register, and outputs the data sequentially from the TXD0 pin. The data output includes a start bit, stop bits whose number is specified in UART0CR1<STBT> and a parity bit if parity addition is specified. Select the data transfer baud rate using UART0CR1<BRG>, UART0CR2<RTSEL> and UART0DR. When data transmission starts, the transmit buffer full flag UART0SR<TBFL> is cleared to "0" and an INTTXD0 interrupt request is generated.

- Note 1: After data is written into TD0BUF, if new data is written into TD0BUF before the previous data is transferred to the shift register, the new data is written over the previous data and is transferred to the shift register.
- Note 2: Under the conditions shown in Table 16-9, the TXD0 pin output is fixed at the L or H level according to the setting of UART0CR1<IRDASEL>.

O contillation	TXD0 pin output			
Condition	IRDASEL="0"	IRDASEL="1"		
When UART0CR1 <txe> is "0"</txe>				
From when "1" is written to UART0CR1 <txe> to when the transmitted data is written to TD0BUF</txe>	H level	L level		
When the STOP, IDLE0 or SLEEP0				

Table 16-9 TXD0 Pin Output

mode is active

16.11.2 Data receive operation

Set UART0CR1<RXE> to "1". When data is received via the RXD0 pin, the received data is transferred to RD0BUF (receive data buffer). At this time, the transmitted data includes a start bit, stop bit(s) and a parity bit if parity addition is specified. When the stop bit(s) are received, data only is extracted and transferred to RD0BUF (receive data buffer). Then the receive buffer full flag UART0SR<RBFL> is set and an INTRXD0 interrupt request is generated. Set the data transfer baud rate using UART0CR1<BRG>, UART0CR2<RTSEL> and UART0DR.

If an overrun error occurs when data is received, the data is not transferred to RD0BUF (receive data buffer) but discarded; data in the RD0BUF is not affected.

16.12 Status Flag

16.12.1 Parity error

When the parity determined using the receive data bits differs from the received parity bit, the parity error flag UART0SR<PERR> is set to "1". At this time, an INTRXD0 interrupt request is generated.

If UARTOSR<PERR> is "1" when UARTOSR is read, UARTOSR<PERR> will be cleared to "0" when RD0BUF is read subsequently. (The RD0BUF read value becomes undefined.)

If UARTOSR<PERR> is set to "1" after UARTOSR is read, UARTOSR<PERR> will not be cleared to "0" when RD0BUF is read subsequently. In this case, UARTOSR<PERR> will be cleared to "0" when UARTOSR is read again and RD0BUF is read.

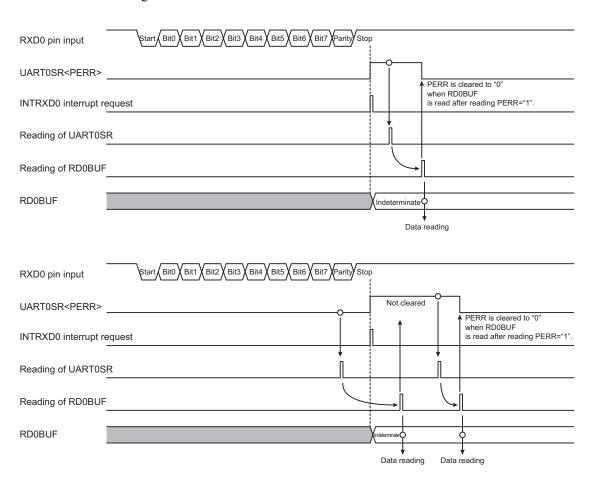



Figure 16-10 Occurrence of Parity Error

16.12.2 Framing Error

If the internal and external baud rates differ or "0" is sampled as the stop bit of received data due to the influence of noise on the RXD0 pin, the framing error flag UART0SR<FERR> is set to "1". At this time, an INTRXD0 interrupt request is generated.

If UART0SR<FERR> is "1" when UART0SR is read, UART0SR<FERR> will be cleared to "0" when RD0BUF is read subsequently.

If UART0SR<FERR> is set to "1" after UART0SR is read, UART0SR<FERR> will not be cleared to "0" when RD0BUF is read subsequently. In this case, UART0SR<FERR> will be cleared to "0" when UART0SR is read again and RD0BUF is read.

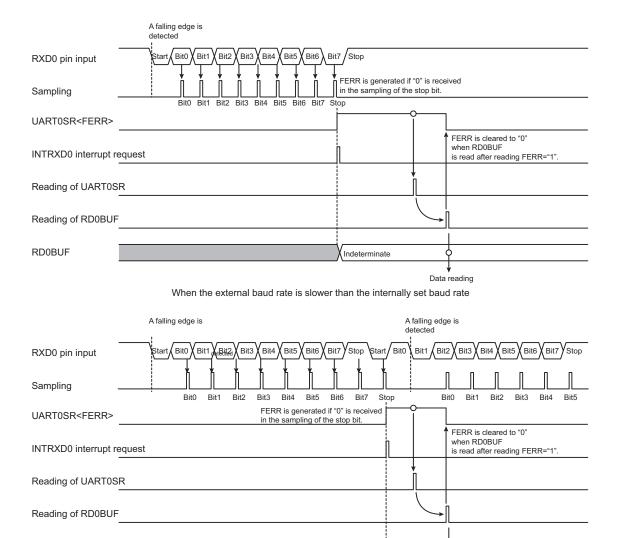

When the external baud rate is faster than the internally set baud rate $% \left(1\right) =\left(1\right) \left(1\right) \left($

Indeterminate

Figure 16-11 Occurrence of Framing Error

2019/08/01 Page 234

RD0BUF

16.12.3 Overrun error

If receiving of all data bits is completed before the previous received data is read from RD0BUF, the overrun error flag UART0SR<OERR> is set to "1" and an INTRXD0 interrupt request is generated. The data received at the occurrence of the overrun error is discarded and the previous received data is maintained. Subsequently, if data is received while UART0SR<OERR> is still "1", no INTRXD0 interrupt request is generated, and the received data is discarded. (Figure 16-12)

Note that parity or framing errors in the discarded received data cannot be detected. (These error flags are not set.) That is to say, if these errors are detected together with an overrun error during the reading of UARTOSR, they have occurred in the previous received data (the data stored in RD0BUF). (Figure 16-13)

If UART0SR<OERR> is "1" when UART0SR is read, UART0SR<OERR> will be cleared to "0" when RD0BUF is read subsequently. (Figure 16-14)

If UARTOSR<OERR> is set to "1" after UARTOSR is read, UARTOSR<OERR> will not be cleared to "0" when RD0BUF is read subsequently. In this case, UARTOSR<OERR> will be cleared to "0" when UARTOSR is read again and RD0BUF is read. (Figure 16-14)



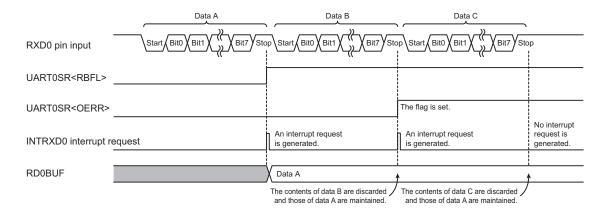


Figure 16-12 Generation of INTRXD0 Interrupt Request

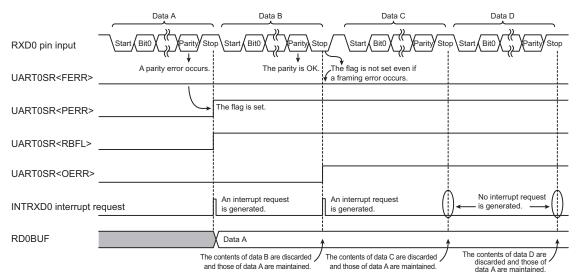

When a parity error occurs in the first received data and a framing error occurs in the second data

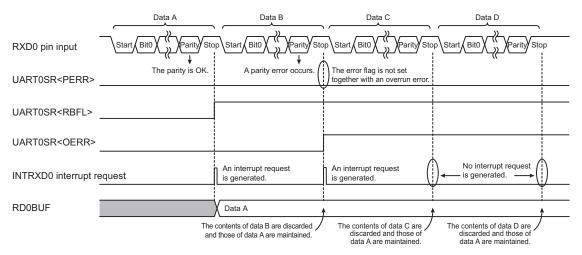

When a parity error occurs in the second received data

Figure 16-13 Framing/Parity Error Flags When an Overrun Error Occurs



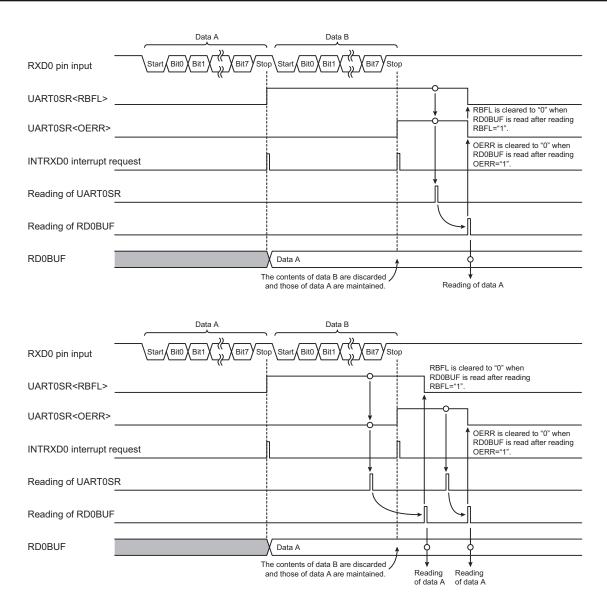


Figure 16-14 Clearance of Overrun Error Flag

Page 237 2019/08/01

TMP89FS62VUG

16.12.4 Receive Data Buffer Full

Loading the received data in RD0BUF sets UART0SR<RBFL> to "1".

If UART0SR<RBFL> is "1" when UART0SR is read, UART0SR<RBFL> will be cleared to "0" when RD0BUF is read subsequently.

If UART0SR<RBFL> is set to "1" after UART0SR is read, UART0SR<RBFL> will not be cleared to "0" when RD0BUF is read subsequently. In this case, UART0SR<RBFL> will be cleared to "0" when UART0SR is read again and RD0BUF is read.

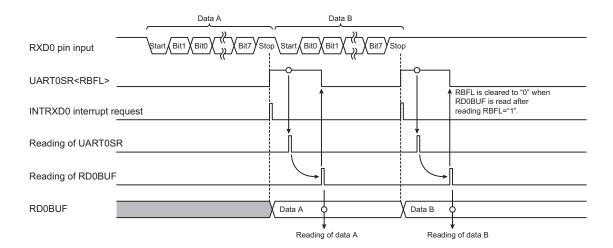


Figure 16-15 Occurrence of Receive Data Buffer Full



16.12.5 Transmit busy flag

If transmission is completed with no waiting data in TD0BUF (when UART0SR<TBFL>="0"), UART0SR<TBSY> is cleared to "0". When transmission is restarted after data is written into TD0BUF, UART0SR<TBSY> is set to "1". At this time, an INTTXD0 interrupt request is generated.

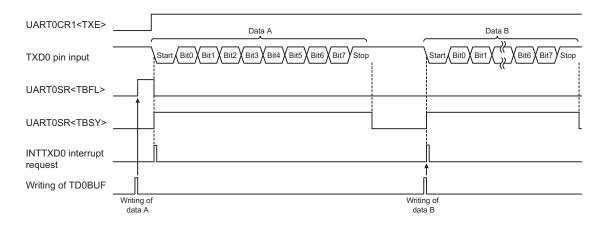


Figure 16-16 Transmit Busy Flag and Occurrence of Transmit Buffer Full

16.12.6 Transmit Buffer Full

When TD0BUF has no data, or when data in TD0BUF is transferred to the transmit shift register and transmission is started, UART0SR<TBFL> is cleared to "0". At this time, an INTTXD0 interrupt request is generated.

Writing data into TD0BUF sets UART0SR<TBFL> to "1".

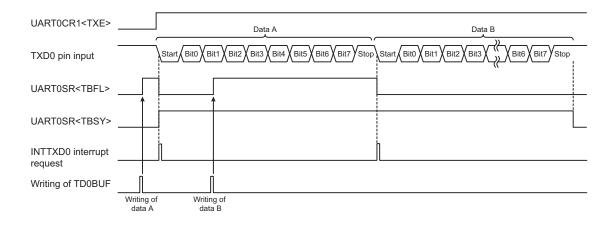


Figure 16-17 Occurrence of Transmit Buffer Full

16.13 Receiving Process

Figure 16-18 shows an example of the receiving process. Details of flag judgments in the processing are shown in Table 16-10 and Table 16-11.

If any framing error or parity error is detected, the received data has erroneous value(s). Execute the error handling, for example, by discarding the received data read from RD0BUF and receiving the data again.

If any overrun error is detected, the receiving of one or more pieces of data is unfinished. It is impossible to determine the number of pieces of data that could not be received. Execute the error handling, for example, by receiving data again from the beginning of the transfer. Basically, an overrun error occurs when the internal software processing cannot follow the data transfer speed. It is recommended to slow the transfer baud rate or modify the software to execute flow control.

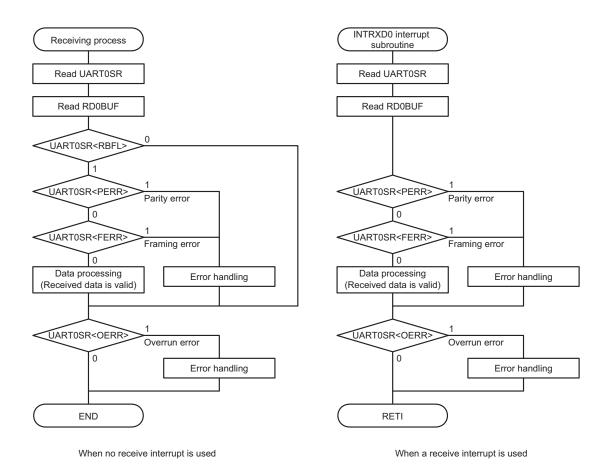


Figure 16-18 Example of Receiving Process

Note 1: If multiple interrupts are used in the INTRXD0 interrupt subroutine, the interrupt should be enabled after reading UART0SR and RD0BUF.



Table 16-10 Flag Judgments When No Receive Interrupt Is Used

RBFL	FERR/PERR	OERR	State			
0	-	0	Data has not been received yet.			
			Some pieces of data could not be received during the previous data receiving process			
0	0 - 1 (Re		(Receiving of next data is completed in the period from when UARTOSR is read to when RD0BUF is read in the pre vious data receiving process.)			
1	0	0	Receiving has been completed properly.			
1	0	1	Receiving has been completed properly, but some pieces of data could not be received.			
1	1	0	Received data has erroneous value(s).			
1	1	1	Received data has erroneous value(s) and some pieces of data could not be received.			

Table 16-11 Flag Judgments When a Receive Interrupt Is Used

FERR/PERR	OERR	State
0	0	Receiving has been completed properly.
0	1	Receiving has been completed properly, but some pieces of data could not be received.
1	0	Received data has erroneous value(s).
1	1	Received data has erroneous value(s) and some pieces of data could not be received.

Page 241 2019/08/01

16.14 AC Properties

16.14.1 IrDA properties

 $(V_{SS} = 0 \text{ V}, \text{Topr} = -40 \text{ to } 85^{\circ}\text{C})$

Item	Condition	Min	Тур.	Max	Unit
	Transfer baud rate = 2400 bps	-	78.13	-	
	Transfer baud rate = 9600 bps	-	19.53	-	
TXD output pulse time	Transfer baud rate = 19200 bps	-	9.77	1	
(RT clock × (3/16))	Transfer baud rate = 38400 bps	-	4.88	1	μs
	Transfer baud rate = 57600 bps	-	3.26	-	
	Transfer baud rate = 115200 bps	-	1.63	-	

17. Synchronous Serial Interface (SIO)

The TMP89FS62V contains 2 channels of high-speed 8-bit serial interfaces of the clock synchronization type.

This chapter describes serial interface 0. For serial interface 1, replace the SFR addresses and pin names as shown in Table 17-1 and Table 17-2.

Table 17-1 SFR Address Assignment

	SIOxCR	SIOxSR	SIOxBUF
	(address)	(address)	(address)
Serial interface 0	SIO0CR	SIO0SR	SIO0BUF
Senai interiace o	(0x001F)	(0x0020)	(0x0021)
Carial interface 1	SIO1CR	SIO1SR	SIO1BUF
Serial interface 1	(0x0F70)	(0x0F71)	(0x0F72)

Table 17-2 Pin Names

	Serial clock input/output pin	Serial data input pin	Serial data output pin
Serial interface 0	SCLK0 pin	SI0 pin	SO0 pin
Serial interface 1	SCLK1 pin	SI1 pin	SO1 pin

Page 243 2019/08/01

17.1 Configuration

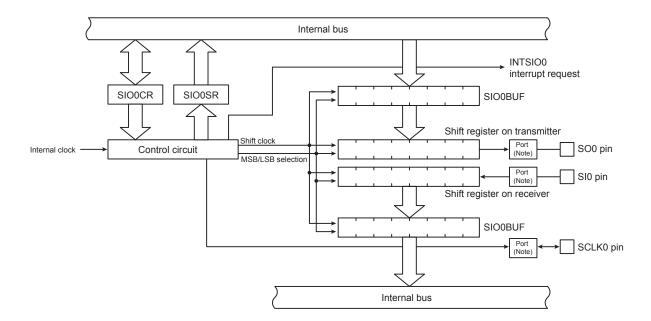


Figure 17-1 Serial Interface

Note: The serial interface input/output pins are also used as the I/O ports. The I/O port register settings are required to use these pins for a serial interface. For details, refer to the chapter of I/O ports.



17.2 Control

The synchronous serial interface SIO0 is controlled by the low power consumption registers (POFFCR2), the serial interface data buffer register (SIO0BUF), the serial interface control register (SIO0CR) and the serial interface status register (SIO0SR).

Low power consumption register 2

POFFCR2		7	6	5	4	3	2	1	0
(0x0F76)	Bit Symbol	-	-	RTCEN	-	-	-	SIO1EN	SIO0EN
	Read/Write	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
	After reset	0	0	0	0	0	0	0	0

RTCEN RT	RTC control	0	Disable
		1	Enable
SIO1EN	SIO1 control	0	Disable
SIOTEN		1	Enable
SIONEN	SIO0 control	0	Disable
SIO0EN		1	Enable

Serial interface buffer register

SIO0BUF		7	6	5	4	3	2	1	0
(0x0021)	Bit Symbol				SIO	BUF			
	Read/Write				ſ	₹			
	After reset	0	0	0	0	0	0	0	0

Serial interface buffer register

SIO0BUF		7	6	5	4	3	2	1	0
(0x0021)	Bit Symbol				SIO	DBUF			
	Read/Write				\	N			
	After reset	1	1	1	1	1	1	1	1

Note 1: SIO0BUF is the data buffer for both transmission and reception. The last received data is read each time SIO0BUF is read. If SIO0BUF has never received data, it is read as "0". When data is written into it, the data is treated as the transmit data.

Page 245 2019/08/01

17.2 Control

TMP89FS62VUG

Serial interface control register

SIO0CR		7	6	5	4	3	2	1	0
(0x001F)	Bit Symbol	SIOEDG		SIOCKS		SIODIR	SIOS	SIG	OM
	Read/Write	R/W		R/W		R/W	R/W	R	/W
	After reset	0	0	0	0	0	0	0	0

SIOEDG	Transfer edge selection	0	0: Receive data at a rising edge ar	nd transmit data at a falling edge				
GIOLDO	Transier edge selection	1	1: Transmit data at a rising edge and receive data at a falling edge					
			NORMAL1/2 or IDLE1/2 mode	SLOW1/2 or SLEEP1 mode				
		000	fcgck/29	-				
		001	fcgck/2 ⁶	-				
		010	fcgck/2 ⁵	-				
SIOCKS	Serial clock selection [Hz]	011	fcgck/2 ⁴	-				
		100	fcgck/2 ³	-				
		101	fcgck/2 ²	-				
		110	fcgck/2	fs/2 ³				
		111	External clock input					
SIODIR	Transfer format (MSB/LSB) selec-	0	LSB first (transfer from bit 0)					
SIUDIR	tion	1	MSB first (transfer from bit 7)					
SIOS	Transfer operation start/stop in-	0	0: Operation stop (reserved stop)					
3103	struction	1	1: Operation start	1: Operation start				
		00	Operation stop (forced stop)					
SIOM	Transfer mode selection and	01	8-bit transmit mode					
SIOW	operation	10	8-bit receive mode					
		11	8-bit transmit and receive mode					

- Note 1: fcgck: Gear clock [Hz], fs: Low-frequency clock [Hz]
- Note 2: After the operation is started by writing "1" to SIOS, writing to SIOEDG, SIOCKS and SIODIR is invalid until SIOOSR<SIOF> becomes "0". (SIOEDG, SIOCKS and SIODIR can be changed at the same time as changing SIOS from "0" to "1".)
- Note 3: After the operation is started by writing "1" to SIOS, no values other than"00" can be written to SIOM until SIOF becomes "0" (if a value from "01" to "11" is written to SIOM, it is ignored). The transfer mode cannot be changed during the operation.
- Note 4: SIOS remains at "0", if "1" is written to SIOS when SIOM is "00" (operation stop).
- Note 5: When SIO is used in SLOW1/2 or SLEEP1 mode, be sure to set SIOCKS to "110". If SIOCKS is set to any other value, SIO will not operate. When SIO is used in SLOW1/2 or SLEEP1 mode, execute communications with SIOCKS="110" in advance or change SIOCKS after SIO is stopped.
- Note 6: When STOP, IDLE0 or SLEEP0 mode is activated, SIOM is automatically cleared to "00" and SIO stops the operation. At the same time, SIOS is cleared to "0". However, the values set for SIOEDG, SIOCKS and SIODIR are maintained.



Serial interface status register

SIO0SR		7	6	5	4	3	2	1	0
(0x0020)	Bit Symbol	SIOF	SEF	OERR	REND	UERR	TBFL	-	-
	Read/Write	R	R	R	R	R	R	R	R
	After reset	0	0	0	0	0	0	0	0

SIOF	Serial transfer operation status monitor	0	Transfer not in progress Transfer in progress
SEF	Shift operation status monitor	0 1	Shift operation not in progress Shift operation in progress
OERR	Receive overrun error flag	0 1	No overrun error has occurred At least one overrun error has occurred
REND	Receive completion flag	0 1	No data has been received since the last receive data was read out At least one data receive operation has been executed
UERR	UERR Transmit underrun error flag		No transmit underrun error has occurred At least one transmit underrun error has occurred
TBFL	Transmit buffer full flag	0 1	The transmit buffer is empty The transmit buffer has the data that has not yet been transmitted

Note 1: The OERR and UERR flags are cleared by reading SIO0SR.

Note 2: The REND flag is cleared by reading SIO0BUF.

Note 3: Writing "00" to SIO0CR<SIOM> clears all the bits of SIO0SR to "0", whether the serial interface is operating or not. When STOP, IDLE0 or SLEEP0 mode is activated, SIOM is automatically cleared to "00" and all the bits of SIO0SR are cleared to "0".

Note 4: Bit 1 to 0 of SIO0SR are read "0".

Page 247 2019/08/01

17.3 Low Power Consumption Function

17.3 Low Power Consumption Function

Serial interface 0 has the low power consumption registers (POFFCR2) that save power when the serial interface is not being used.

Setting POFFCR2<SIO0EN> to "0" disables the basic clock supply to serial interface 0 to save power. Note that this renders the serial interface unusable. Setting POFFCR2<SIO0EN> to "1" enables the basic clock supply to serial interface 0 and allows the serial interface to operate.

After reset, POFFCR2<SIO0EN> are initialized to "0", and this renders the serial interface unusable. When using the serial interface for the first time, be sure to set POFFCR2<SIO0EN> to "1" in the initial setting of the program (before the serial interface control registers are operated).

Do not change POFFCR2<SIO0EN> to "0" during the serial interface operation. Otherwise serial interface 0 may operate unexpectedly.

17.4 Functions

17.4.1 Transfer format

The transfer format can be set to either MSB or LSB first by using SIO0CR<SIODIR>. Setting SIO0CR<SIODIR> to "0" selects LSB first as the transfer format. In this case, the serial data is transferred in sequence from the least significant bit.

Setting SIOOCR<SIODIR> to "1" selects MSB first as the transfer format. In this case, the serial data is transferred in sequence from the most significant bit.

17.4.2 Serial clock

The serial clock can be selected by using SIO0CR<SIOCKS>.

Setting SIOOCR<SIOCKS> to "000" to "110" selects the internal clock as the serial clock. In this case, the serial clock is output from the SCLK0 pin. The serial data is transferred in synchronization with the edge of the SCLK0 pin output.

Setting SIOOCR<SIOCKS> to "111" selects an external clock as the serial clock. In this case, an external serial clock must be input to the SCLK0 pin. The serial data is transferred in synchronization with the edge of the external clock.

The serial data transfer edge can be selected for both the external and internal clocks. For details, refer to "17.4.3 Transfer edge selection".

Table 17-3 Transfer Baud Rate

SIO0CR	Serial clock [Hz]		fcgck=4MHz		fcgck=8MHz		fcgck=10MHz		fs=32.768kHz	
<siocks></siocks>	NORMAL1/2 or IDLE1/2 mode	SLOW1/2 or SLEEP1 mode	1-bit time (µs)	Baud rate (bps)	1-bit time (µs)	Baud rate (bps)	1-bit time (µs)	Baud rate (bps)	1-bit time (µs)	Baud rate (bps)
000	fcgck/29	-	128	7.813k	64	15.625k	51.2	19.531k	-	-
001	fcgck/26	-	16	62.5k	8	125k	6.4	156.25k	-	-
010	fcgck/25	-	8	125k	4	250k	3.2	312.5k	-	-
011	fcgck/24	-	4	250k	2	500k	1.6	625k	-	-
100	fcgck/2 ³	-	2	500k	1	1M	0.8	1.25M	-	-
101	fcgck/2 ²	-	1	1M	0.5	2M	0.4	2.5M	-	-
110	fcgck/2	fs/2 ³	0.5	2M	0.25	4M	0.2	5M	244	4k

17.4.3 Transfer edge selection

The serial data transfer edge can be selected by using SIOCR<SIOEDG>.

Table 17-4 Transfer Edge Selection

SIO0CR <sioedg></sioedg>	Data transmission	Data reception		
0	Falling edge	Rising edge		
1	Rising edge	Falling edge		

When SIOCR<SIOEDG> is "0", the data is transmitted in synchronization with the falling edge of the clock and the data is received in synchronization with the rising edge of the clock.

When SIOCR<SIOEDG> is "1", the data is transmitted in synchronization with the rising edge of the clock and the data is received in synchronization with the falling edge of the clock.

Page 249

17.4 Functions

TMP89FS62VUG

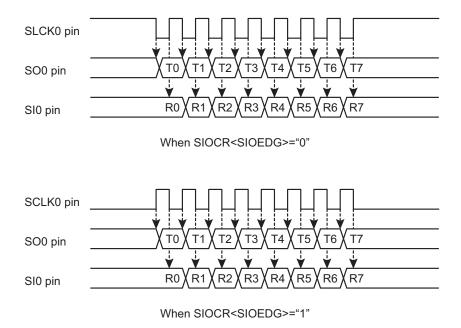


Figure 17-2 Transfer Edge

Note: When an external clock input is used, 4/fcgck or longer is needed between the receive edge at the 8th bit and the transfer edge at the first bit of the next transfer.

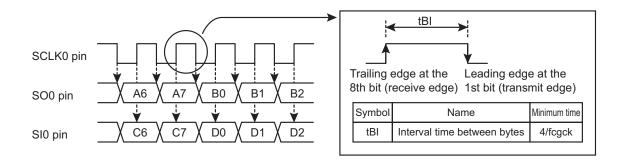


Figure 17-3 Interval time between bytes

17.5 Transfer Modes

17.5.1 8-bit transmit mode

The 8-bit transmit mode is selected by setting SIO0CR<SIOM> to "01".

17.5.1.1 Setting

Before starting the transmit operation, select the transfer edges at SIO0CR<SIOEDG>, a transfer format at SIO0CR<SIODIR> and a serial clock at SIO0CR<SIOCKS>. To use the internal clock as the serial clock, select an appropriate serial clock at SIO0CR<SIOCKS>. To use an external clock as the serial clock, set SIO0CR<SIOCKS> to "111".

The 8-bit transmit mode is selected by setting SIO0CR<SIOM> to "01".

The transmit operation is started by writing the first byte of transmit data to SIO0BUF and then setting SIO0CR<SIOS> to "1".

Writing data to SIOOCR<SIOEDG, SIOCKS and SIODIR> is invalid when the serial communication is in progress, or when SIOOSR<SIOF> is "1". Make these settings while the serial communication is stopped. While the serial communication is in progress (SIOOSR<SIOF>="1"), only writing "00" to SIOOCR<SIOM> or writing "0" to SIOOCR<SIOS> is valid.

17.5.1.2 Starting the transmit operation

The transmit operation is started by writing data to SIO0BUF and then setting SIO0CR<SIOS> to "1". The transmit data is transferred from SIO0BUF to the shift register, and then transmitted as the serial data from the SO0 pin according to the settings of SIO0CR<SIOEDG, SIOCKS and SIODIR>. The serial data becomes undefined if the transmit operation is started without writing any transmit data to SIO0BUF.

In the internal clock operation, the serial clock of the selected baud rate is output from the SCLK0 pin. In the external clock operation, an external clock must be supplied to the SCLK0 pin.

By setting SIO0CR<SIOS> to "1", SIO0SR<SIOF and SEF> are automatically set to "1" and an INTSIO0 interrupt request is generated.

SIO0SR<SEF> is cleared to "0" when the 8th bit of the serial data is output.

17.5.1.3 Transmit buffer and shift operation

If data is written to SIO0BUF when the serial communication is in progress and the shift register is empty, the written data is transferred to the shift register immediately. At this time, SIO0SR<TBFL> remains at "0".

If data is written to SIO0BUF when some data remains in the shift register, SIO0SR<TBFL> is set to "1". If new data is written to SIO0BUF in this state, the contents of SIO0BUF are overwritten by the new value. Make sure that SIO0SR<TBFL> is "0" before writing data to SIO0BUF.

17.5.1.4 Operation on completion of transmission

The operation on completion of the data transmission varies depending on the operating clock and the state of SIO0SR<TBFL>.

TMP89FS62VUG

(1) When the internal clock is used and SIO0SR<TBFL> is "0"

When the data transmission is completed, the SCLK0 pin becomes the initial state and the SO0 pin becomes the "H" level. SIO0SR<SEF> remains at "0". When the internal clock is used, the serial clock and data output is stopped until the next transmit data is written into SIO0BUF (automatic wait).

When the subsequent data is written into SIO0BUF, SIO0SR<SEF> is set to "1", the SCLK0 pin outputs the serial clock, and the transmit operation is restarted. An INTSIO0 interrupt request is generated at the restart of the transmit operation.

(2) When an external clock is used and SIO0SR<TBFL> is "0"

When the data transmission is completed, the SO pin keeps last output value. When an external serial clock is input to the SCLK0 pin after completion of the data transmission, an undefined value is transmitted and the transmit underrun error flag SIOOSR<UERR> is set to "1".

If a transmit underrun error occurs, data must not be written to SIO0BUF during the transmission of an undefined value. (It is recommended to finish the transmit operation by setting SIO0CR<SIOS> to "0" or force the transmit operation to stop by setting SIO0CR<SIOM> to "00".)

The transmit underrun error flag SIO0SR<UERR> is cleared by reading SIO0SR.

(3) When an internal or external clock is used and SIO0SR<TBFL> is "1"

When the data transmission is completed, SIO0SR<TBFL> is cleared to "0". The data in SIO0BUF is transferred to the shift register and the transmission of subsequent data is started. At this time, SIO0SR<SEF> is set to "1" and an INTSIO0 interrupt request is generated.

17.5.1.5 Stopping the transmit operation

Set SIOOCR<SIOS> to "0" to stop the transmit operation. When SIOOSR<SEF> is "0", or when the shift operation is not in progress, the transmit operation is stopped immediately and an INTSIO0 interrupt request is generated. When SIOOSR<SEF> is "1", the transmit operation is stopped after all the data in the shift register is transmitted (reserved stop). At this time, an INTSIO0 interrupt request is generated again.

When the transmit operation is completed, SIOOSR<SIOF, SEF and TBFL> are cleared to "0". Other SIOOSR registers keep their values.

If the internal clock has been used, the SO0 pin automatically returns to the "H" level. If an external clock has been used, the SO0 pin keeps the last output value. To return the SO0 pin to the "H" level, write "00" to SIO0CR<SIOM> when the operation is stopped.

The transmit operation can be forced to stop by setting SIO0CR<SIOM> to "00" during the operation. By setting SIO0CR<SIOM> to "00", SIO0CR<SIOS> and SIO0SR are cleared to "0" and the SIO stops the operation, regardless of the SIO0SR<SEF> value. The SOO pin becomes the "H" level. If the internal clock is selected, the SCLKO pin returns to the initial level.



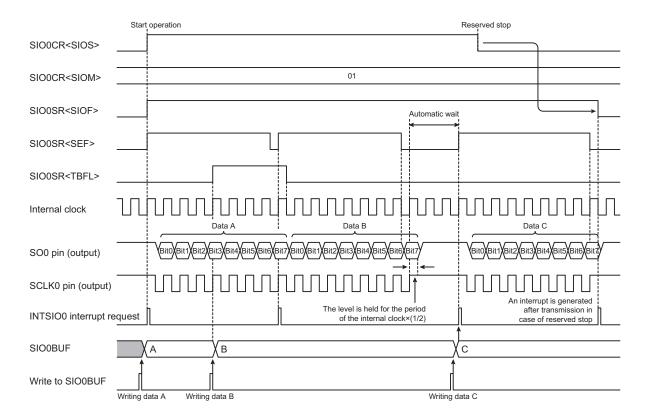


Figure 17-4 8-bit Transmit Mode (Internal Clock and Reserved Stop)

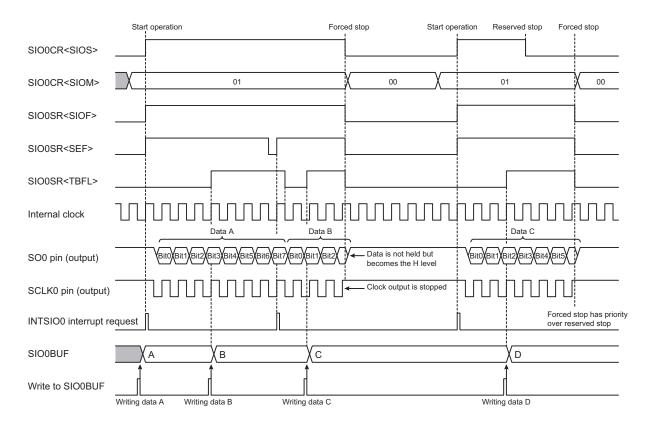


Figure 17-5 8-bit Transmit Mode (Internal Clock and Forced Stop)

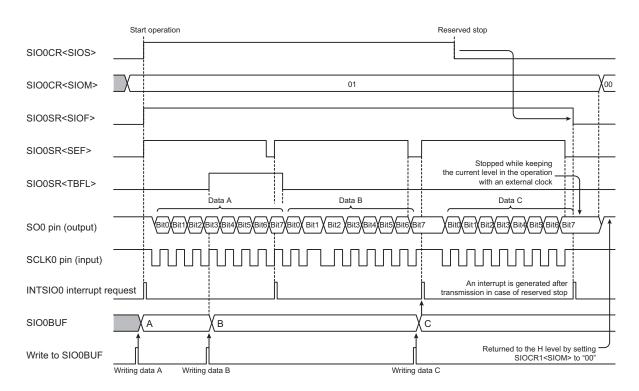


Figure 17-6 8-bit Transmit Mode (External Clock and Reserved Stop)

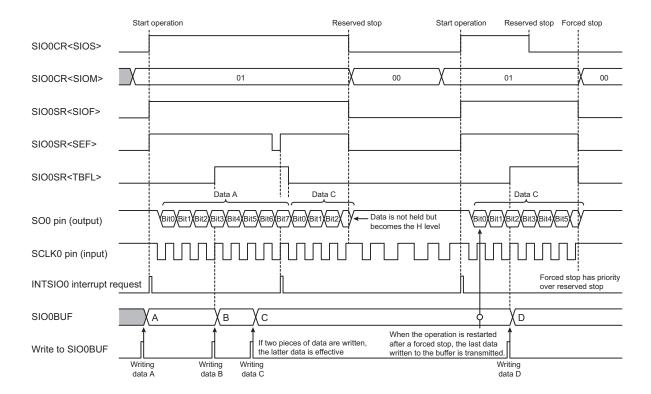


Figure 17-7 8-bit Transmit Mode (External Clock and Forced Stop)

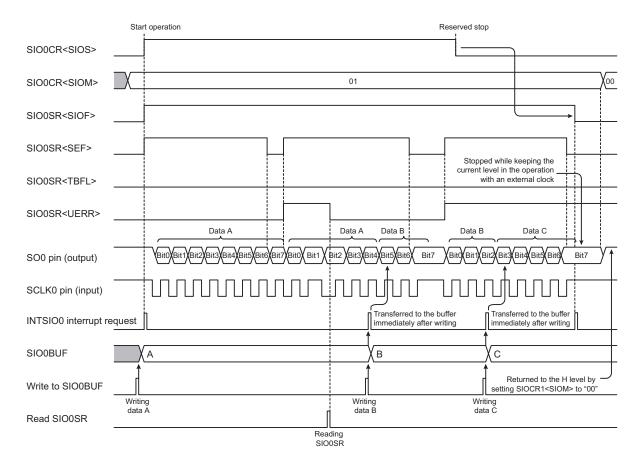


Figure 17-8 8-bit Transmit Mode (External Clock and Occurrence of Transmit Underrun Error)

Page 255 2019/08/01

17.5.2 8-bit Receive Mode

The 8-bit receive mode is selected by setting SIO0CR<SIOM> to "10".

17.5.2.1 Setting

As in the case of the transmit mode, before starting the receive operation, select the transfer edges at SIO0CR<SIOEDG>, a transfer format at SIO0CR<SIODIR> and a serial clock at SIO0CR<SIOCKS>. To use the internal clock as the serial clock, select an appropriate serial clock at SIO0CR<SIOCKS>. To use an external clock as the serial clock, set SIO0CR<SIOCKS> to "111".

The 8-bit receive mode is selected by setting SIO0CR<SIOM> to "10".

Reception is started by setting SIO0CR<SIOS> to "1".

Writing data to SIOOCR<SIOEDG, SIOCKS and SIODIR> is invalid when the serial communication is in progress, or when SIOOSR<SIOF> is "1". Make these settings while the serial communication is stopped. While the serial communication is in progress (SIOOSR<SIOF>="1"), only writing "00" to SIOOCR<SIOM> or writing "0" to SIOOCR<SIOS> is valid.

17.5.2.2 Starting the receive operation

Reception is started by setting SIOOCR<SIOS> to "1". External serial data is taken into the shift register from the SIO pin according to the settings of SIOOCR<SIOEDG, SIOCKS and SIODIR>.

In the internal clock operation, the serial clock of the selected baud rate is output from the SCLK0 pin. In the external clock operation, an external clock must be supplied to the SCLK0 pin.

By setting SIO0CR<SIOS> to "1", SIO0SR<SIOF and SEF> are automatically set to "1".

17.5.2.3 Operation on completion of reception

When the data reception is completed, the data is transferred from the shift register to SIO0BUF and an INTSIO0 interrupt request is generated. The receive completion flag SIO0SR<REND> is set to "1".

In the operation with the internal clock, the serial clock output is stopped until the receive data is read from SIO0BUF (automatic wait). At this time, SIO0SR<SEF> is set to "0". By reading the receive data from SIO0BUF, SIO0SR<SEF> is set to "1", the serial clock output is restarted and the receive operation continues.

In the operation with an external clock, data can be continuously received without reading the received data from SIO0BUF. In this case, data must be read from SIO0BUF before the subsequent data has been fully received. If the subsequent data is received completely before reading data from SIO0BUF, the overrun error flag SIO0SR<OERR> is set to "1". When an overrun error has occurred, set SIO0CR<SIOM> to "00" to abort the receive operation. The data received at the occurrence of an overrun error is discarded, and SIO0BUF holds the data value received before the occurrence of the overrun error.

SIO0SR<REND> is cleared to "0" by reading data from SIO0BUF. SIO0SR<OERR> is cleared by reading SIO0SR.

17.5.2.4 Stopping the receive operation

Set SIO0CR<SIOS> to "0" to stop the receive operation. When SIO0SR<SEF> is "0", or when the shift operation is not in progress, the operation is stopped immediately. Unlike the transmit mode, no INTSIO0 interrupt request is generated in this state.



When SIOOSR<SEF> is "1", the operation is stopped after the 8-bit data has been completely received (reserved stop). At this time, an INTSIOO interrupt request is generated.

After the operation has stopped completely, SIO0SR<SIOF and SEF> are cleared to "0". Other SIO0SR registers keep their values.

The receive operation can be forced to stop by setting SIO0CR<SIOM> to "00" during the operation. By setting SIO0CR<SIOM> to "00", SIO0CR<SIOS> and SIO0SR are cleared to "0" and the SIO stops the operation, regardless of the SIO0SR<SEF> value. If the internal clock is selected, the SCLK0 pin returns to the initial level.

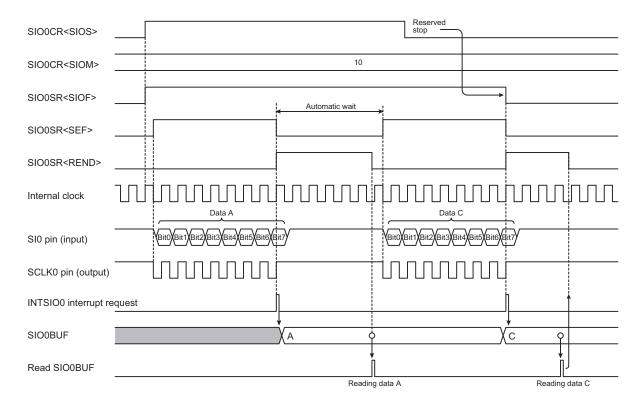


Figure 17-9 8-bit Receive Mode (Internal Clock and Reserved Stop)

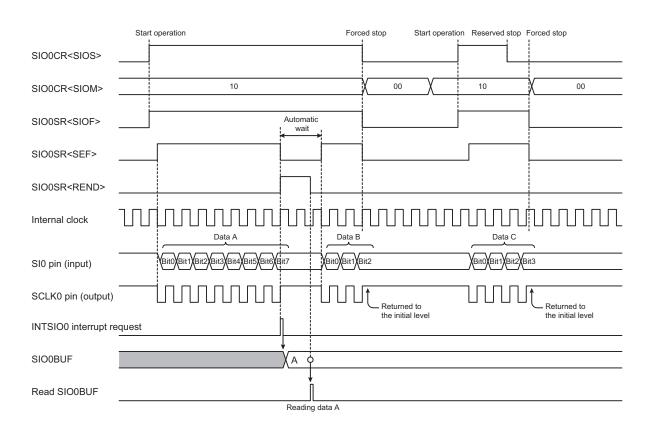


Figure 17-10 8-bit Receive Mode (Internal Clock and Forced Stop)

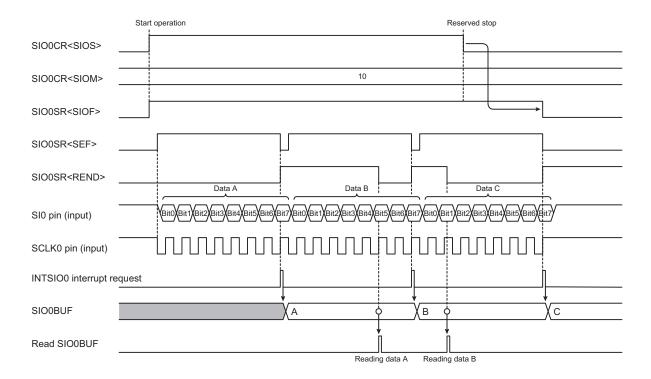


Figure 17-11 8-bit Receive Mode (External Clock and Reserved Stop)



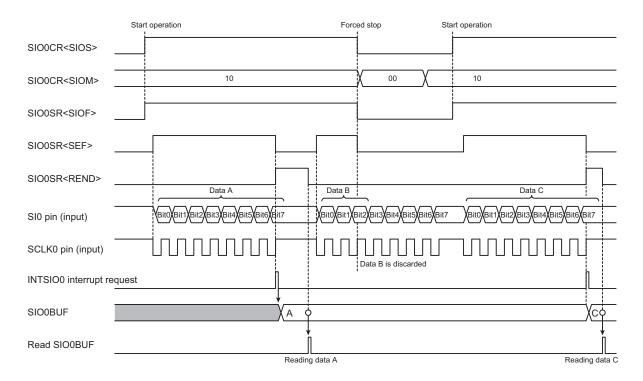


Figure 17-12 8-bit Receive Mode (External Clock and Forced Stop)

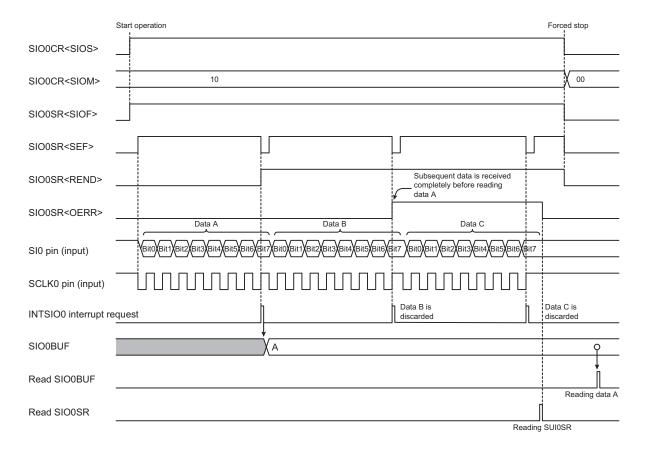


Figure 17-13 8-bit Receive Mode (External Clock and Occurrence of Overrun Error)

17.5.3 8-bit transmit/receive mode

The 8-bit transmit/receive mode is selected by setting SIO0CR<SIOM> to "11".

17.5.3.1 Setting

Before starting the transmit/receive operation, select the transfer edges at SIO0CR<SIOEDG>, a transfer format at SIO0CR<SIODIR> and a serial clock at SIO0CR<SIOCKS>. To use the internal clock as the serial clock, select an appropriate serial clock at SIO0CR<SIOCKS>. To use an external clock as the serial clock, set SIO0CR<SIOCKS> to "111".

The 8-bit transmit/receive mode is selected by setting SIO0CR<SIOM> to "11".

The transmit/receive operation is started by writing the first byte of transmit data to SIO0BUF and then setting SIO0CR<SIOS> to "1".

Writing data to SIOOCR<SIOEDG, SIOCKS and SIODIR> is invalid when the serial communication is in progress, or when SIOOSR<SIOF> is "1". Make these settings while the serial communication is stopped. While the serial communication is in progress (SIOOSR<SIOF>="1"), only writing "00" to SIOOCR<SIOM> or writing "0" to SIOCR<SIOS> is valid.

17.5.3.2 Starting the transmit/receive operation

The transmit/receive operation is started by writing data to SIO0BUF and then setting SIO0CR<SIOS> to "1". The transmit data is transferred from SIO0BUF to the shift register, and the serial data is transmitted from the SO0 pin according to the settings of SIO0CR<SIOEDG, SIOCKS and SIODIR>. At the same time, the serial data is received from the SI0 pin according to the settings of SIO0CR<SIOEDG, SIOCKS and SIODIR>.

In the internal clock operation, the serial clock of the selected baud rate is output from the SCLK0 pin. In the external clock operation, an external clock must be supplied to the SCLK0 pin.

The transmit data becomes undefined if the transmit/receive operation is started without writing any transmit data to SIO0BUF.

By setting SIO0CR<SIOS> to "1", SIO0SR<SIOF and SEF> are automatically set to "1" and an INTSIO0 interrupt request is generated.

SIO0SR<SEF> is cleared to "0" when the 8th bit of data is received.

17.5.3.3 Transmit buffer and shift operation

If any data is written to SIO0BUF when the serial communication is in progress and the shift register is empty, the written data is transferred to the shift register immediately. At this time, SIO0SR<TBFL> remains at "0".

If any data is written to SIO0BUF when some data remains in the shift register, SIO0SR<TBFL> is set to "1". If new data is written to SIO0BUF in this state, the contents of SIO0BUF are overwritten by the new value. Make sure that SIO0SR<TBFL> is "0" before writing data to SIO0BUF.

17.5.3.4 Operation on completion of transmission/reception

When the data transmission/reception is completed, SIOOSR<REND> is set to "1" and an INTSIOO interrupt request is generated. The operation varies depending on the operating clock.

(1) When the internal clock is used

If SIOOSR<TBFL> is "1", it is cleared to "0" and the transmit/receive operation continues. If SIOOSR<REND> is already "1", SIOOSR<OERR> is set to "1".

If SIO0SR<TBFL> is "0", the transmit/receive operation is aborted. The SCLK0 pin becomes the initial state and the SO0 pin becomes the "H" level. SIO0SR<SEF> remains at "0". When the subsequent data is written to SIO0BUF, SIO0SR<SEF> is set to "1", the SCLK0 pin outputs the clock and the transmit/receive operation is restarted. To confirm the receive data, read it from SIO0BUF before writing data to SIO0BUF.

(2) When an external clock is used

The transmit/receive operation continues. If the external serial clock is input without writing any data to SIO0BUF, the last data value set to SIO0BUF is re-transmitted. At this time, the transmit underrun error flag SIO0SR<UERR> is set to "1".

When the next 8-bit data is received completely before SIO0BUF is read, or in the state of SIO0SR<REND>="1", SIO0SR<OERR> is set to "1".

17.5.3.5 Stopping the transmit/receive operation

Set SIOOCR<SIOS> to "0" to stop the transmit/receive operation. When SIOOSR<SEF> is "0", or when the shift operation is not in progress, the operation is stopped immediately. Unlike the transmit mode, no INTSIOO interrupt request is generated in this state.

When SIOOSR<SEF> is "1", the operation is stopped after the 8-bit data is received completely. At this time, an INTSIOO interrupt request is generated.

After the operation has stopped completely, SIO0SR<SIOF, SEF and TBFL> are cleared to "0". Other SIO0SR registers keep their values.

If the internal clock has been used, the SO0 pin automatically returns to the "H" level. If an external clock has been used, the SO0 pin keeps the last output value. To return the SO0 pin to the "H" level, write "00" to SIO0CR<SIOM> when the operation is stopped.

The transmit/receive operation can be forced to stop by setting SIO0CR<SIOM> to "00" during the operation. By setting SIO0CR<SIOM> to "00", SIO0CR<SIOS> and SIO0SR are cleared to "0" and the SIO stops the operation, regardless of the SIO0SR<SEF> value. The SOO pin becomes the "H" level. If the internal clock is selected, the SCLKO pin returns to the initial level.

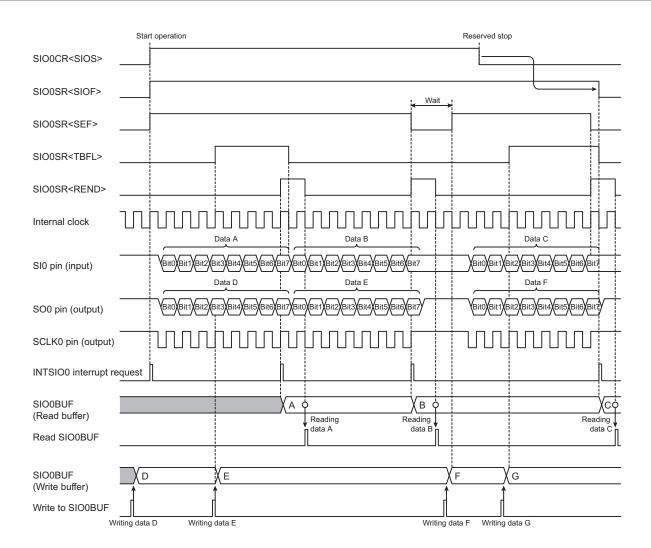


Figure 17-14 8-bit Transmit/Receive Mode (Internal Clock and Reserved Stop)



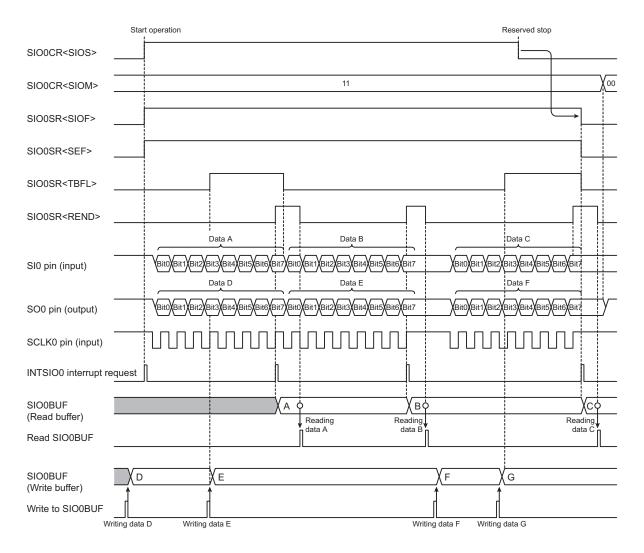


Figure 17-15 8-bit Transmit/Receive Mode (External Clock and Reserved Stop)

Page 263 2019/08/01

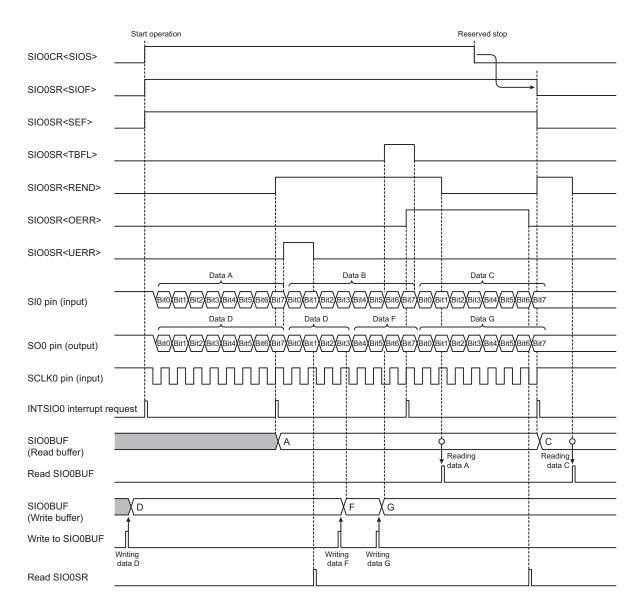


Figure 17-16 8-bit Transmit/Receive Mode (External Clock, Occurrence of Transmit Underrun Error and Occurrence of Overrun Error)



17.6 AC Characteristics

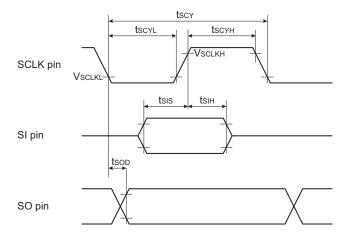


Figure 17-17 AC Characteristics

 $(V_{SS} = 0 \text{ V}, V_{DD} = 4.5 \text{ V} - 5.5 \text{ V}, \text{Topr} = -40 \text{ to } 85^{\circ}\text{C})$

Parameter	Symbol	Condition	Min	Тур.	Max	Unit
SCLK cycle time	t _{SCY}		2 / fcgck	-	-	
SCLK "L" pulse width	tscyl		1 / fcgck - 25	-	-	
SCLK "H" pulse width	tsсүн	Internal clock operation SO pin and SCLK pin load capacity=100 pF	1 / fcgck - 15	-	-	
SI input setup time	t _{SIS}		60	-	-	
SI input hold time	t _{SIH}	1 [35	-	-	
SO output delay time	t _{SOD}		-50	-	50	ns
SCLK cycle time	t _{SCY}		2 / fcgck	-	-	
SCLK "L" pulse width	t _{SCYL}		1 / fcgck	-	-	
SCLK "H" pulse width	t _{SCYH}	External clock operation	1 / fcgck	-	-	
SI input setup time	t _{SIS}	SO pin and SCLK pin load capacity=100 pF	50	-	-	
SI input hold time	t _{SIH}		50	-	-	
SO output delay time	t _{SOD}		0	-	60	
SCLK low-level input voltage	tsclkl		0	-	V _{DD} × 0.30	.,
SCLK high-level input voltage	tsclkh		V _{DD} × 0.70	-	V_{DD}	V

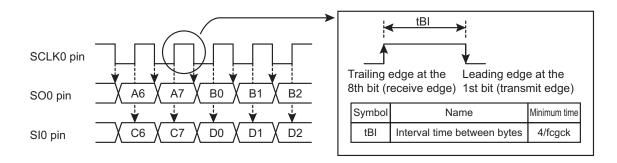


Figure 17-18 Interval time between bytes

Page 265 2019/08/01

17. Synchronous Serial Interface (SIO)

17.6 AC Characteristics

TMP89FS62VUG

18. Key-on Wakeup (KWU)

The key-on wakeup is a function for releasing the STOP mode at the $\overline{\text{STOP}}$ pin or at pins KWI7 through KWI0.

18.1 Configuration

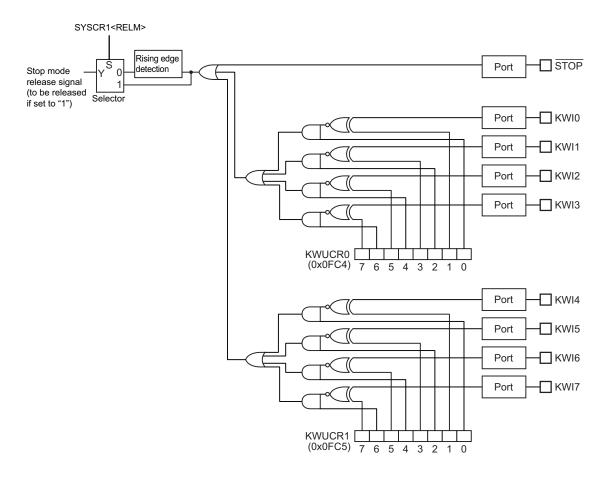


Figure 18-1 Key-on Wakeup Circuit

Note: The key-on wakeup pins KWI0 to KWI7 are also used as input/output ports P40 to P47. To operate them as key-on wakeup, set the registers of input/output ports. Refer to the chapter of I/O Ports.

Page 267 2019/08/01

18.2 Control TMP89FS62VUG

18.2 Control

Key-on wakeup control registers (KWUCR0 and KWUCR1) can be configured to designate the key-on wakeup pins (KWI7 through KWI0) as STOP mode release pins and to specify the STOP mode release levels of each of these designated pins.

Key-on wakeup control register 0

KWUCR0		7	6	5	4	3	2	1	0
(0x0FC4)	Bit Symbol	KW3LE	KW3EN	KW2LE	KW2EN	KW1LE	KW1EN	KW0LE	KW0EN
	Read/Write	R/W							
	After reset	0	0	0	0	0	0	0	0

KW3LE	STOP mode release level of KWI3 pin	0: 1:	Low level High level
KW3EN	Input enable/disable control of KWI3 pin	0: 1:	Disable Enable
KW2LE	STOP mode release level of KWI2 pin	0: 1:	Low level High level
KW2EN	Input enable/disable control of KWI2 pin	0: 1:	Disable Enable
KW1LE	STOP mode release level of KWI1	0: 1:	Low level High level
KW1EN	Input enable/disable control of KWI1 pin	0: 1:	Disable Enable
KW0LE	STOP mode release level of KWI0 pin	0: 1:	Low level High level
KW0EN	Input enable/disable control of KWI0 pin	0: 1:	Disable Enable

Key-on wakeup control register 1

KWUCR1 5 7 6 3 2 1 0 4 (0x0FC5) KW4LE Bit Symbol KW7LE KW7EN KW6LE KW6EN KW5LE KW5EN KW4EN Read/Write R/W R/W R/W R/W R/W R/W R/W R/W After reset 0 0 0 0 0 0

KW7LE	STOP mode release level of KWI7 pin	0: 1:	Low level High level
KW7EN	Input enable/disable control of KWI7 pin	0: 1:	Disable Enable
KW6LE	STOP mode release level of KWI6 pin	0: 1:	Low level High level
KW6EN	Input enable/disable control of KWI6 pin	0: 1:	Disable Enable
KW5LE	STOP mode release level of KWI5 pin	0: 1:	Low level High level
KW5EN	Input enable/disable control of KWI5 pin	0: 1:	Disable Enable
KW4LE	STOP mode release level of KWI4 pin	0: 1:	Low level High level
KW4EN	Input enable/disable control of KWI4 pin	0: 1:	Disable Enable

18.3 Functions

By using the key-on wakeup <u>function</u>, the STOP mode can be released at a <u>STOP</u> pin or at KWIm pin (m: 0 through 7). After resetting, the <u>STOP</u> pin is the only STOP mode release pin. To designate the KWIm pin as a STOP mode release <u>pin</u>, therefore, it is necessary to configure the key-on wakeup control register (KWUCRn) (n: 0 or 1). Because the <u>STOP</u> pin lacks a function for disabling inputs, it can be designated as a pin for receiving a STOP mode release signal, irrespective of whether the key-on wakeup function is used or not.

· Setting KWUCRn and P4PU registers

To designate a key-on wakeup pin (KWIm) as a STOP mode release pin, set KWUCRn<KWmEN> to "1". After KWIm pin is set to "1" at KWUCRn<KWmEN>, a specific STOP mode release level can be specified for this pin at KWUCRn<KWmLE>. If KWUCRn<KWmLE> is set to "0", STOP mode is released when an input is at a low level. If it is set to "1", STOP mode is released when an input is at a high level. For example, if you want to release STOP mode by inputting a high-level signal into a KWI0 pin, set KWUCR0<KW0EN> to "1", " and KWUCR0<KW0LE> to "1".

Each KWIm pin can be connected to internal pull-up resistors. Before connecting to internal pull-up resistors, the corresponding bits in the pull-up control register (P4PU) at port P4 must be set to "1".

· Starting STOP mode

To start the STOP mode, set SYSCR1<RELM> to "1" (level release mode), and SYSCR1<STOP> to "1"

To use the key-on wakeup function, do not set SYSCR1<RELM> to "0" (edge release mode). If the key-on wakeup function is used in edge release mode, STOP mode cannot be released, although a rising edge is input into the $\overline{\text{STOP}}$ pin. This is because the KWIm pin enabling inputs to be received is at a release level after the STOP mode starts.

Releasing STOP mode

To release STOP mode, input a high-level signal into the \overline{STOP} pin or input a specific release level into the KWIm pin for which receipt of inputs is enabled. If you want to release STOP mode at the KWIm pin, rather than the \overline{STOP} pin, continue inputting a low-level signal into the \overline{STOP} pin throughout the period from when the STOP mode is started to when it is released.

If the STOP pin or KWIm pin is already at a release level when the STOP mode starts, the following instruction will be executed without starting the STOP mode (with no warm-up performed).

Note 1: If an analog voltage is applied to KWIm pin for which receipt of inputs is enabled by the key-on wakeup control register (KWUCRn) setting, a penetration current will flow. Therefore, in this case, the analog voltage should be not applied to this pin.

Table 18-1 STOP Mode Release Level (edge)

	Release level (edge)						
Pin name	SYSCR1 <f (level relea</f 	SYSCR1 <relm>="0"</relm>					
	KWUCRn <kwmle>="0"</kwmle>	(edge release mode)					
STOP	"H"	level	Rising edge				
KWIm	"L" level	Don't use					

18.3 Functions

Example :A case in which STOP mode is started with the release level of the STOP pin set to a high level and the release level of KWI0 pin set to a low level (connected to an internal pull-up resistor of the KWI0 pin)

DI ; IMF←0

SET (P4PU).0 ; KWI0 (P40) connected to a pull-up resistor

LD (KWUCR0), 0y00000001 ; the KWI0 pin is set to enable inputs, and its release level is set

TMP89FS62VUG

; to a low level.

LD (SYSCR1), 0y10100000 ; Starting in level release mode

19. 10-bit AD Converter (ADC)

The TMP89FS62V has a 10-bit successive approximation type AD converter.

19.1 Configuration

The circuit configuration of the 10-bit AD converter is shown in Figure 19-1.

It consists of control registers ADCCR1 and ADCCR2, converted value registers ADCDRL and ADCDRH, a DA converter, a sample-hold circuit, a comparator, a successive comparison circuit, etc.

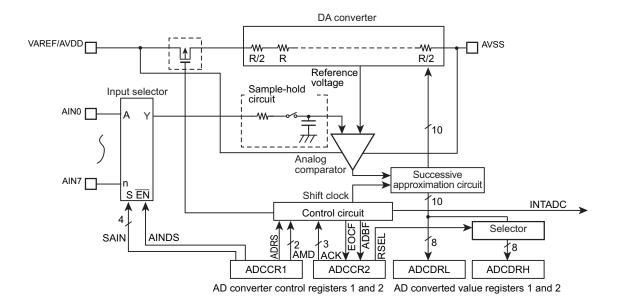


Figure 19-1 10-bit AD Converter

Note 1: Before using the AD converter, set an appropriate value to the I/O port register which is also used as an analog input port. For details, see the section on "I/O ports".

Note 2: The DA converter current (IREF) is automatically cut off at times other than during AD conversion.

Page 271 2019/08/01

19.2 Control

TMP89FS62VUG

19.2 Control

The AD converter consists of the following four registers:

1. AD converter control register 1 (ADCCR1)

This register selects an analog channel in which to perform AD conversion, selects an AD conversion operation mode, and controls the start of the AD converter.

2. AD converter control register 2 (ADCCR2)

This register selects the AD conversion time, and monitors the operating status of the AD converter.

3. AD converted value registers (ADCDRH and ADCDRL)

These registers store the digital values generated by the AD converter.



AD converter control register 1

ADCCR1 (0x0034)

	/	6	5	4	3	2	1	0			
Bit Symbol	ADRS	Αl	МD	AINEN		SAIN					
Read/Write	R/W	R	R/W		R/W						
After reset	0	0	0	0	0	0	0	0			

ADRS	AD conversion start	0: 1:	- AD conversion start
AMD	AD operating mode	00: 01: 10: 11:	AD operation disable, forcibly stop AD operation Single mode Reserved Repeat mode
AINEN	Analog input control	0: 1:	Analog input disable Analog input enable
SAIN	Analog input channel select	0000: 0001: 0010: 0011: 0100: 0111: 1000: 1001: 1010: 1011: 1100: 1111:	AIN4 AIN5 AIN6 AIN7 Reserved

Note 1: Do not perform the following operations on the ADCCR1 register while AD conversion is being executed (ADCCR2<ADBF>="1").

- Changing SAIN
- Setting AINEN to "0"
- Changing AMD (except a forced stop by setting AMD to "00")
- Setting ADRS to "1"
- Note 2: If you want to disable all analog input channels, set AINEN to "0".
- Note 3: Although analog input pins are also used as input/output ports, it is recommended for the purpose of maintaining the accuracy of AD conversion that you do not execute input/output instructions during AD conversion. Additionally, do not input widely varying signals into the ports adjacent to analog input pins.
- Note 4: When STOP, IDLE0 or SLOW mode is started, ADRS, AMD and AINEN are initialized to "0". If you use the AD converter after returning to NORMAL mode, you must reconfigure ADRS, AMD and AINEN.
- Note 5: After the start of AD conversion, ADRS is automatically cleared to "0" ("0" is read).

Page 273 2019/08/01

19.2 Control TMP89FS62VUG

AD converter control register 2

ADCCR2 6 5 4 3 2 0 (0x0035) Bit Symbol EOCF ADBF "0" ACK R/W Read/Write R R W R R 0 0 0 0 0 0 After reset 0 0

EOCF	AD conversion end flag	0: 1:	Before conversion or during conversion Conversion end
ADBF	AD conversion BUSY flag	0: 1:	AD conversion being halted AD conversion being executed
		000:	39/fcgck
		001:	78/fcgck
		010:	156/fcgck
ACK	AD conversion time select (examples of AD conversion time are	011:	312/fcgck
ACK	shown in the table below)	100:	Reserved
	chewn in the table below,	101:	Reserved
			Reserved
		111:	Reserved

Note 1: Make sure that you make the ACK setting when AD conversion is in a halt condition (ADCCR2<ADBF>="0").

Note 2: Make sure that you write "0" to bit 3 of ADCCR2.

Note 3: If STOP, IDLE0 or SLOW mode is started, EOCF and ADBF are initialized to "0".

Note 4: If the AD converted value register (ADCDRH) is read, EOCF is cleared to "0". It is also cleared to "0" if AD conversion is started (ADCCR1<ADRS>="1") without reading ADCDRH after completing AD conversion in single mode.

Note 5: If an instruction to read ADCCR2 is executed, 0 is read from bits 3 through 5.

Table 19-1 ACK Settings and Conversion Times Relative to Frequencies

					Fre	quency (fcg	ck)						
ACK setting	Conversion time	10MHz	8MHz	5MHz	4MHz	2.5MHz	2MHz	1MHz	0.5MHz	0.25 MHz			
000	39/fcgck	-	-	-	-	15.6 µs	19.5 µs	39.0 µs	-	-			
001	78/fcgck	-	-	15.6 µs	19.5 µs	31.2 µs	39.0 µs	-	-	-			
010	156/fcgck	15.6 µs	19.5 µs	31.2 µs	39.0 µs	-	-	-	-	-			
011	312/fcgck	31.2 µs	39.0 µs	-	-	-	-	-	-	-			
100													
101		Reserved											
11*													

Note 1: Spaces indicated by "-" in the above table mean that it is prohibited to establish conversion times in these spaces. fcgck: High Frequency oscillation clock [Hz]

Note 2: Above conversion times do not include the time shown below.

- Time from when ADCCR1<ADRS> is set to 1 to when AD conversion is started
- Time from when AD conversion is finished to when a converted value is stored in ADCDRL and ADCDRH. If ACK = 00*, the longest time shown above is 10/fcgck (s). If ACK = 01*, it is 32/fcgck (s).

Note 3: The conversion time must be within the following time.

- VAREF = 4.5 to 5.5 V 15.6 μs or longer, and 39.0 μs or shorter



AD converted value register (lower side)

ADCDRL		7	6	5	4	3	2	1	0
(0x0036)	Bit Symbol	AD07	AD06	AD05	AD04	AD03	AD02	AD01	AD00
	Read/Write	R	R	R	R	R	R	R	R
	After reset	0	0	0	0	0	0	0	0

AD converted value register (upper side)

ADCDRH		7	6	5	4	3	2	1	0
(0x0037)	Bit Symbol	-	-	-	-	-	-	AD09	AD08
	Read/Write	R	R	R	R	R	R	R	R
	After reset	0	0	0	0	0	0	0	0

Note 1: A read of ADCDRL or ADCDRH must be read after the INTADC interrupt is generated or after ADCCR2<EOCF> becomes "1".

Note 2: In single mode, do not read ADCDRL or ADCDRH during AD conversion (ADCCR2<ADBF>="1"). (If AD conversion is finished in the interim between a read of ADCDRL and a read of ADCDRH, the INTADC interrupt request is canceled, and the conversion result is lost.)

Note 3: If STOP, IDLE0 or SLOW mode is started, ADCDRL and ADCDRH are initialized to "0".

Note 4: If ADCCR1<AMD> is set to "00", ADCDRL and ADCDRH are initialized to "0".

Note 5: If an instruction to read ADCDRH is executed, "0" is read from bits 7 through 2.

Note 6: If AD conversion is finished in repeat mode in the interim between a read of ADCDRL and a read of ADCDRH, the previous converted value is retained without overwriting the AD converted value register. In this case, the INTADC interrupt request is canceled, and the conversion result is lost.

19.3 Functions
TMP89FS62VUG

19.3 Functions

The 10-bit AD converter operates in either single mode in which AD conversion is performed only once or repeat mode in which AD conversion is performed repeatedly.

19.3.1 Single mode

In single mode, the voltage at a designated analog input pin is AD converted only once.

Setting ADCCR1<ADRS> to "1" after setting ADCCR1<AMD> to "01" allows AD conversion to start. ADCCR1<ADRS> is automatically cleared after the start of AD conversion. As AD conversion starts, ADCCR2<ADBF> is set to "1". It is cleared to "0" if AD conversion is finished or if AD conversion is forced to stop.

After AD conversion is finished, the conversion result is stored in the AD converted value registers (ADCDRL and ADCDRH), ADCCR2<EOCF> is set to "1", and the AD conversion finished interrupt (INTADC) is generated. The AD converted value registers (ADCDRL and ADCDRH) should be usually read according to the INTADC interrupt processing routine. If the upper side (ADCDRH) of the AD converted value register is read, ADCCR2<EOCF> is cleared to "0".

Note: Do not perform the following operations on the ADCCR1 register when AD conversion is being executed (ADCCR2<ADBF>="1"). If the following operations are performed, there is the possibility that AD conversion may not be executed properly.

- · Changing the ADCCR1<SAIN> setting
- · Setting ADCCR1<AINEN> to "0"
- Changing the ADCCR1<AMD> setting (except a forced stop by setting AMD to "00")
- · Setting ADCCR1<ADRS> to "1"

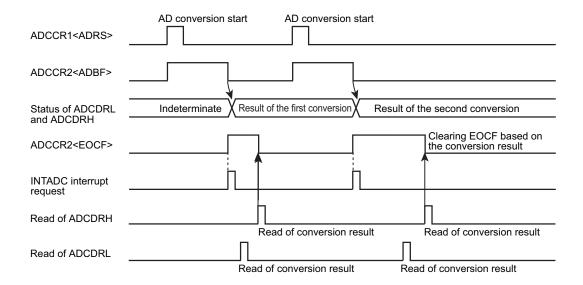


Figure 19-2 Single Mode

19.3.2 Repeat mode

In repeat mode, the voltage at an analog input pin designated at ADCCR1<SAIN> is AD converted repeatedly.

Setting ADCCR1<ADRS> to "1" after setting ADCCR1<AMD> to "11" allows AD conversion to start. After the start of AD conversion, ADCCR1<ADRS> is automatically cleared. After the first AD conversion is finished, the conversion result is stored in the AD converted value registers (ADCDRL and ADCDRH), ADCCR2<EOCF> is set to "1", and the AD conversion finished interrupt (INTADC) is generated. After this interrupt is generated, the second (next) AD conversion starts immediately.

The AD converted value registers (ADCDRL and ADDRH) should be read before the next AD conversion is finished. If the next AD conversion is finished in the interim between a read of ADCDRL and a read of ADCDRH, the previous converted value is retained without overwriting the AD converted value registers (ADCDRL and ADCDRH). In this case, the INTADC interrupt request is not generated, and the conversion result is lost. (See Figure 19-3.)

To stop AD conversion, write "00" (AD operation disable) to ADCCR1<AMD>. As "00" is written to ADCCR1<AMD>, AD conversion stops immediately. In this case, the converted value is not stored in the AD converted value register. As AD conversion starts, ADCCR2<ADBF> is set to "1". It is cleared to "0" if "00" is written to AMD.

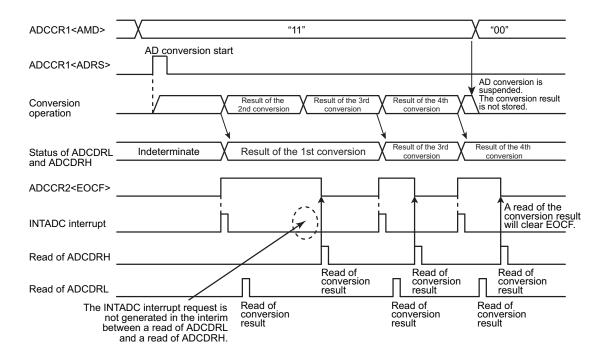


Figure 19-3 Repeat Mode

19.3.3 AD operation disable and forced stop of AD operation

If you want to force the AD converter to stop when AD conversion is ongoing in single mode or if you want to stop the AD converter when AD conversion is ongoing in repeat mode, set ADCCR1<AMD> to "00".

If ADCCR1<AMD> is set to "00", registers ADCCR2<EOCF>, ADCCR2<ADBF>, ADCDRL, and ADCDRH are initialized to "0".

Page 277 2019/08/01

19.4 Register Setting

19.4 Register Setting

- 1. Set the AD converter control register 1 (ADCCR1) as described below:
 - From the AD input channel select (SAIN), select the channel in which AD conversion is to be performed

TMP89FS62VUG

- Set the analog input control (AINEN) to "Analog input enable".
- · At AMD, specify the AD operating mode (single or repeat mode).
- 2. Set the AD converter control register 2 (ADCCR2) as described below:
 - At the AD conversion time (ACK), specify the AD conversion time. For information on how to specify the conversion time, refer to the AD converter control register 2 and Table 19-1.
- 3. After the above two steps are completed, set "1" on the AD conversion start (ADRS) of the AD converter control register 1 (ADCCR1), and AD conversion starts immediately if single mode is selected.
- 4. As AD conversion is finished, the AD conversion end flag (EOCF) of the AD converter control register 2 (ADCCR2) is set to "1", the AD conversion result is stored in the AD converted value registers (ADCDRH and ADCDRL), and the INTADC interrupt request is generated.
- 5. After the conversion result is read from the AD converted value register (ADCDRH), EOCF is cleared to "0". EOCF will also be cleared to "0" if AD conversion is performed once again before reading the AD converted value register (ADCDRH). In this case, the previous conversion result is retained until AD conversion is finished.

Example: After selecting the conversion time 15.6 µs at 10 MHz and the analog input channel AlN3 pin, perform AD conversion once. After checking EOCF, store the conversion result in the HL register. The operation mode is single mode.

: (Port setting) :Before setting AD converter registers, make an appropriate port ;register setting.(For further details, refer to the section that describes ;I/O ports.) LD (ADCCR1), 0y00110011 :Select AIN3 and operation mode ΙD (ADCCR2), 0y00000010 :Select conversion time (156/fcqck) SET (ADCCR1). 7 ;ADRS = 1 (AD conversion start) SLOOP: TEST (ADCCR2). 7 :EOCF = 1 ? J T, SLOOP ΙD HL, (ADCDRL) ;Read result data

19.5 Starting STOP/IDLE0/SLOW Modes

If STOP/IDLE0/SLOW mode is started, registers ADCCR1<ADRS, AMD, AINEN>, ADCCR2<EOCF, ADBF>, ADCDRL and ADCDRH are initialized to "0". If any of these modes is started during AD conversion, AD conversion is suspended, and the AD converter stops (registers are likewise initialized). When restored from STOP/ IDLE0/SLOW mode, AD conversion is not automatically restarted. Therefore, registers must be reconfigured as necessary.

If STOP/IDLE0/SLOW mode is started during AD conversion, analog reference voltage is automatically disconnected and, therefore, there is no possibility of current flowing into the analog reference voltage.



19.6 Analog Input Voltage and AD Conversion Result

Analog input voltages correspond to AD-converted, 10-bit digital values, as shown in Figure 19-4.

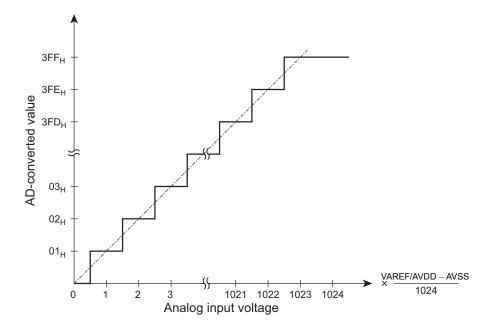


Figure 19-4 Relationships between Analog Input Voltages and AD-converted Values (typical values)

Page 279 2019/08/01

19.7 Precautions about the AD Converter

19.7.1 Analog input pin voltage range

Analog input pins (AIN0 through AIN7) should be used at voltages from VAREF to VSS. If any voltage outside this range is applied to one of the analog input pins, the converted value on that pin becomes uncertain, and converted values on other pins will also be affected.

19.7.2 Analog input pins used as input/output ports

Analog input pins (AIN0 to AIN7) are also used as input/output ports. In using one of analog input pins (ports) to execute AD conversion, input/output instructions at all other pins (ports) must not be executed. If they are executed, there is the possibility that the accuracy of AD conversion may deteriorate. This also applies to pins other than analog input pins; if one pin receives inputs or generates outputs, noise may occur and its adjacent pins may be affected by that noise.

19.7.3 Noise countermeasure

The internal equivalent circuit of the analog input pins is shown in Figure 19-5. The higher the output impedance of the analog input source, the more susceptible it becomes to noise. Therefore, make sure the output impedance of the signal source in your design is 5 k Ω or less. It is recommended that a capacitor be attached externally.

 


Figure 19-5 Analog Input Equivalent Circuit and Example of Input Pin Processing

Page 280 2019/08/01

20. Flash Memory

The TMP89FS62V has flash memory of 61440 bytes. A write and erase to be performed on flash memory can be controlled in the following three modes:

- MCU mode

In MCU mode, the flash memory is accessed by the CPU control, and the flash memory can be executed the erasing and writing without affecting the operations of a running application. Therefore, this mode is used for software debugging and firmware change after shipment of the TMP89FS62V.

- Serial PROM mode

In serial PROM mode, the flash memory is accessed by the CPU control. Use of the serial interface (UART) enables the flash memory to be controlled by the small number of pins. The TMP89FS62V used in serial PROM mode supports on-board programming, which enables users to pro-gram flash memory after the microcontroller is mounted on a user board.

- Parallel PROM mode

The parallel PROM mode allows the flash memory to be accessed as a stand-alone flash memory by the program writer provided by a third party. High-speed access to the flash memory is available by controlling address and data signals directly. To receive a support service for the program writer, please ask a Toshiba sales representative.

In MCU and serial PROM modes, flash memory control registers (FLSCR1 and FLSCR2) are used to control the flash memory. This chapter describes how to access the flash memory using the MCU and serial PROM modes.

TMP89FS62VUG

20.1 Flash Memory Control

The flash memory is controlled by the flash memory control register 1 (FLSCR1), flash memory control register 2 (FLSCR2), and flash memory standby control register (FLSSTB).

Flash memory control register 1

FLSCR1		7	6	5	4	3	2	1	0	
(0x0FD0)	Bit Symbol		FLSMD		BAREA	FAI	REA	-	-	
	Read/Write		R/W		R/W	R	/W	R/W	R/W	
	After reset	0	1	0	0	0	0	0	0	

FLSMD	Flash memory command sequence and toggle control	010: 101: Others:	Disable command sequence and toggle execution Enable command sequence and toggle execution Reserved				
	BAREA BOOTROM mapping control		MCU mode	Serial PROM mode			
BAREA			Hide BOOTROM	-			
			Show BOOTROM	Show BOOTROM			
		00:	Assign the data area 0x8000 through 0xFFFF				
			to the data area 0x8000 through 0xFFFF (standard mapping).				
		01:	01: Assign the data area 0x1000 through 0x7FFF				
FAREA	Flash memory area select control		to the data area 0x9000 through 0xFFFF.				
TANLA	Trasti memory area select control	10:	Assign the code area 0x8000 through 0xFFFF				
			to the data area 0x8000 through 0	xFFFF.			
		11:	Assign the code area 0x1000 thro	ugh 0x7FFF			
			to the data area 0x9000 through 0	xFFFF.			

Note 1: It is prohibited to make a setting in "Reserved".

Note 2: The flash memory control register 1 has a double-buffer structure comprised of the register FLSCR1 and a shift register. Writing "0xD5" to the register FLSCR2 allows a register setting to be reflected and take effect in the shift register. This means that a register setting value does not take effect until "0xD5" is written to the register FLSCR2. The value of the shift register can be checked by reading the register FLSCRM.

Note 3: FLSMD must be set to either "0y010" or "0y101".

Flash memory control register 2

FLSCR2 7 6 5 4 3 2 1 0

(0x0FD1) Bit Symbol CR1EN

Read/Write W

After reset * * * * * * * * * * * *

CR1EN	FLSCR1 register	0xD5	Enable a change in the FLSCR1 setting
CRIEN	enable/disable control	Others	Reserved



Flash memory control register 1 monitor

FLSCRM		7	6	5	4	3	2	1	0	
(0x0FD1)	Bit Symbol			FLSMDM	BAREAM	FAR	FAREAM		ROMSELM	
	Read/Write	R	R	R	R	R		R		
	After reset	0	0	0	0	0	0	0	0	

FLSMDM	monitoring of the control beautiful		FLSCR1 <flsmd>="101" setting disabled FLSCR1<flsmd>="101" setting enabled</flsmd></flsmd>
BAREAM	Monitoring of FLSCR1 <barea> sta</barea>	atus	Value of currently enabled FLSCR1 <barea></barea>
FAREAM	Monitoring of FLSCR1 <farea> sta</farea>	atus	Value of currently enabled FLSCR1 <farea></farea>
ROMSELM	Monitoring of FLSCR1 <romsel> s</romsel>	status	Value of currently enabled FLSCR1 <romsel></romsel>

Note 1: FLSCRM is the register that checks the value of the shift register of the flash memory control register 1.

Note 2: FLSMDM turns into "1" only if FLSMD="101" becomes effective.

Note 3: If an instruction to read FLSCRM is executed, "0" is read from bits 7 and 6.

Note 4: In serial PROM mode, "1" is always read from BAREAM.

Page 283 2019/08/01

20.1 Flash Memory Control TMP89FS62VUG

Flash memory standby reset control register

FLSSTB		7	6	5	4	3	2	1	0
(0x0FD2)	Bit Symbol								FSTB
	Read/Write	R	R	R	R	R	R	R	W
	After reset	0	0	0	0	0	0	0	0

FSTB	Flash memory standby	0	Disable flash memory standby reset
1015	reset control	1	Enable flash memory standby reset

- Note 1: A value can be written to FSTB only by using a program that resides in RAM. A value written using a program residing in the flash memory will be invalidated.
- Note 2: If FSTB is set to "1", do not execute instructions to fetch or read data from or write data to the flash memory. If they are executed, a flash standby reset will occur.
- Note 3: If an instruction to read FLSSTB is executed, "0" is read from bits 7 through 0.

20.2 Functions

20.2.1 Flash memory command sequence execution and toggle control (FLSCR1 <FLSMD>)

To prevent inadvertent writes to the flash memory due to program error or microcontroller malfunction, the execution of the flash memory command sequence and the toggle operation can be disabled (the flash memory can be write protected) by making an appropriate control register setting (write protect). To enable the execution of the command sequence and the toggle operation, set FLSCR1<FLSMD> to "0y101", and then set "0xD5" on FLSCR2<CR1EN>. To disable the execution of the command sequence, set FLSCR1<FLSMD> to "0y010", and then set "0xD5" on FLSCR2<CR1EN>. If the command sequence or the toggle operation is executed with the execution of the command sequence and the toggle operation set to "disable", the executed command sequence or toggle operation takes no effect.

After a reset, FLSCR1<FLSMD> is initialized to "0y010" to disable the execution of the command sequence. FLSCR1<FLSMD> should normally be set to "0y010" except when a write or erase is to be performed on the flash memory.

Note 1: If FLSCR1<FLSMD> is set to "disable", subsequent commands (write instructions) generated are rejected but a command sequence being executed is not initialized.

If you want to set FLSCR1<FLSMD> to "disable", you must finish all command sequences and verify that the flash memory is ready to be read.

Page 285 2019/08/01

20.2.2 Flash memory area switching (FLSCR1<FAREA>)

To perform an erase or write on the flash memory, a memory transfer instruction (command sequence) must be executed. If a memory transfer instruction is used to read or write data, a read or write can be performed only on the data area. To perform an erase or write on the code area, therefore, part of the code area must be temporarily switched to the data area. This switching between data and code areas is performed by making the appropriate FLSCR1<FAREA> setting.

By setting "0xD5" on FLSCR2<CR1EN> after setting FLSCR1<FAREA> to "01", 0x1000 through 0x7FFF (AREA D0) in the data area is mapped to 0x9000 through 0xFFFF (AREA D1) in the data area.

By setting "0xD5" on FLSCR2<CR1EN> after setting FLSCR1<FAREA> to "10", 0x8000 through 0xFFFF (AREA C1) in the code area is mapped to 0x8000 through 0xFFFF (AREA D1) in the data area.

By setting "0xD5" on FLSCR2<CR1EN> after setting FLSCR1<FAREA> to "11", 0x1000 through 0x7FFF (AREA C0) in the code area is mapped to 0x9000 through 0xFFFF (AREA D1) in the data area.

For example, to access 0x4000 in the code area, set "0xD5" on FLSCR2<CR1EN> after setting FLSCR1<FAREA> to "11", and then execute the memory transfer instruction on 0xC000.

To restore the flash memory to the initial state of mapping, set FLSCR1<FAREA> to "00", and then set "0xD5" on FLSCR2<CR1EN>.

All flash memory areas can be accessed by performing the appropriate steps described above and then executing the memory transfer instruction on 0x8000 through 0xFFFF (AREA D1) in the data area.

0x1000 through 0xFFFF (AREA D1) in the data area and 0x1000 through 0xFFFF (AREA C1) in the code area are mirror areas; these two areas refer to the same physical address in memory. Therefore, an erase or write must be performed on one of these two mirror areas. For example, If a write is performed on 0x8000 in the data area with FLSCR1<FAREA> set to "10" after performing a write on 0x8000 in the data area with FLSCR1<FAREA> set to "00", data is overwritten. To write data to the flash memory that already has data written to it, existing data must first be erased from the flash memory by performing a sector erase or chip erase, and then data must be written.

Additionally, access to areas to which memory is not assigned should be avoided by executing an instruction or specifying such an area by using jump or call instructions.



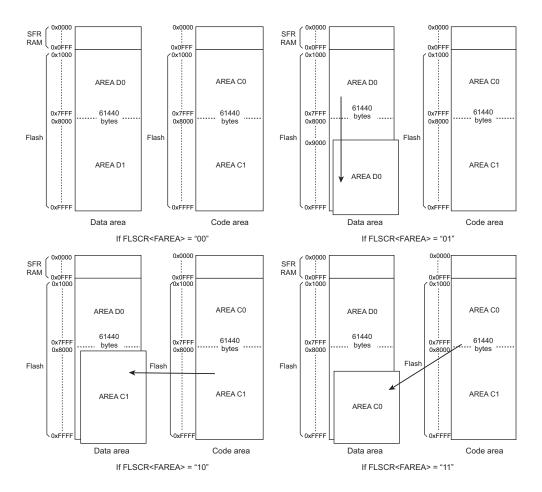


Figure 20-1 Area Switching Using the FLSCR1<FAREA> Setting

Page 287 2019/08/01

20.2.3 RAM area switching (SYSCR3<RAREA>)

If "0xD4" is set on SYSCR4 after SYSCR3<RAREA> is set to "1" in MCU mode, RAM is mapped to the code area. To restore the RAM area to the initial state of mapping, set SYSCR3<RAREA> to "0", and then set "0xD4" on SYSCR4.

In serial PROM mode, RAM is mapped to the code area, irrespective of the SYSCR3<RAREA> setting.

20.2.4 BOOTROM area switching (FLSCR1<BAREA>)

If "0xD5" is set on FLSCR2<CR1EN> after FLSCR1<BAREA> is set to "1" in MCU mode, 0x1000 through 0x17FF in the code and data areas is masked by flash memory, and 2K-byte (first half of 4KB) BOOTROM is mapped. If you do not want to map BOOTROM, set "0xD5" on FLSCR2<CR1EN> after setting FLSCR1<BAREA> to "0".

A set of codes for programming flash memory in serial PROM mode are built into BOOTROM, and a support program (API) for performing an erase or write on flash memory in a simple manner is also built into one part in the BOOTROM area. Therefore, by calling a subroutine in the support program after BOOTROM is mapped, it is possible to erase, write and read flash memory easily.

In serial PROM mode, BOOTROM is mapped to 0x1000 through 0x17FF in the data area and 0x1000 through 0x1FFF in the code area, irrespective of the FLSCR1<BAREA> setting. BAREA is always "1", and the set BAREA value remains unchanged, even if data is written. "1" is always read from BAREA.

Note: Do not allocate the FLSCR1<FAREA> switching program to the code area 0x1000 through 0x1FFF. If it is allocated to that area, the software program may not function properly, and the microcontroller may malfunction.

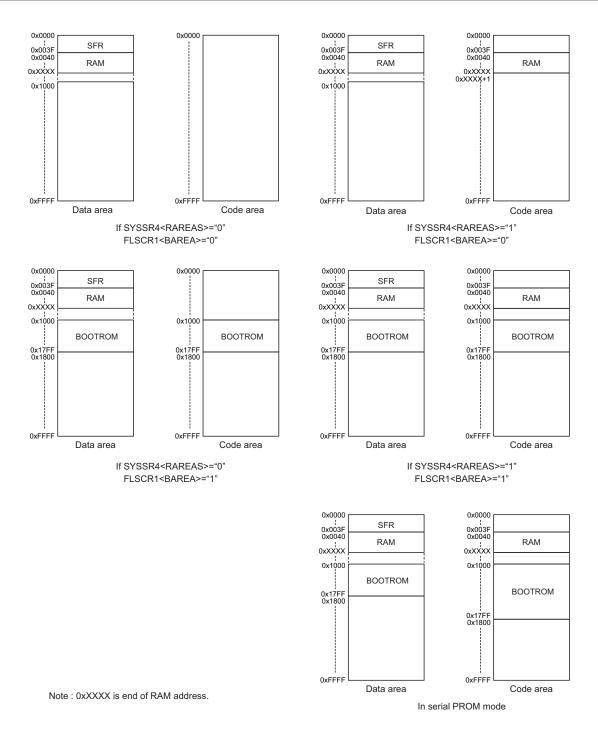


Figure 20-2 Show/Hide Switching for BOOTROM and RAM

Page 289 2019/08/01

20.2.5 Flash memory standby reset control (FLSSTB<FSTB>)

Only program on the RAM can change FLSSTB<FSTB>. If a program on the Flash memory tries to change FLSSTB<FSTB>, changing FLSSTB<FSTB> is ignored and the content of FLSSTB<FSTB> is maintained.

If the Flash memory is accessed by a program when FLSSTB<FSTB> is "1", the "Flash memory stand-bye reset" occurs. When a data from/to Flash memory is read/written by a program on the RAM, or an instruction is fetched from the Flash memory, FLSSTB<FSTB> is cleared to "0" beforehand.

Even if FLSSTB<FSTB> is "1" and the interrupt vector table is mapped to the Flash memory (when SYSCR3<RVCTR>="0" is valid), FLSSTB<FSTB> is cleared to "0" automatically and an interrupt vector is read from the RAM when an interrupt occurs.

However, when the interrupt vector table is mapped to the RAM (when SYSCR3<RVCTR>="1" is valid), FLSSTB<FSTB> remains "1" and an interrupt vector is read from the RAM. At this time, in case that the referred address of the interrupt vector is within Flash memory area, the "Flash memory stand-bye reset" occurs after generating an interrupt since an instruction is fetched from the Flash memory when FLSSTB<FSTB> is "1".

The FLSSTB<FSTB> is the register for a compatibility with TMP89FS60's software. The content in FLSSTB<STB> is no influence to the operation of the Flash memory on the TMP89FS60V.

So, it should be generally cleared to "0" except the case of using the program for the TMP89FS60.



20.3 Command Sequence

In MCU and serial PROM modes, the command sequence consists of six commands (JEDEC compatible), as shown in Table 20-1.

Table 20-1 Command Sequence

	Command sequence	1st Bus Write Cy- cle		2nd Bus Write Cy- cle		3rd Bus Write Cy- cle		4th Bus Write Cy- cle		5th Bus Write Cy- cle		6th Bus Write Cy- cle	
		Add	Data	Add	Data	Add	Data	Add	Data	Add	Data	Add	Data
1	Byte Program	0x#555	0xAA	0x#AAA	0x55	0x#555	0xA0	BA (Note 1)	Data (Note 1)	-	-	-	-
2	Sector Erase (partial erase in units of 4KB)	0x#555	0xAA	0x#AAA	0x55	0x#555	0x80	0x#555	0xAA	0x#AAA	0x55	SA (Note 2)	0x30
3	Chip Erase (all erase)	0x#555	0xAA	0x#AAA	0x55	0x#555	0x80	0x#555	0xAA	0x#AAA	0x55	0x#555	0x10
4	Product ID Entry	0x#555	0xAA	0x#AAA	0x55	0x#555	0x90	-	1	-	ı	-	1
5	Product ID Exit	0x#XXX	0xF0	-	-1	-	-	-	-	-	1	-	1
6	Security Program	0x#555	0xAA	0x#AAA	0x55	0x#555	0xA5	0xFF7F	0x00	-	-	-	-

- Note 1: Specify the address and data to be written (Refer to Table 20-2 about BA).
- Note 2: The area to be erased is specified with the upper 4 bits of the address (Refer to Table 20-3 about SA).
- Note 3: Do not start the STOP, IDLE0, IDLE1, IDLE2, SLEEP1 or SLEEP0 mode while a command sequence is being executed or a task specified in a command sequence is being executed (write, erase or ID entry).
- Note 4: #; 0x1 through 0xF should be specified as the upper 4bits of the address. However, while FLSCRM<BAREAM> is "1", 0x2 or more should be specified. Usually, it is recommended that 0xF is specified.
- Note 5: XXX; Don't care

20.3.1 Byte program

This command writes data the flash memory in units of one byte. The address and data to be written are specified in the 4th bus write cycle. The range of addresses that can be specified is shown in Table 20-2. For example, to write data to 0x1000 in the data area, set FLSCR1<FAREA> to "0y01", set "0xD5" on FLSCR2<CR1EN>, and then specify 0x9000 as an address in the 4th bus write cycle. The time needed to write each byte is 3 ms maximum. The next command sequence cannot be executed if an ongoing write operation is not completed. To check the completion of the write operation, perform read operations twice on the same address in the flash memory, and perform polling until the same data is read from the flash memory. During the write operation, bit 6 is reversed each time a read is performed.

- Note 1: To rewrite data to addresses in the flash memory where data (including 0xFF) is already written, make sure that you erase the existing data by performing a sector erase or chip erase before writing data.
- Note 2: The data and code areas become mirror areas. As you access these areas, you are brought to the same physical address in memory. When performing a Byte Program, make sure that you write data to either of these two areas, not both.
- Note 3: Do not perform a Byte Program on areas other than those shown in Table 20-2.

Table 20-2 Range of A	Addresses Specifiable	(BA)
-----------------------	-----------------------	------

	Write Area	FLSCR1 <farea></farea>	Address specified by instruction (Address of 4th bus write cycle)
AREA D0 (Data area)	0x1000 through 0x7FFF	01	0x9000 through 0xFFFF
AREA D1 (Data area)	0x8000 through 0xFFFF	00	0x8000 through 0xFFFF
AREA C0 (Code area)	0x1000 through 0x7FFF	11	0x9000 through 0xFFFF
AREA C1 (Code area)	0x8000 through 0xFFFF	10	0x8000 through 0xFFFF

20.3.2 Sector erase (4-kbyte partial erase)

This command erases the flash memory in units of 4 kbytes. The flash memory area to be erased is specified by the upper 4 bits of the 6th bus write cycle address. The range of addresses that can be specified is shown in Table 20-3. For example, to erase 4 kbytes from 0x1000 through 0x1FFF in the code area, set FLSCR1<FAREA> to "0y11", set "0xD5" on FLSCR2<CR1EN>, and then specify either 0x9000 or 0x9FFF as the 6th bus write cycle. The sector erase command is effective only in MCU and serial PROM modes, and it cannot be used in parallel PROM mode.

The time needed to erase 4 kbytes is 30 ms maximum. The next command sequence cannot be executed if an ongoing erase operation is not completed. To check the completion of the erase operation, perform read operations twice on the same address in the flash memory, and perform polling until the same data is read from the flash memory. During the erase operation, bit 6 is reversed each time a read is performed.

Data in the erased area is 0xFF.

Note 1: The data and code areas become mirror areas. As you access these areas, you are brought to the same physical address in memory. When performing a sector erase, make sure that you erase data from either of these two areas, not both.

Note 2: Do not perform a sector erase on areas other than those shown in Table 20-3.

Table 20-3 Range of Addresses Specifiable (SA)

Erase Area		FLSCR1 <farea></farea>			
AREA D0 (Data area)	0x1000 through 0x1FFF	01	0x9000 through 0x9FFF		
	0x2000 through 0x2FFF		0xA000 through 0xAFFF		
	0x3000 through 0x3FFF		0xB000 through 0xBFFF		
	0x4000 through 0x4FFF		0xC000 through 0xCFFF		
	0x5000 through 0x5FFF		0xD000 through 0xDFFF		
	0x6000 through 0x6FFF		0xE000 through 0xEFFF		
	0x7000 through 0x7FFF		0xF000 through 0xFFFF		
AREA D1 (Data area)	0x8000 through 0x8FFF		0x8000 through 0x8FFF		
	0x9000 through 0x9FFF		0x9000 through 0x9FFF		
	0xA000 through 0xAFFF		0xA000 through 0xAFFF		
	0xB000 through 0xBFFF		0xB000 through 0xBFFF		
	0xC000 through 0xCFFF	00	0xC000 through 0xCFFF		
	0xD000 through 0xDFFF		0xD000 through 0xDFFF		
	0xE000 through 0xEFFF		0xE000 through 0xEFFF		
	0xF000 through 0xFFFF		0xF000 through 0xFFFF		

Erase Area		FLSCR1 Address specified by instruction <farea> (Address of 6th bus write cycle</farea>			
AREA C0 (Code area)	0x1000 through 0x1FFF		0x9000 through 0x9FFF		
	0x2000 through 0x2FFF		0xA000 through 0xAFFF		
	0x3000 through 0x3FFF		0xB000 through 0xBFFF		
	0x4000 through 0x4FFF	11	0xC000 through 0xCFFF		
	0x5000 through 0x5FFF		0xD000 through 0xDFFF		
	0x6000 through 0x6FFF		0xE000 through 0xEFFF		
	0x7000 through 0x7FFF		0xF000 through 0xFFFF		
AREA C1 (Code area)	0x8000 through 0x8FFF		0x8000 through 0x8FFF		
	0x9000 through 0x9FFF		0x9000 through 0x9FFF		
	0xA000 through 0xAFFF		0xA000 through 0xAFFF		
	0xB000 through 0xBFFF	40	0xB000 through 0xBFFF		
	0xC000 through 0xCFFF	10	0xC000 through 0xCFFF		
	0xD000 through 0xDFFF		0xD000 through 0xDFFF		
	0xE000 through 0xEFFF		0xE000 through 0xEFFF		
	0xF000 through 0xFFFF		0xF000 through 0xFFFF		

20.3.3 Chip erase (all erase)

This command erases the entire flash memory.

The time needed to erase it is 126 ms maximum. The next command sequence cannot be executed if an ongoing erase operation is not completed. To check the completion of the erase operation, perform read operations twice on the same address in the flash memory, and perform polling until the same data is read from the flash memory. During the erase operation, bit 6 is reversed each time a read is performed.

Data in the erased area is 0xFF.

20.3.4 Product ID entry

This command activates the product ID mode. If an instruction to read the flash memory is executed in Product ID mode, the vendor ID, flash ID and security status can be read from the flash memory.

Table 20-4 Values to Be Read in Product ID Mode

Address	Meaning	Read value			
0xF000	Vendor ID	0x98			
0xF001	Flash ID	0x4D			
0xFF7F	Security status	0xFF: Security program disabled			
		Other than 0xFF: Security program enabled			

20.3.5 Product ID exit

This command is used to exit the Product ID mode.

20.3.6 Security program

If the security program is enabled, the flash memory is write and read protected in parallel PROM mode, and the flash memory write command cannot be executed in serial PROM mode.

To disable the security program, the chip erase must be performed. To check whether the security pro-gram is enabled or disabled, read 0xFF7F in product ID mode. Refer to Table 20-4 for further details. The time needed to enable or disable the security program is 3 ms maximum. The next command sequence cannot be executed until the security program setting is completed. To check the completion of the security pro-gram setting, perform read operations twice on the same address in the flash memory, and perform polling un-til the same data is read. When the security program setting is being made, bit 6 is reversed each time a read is performed.

20.4 Toggle Bit (D6)

After the flash memory write, the chip erase, and the security program command sequence are executed, the value of the 6th bit (D6) in data read by a read operation is reversed each time a read is performed. This bit reversal can be used as a software mechanism for checking the completion of each operation. Normally, perform read operations twice on the same address in the flash memory, and perform polling until the same data is read from the flash memory.

After the flash memory write, the chip erase, and the security program command sequence are executed, the toggle bit read by the first read operation is always "1".

- Note 1: If FLSCR1<FLSMD> is set to "disable", the toggle bit is not reversed.
- Note 2: Do not read the toggle bit by using a 16-bit transfer instruction. If the toggle bit is read using a 16-bit transfer instruction, the toggle bit does not function properly.

20.5 Access to the Flash Memory Area

A read or a program fetch cannot be performed on the whole of the flash memory area if data is being written to the flash memory, if data in flash memory is being erased or if a security setting is being made in the flash memory. When performing these operation on the flash memory area, the flash memory cannot be directly accessed by using a program in the flash memory; the flash memory must be accessed using a program in the BOOTROM area or the RAM area.

Data can be written to and read from the flash memory area in units of one byte. Data in the flash memory can be erased in units of 4 kbytes, and all data in the flash memory can be erased at one stroke. A read can be performed using one memory transfer instruction. A write or erase, however, must be performed using more than one memory transfer instruction because the command sequence method is used. For information on the command sequence, refer to Table 20-1.

- Note 1: To allow a program to resume control on the flash memory area that is rewritten, it is recommended that you let the program jump (return) after verifying that the program has been written properly.
- Note 2: Do not reset the MCU (including a reset generated due to internal factors) when data is being written to the flash memory, data is being erased from the flash memory or the security command is being executed. If a reset occurs, there is the possibility that data in the flash memory may be rewritten to an unexpected value.

20.5.1 Flash memory control in serial PROM mode

The serial PROM mode is used to access the flash memory by using a control program provided in the BOOT-ROM area. Since almost all operations relating to access to the flash memory can be controlled simply using data supplied through the serial interface (UART), it is not necessary to operate the control register for the user. For details of the serial PROM mode, see "Serial PROM Mode".

20.5.1.1 How to transfer and write a control program to the RAM area in RAM loader mode of the serial PROM mode

TMP89FS62V cannot support the RAM loader command in the serial PROM mode.



20.5.2 Flash memory control in MCU mode

In MCU mode, a write can be performed on the flash memory by executing a control program in RAM or using a support program (API) provided inside BOOTROM.

20.5.2.1 How to write to the flash memory by transferring a control program to the RAM area

This section describes how to execute a control program in RAM in MCU mode. A control program to be executed in RAM must be acquired and stored in the flash memory or it must be imported from an outside source through a communication pin. (The following procedure assumes that a program copy is provided inside the flash memory.)

Steps 1 through 5 and 11 shown below concern the control by a program in the flash memory, and other steps concern the control by a program transferred to RAM. The following procedure is linked with a program example to be described later.

- 1. Set the interrupt master enable flag to "disable (DI)" (IMF \leftarrow "0").
- 2. Transfer the write control program to RAM.
- 3. Establish the nonmaskable interrupt vector in the RAM area.
- 4. After setting both SYSCR3<RAREA> and SYSCR3<RVCTR> to "1", set "0xD4" on SYSCR4. Then allocate RAM to the code area, and switch the vector area to the RAM area.
- 5. Invoke the erase processing program in the RAM area by generating a CALL instruction.
- 6. Set FLSCR1<FLSMD> to "0y101", and specify the area to be erased by making the appropriate FLSCR1<FAREA> setting. (Make the appropriate FLSCR1<ROMSEL> setting, as necessary.) Then set "0xD5" on FLSCR2<CR1EN>.
- 7. Execute the erase command sequence.
- 8. Perform a read on the same address in the flash memory twice consecutively. (Repeat this step until the read values become the same.)
- 9. After setting FLSCR1<FLSMD> to "0y010" and FLSCR1<FAREA> to "0y00", set "0xD5" on FLSCR2<CR1EN>. (This disables the execution of the command sequence and returns FAREA to the initial state of mapping.)
- 10. Generate the RET instruction to return to the flash memory.
- 11. Invoke the write program in the RAM area by generating a CALL instruction.
- 12. Set FLSCR1<FLSMD> to "0y101", and make the appropriate FLSCR1<FAREA> setting to specify the area (area erased by performing step 7 above) on which a write is to be performed. (Make the appropriate FLSCR1<ROMSEL> setting, as necessary.) Then set "0xD5" on FLSCR2<CR1EN>.
- 13. Execute the write command sequence.
- 14. Perform a read on the same address in the flash memory twice consecutively. (Repeat this step until the read values become the same.)
- 15. After setting FLSCR1<FLSMD> to "0y010" and FLSCR1<FAREA> to "0y00", set "0xD5" on FLSCR2<CR1EN>. (This disables the execution of the command sequence and returns FAREA to the initial state of mapping.)

- 16. Generate the RET instruction to return to the flash memory.
- 17. After setting both SYSCR3<RAREA> and SYSCR3<RVCTR> to "0", set "0xD4" on SYSCR4. Then release RAM allocation for the code area, and switch the vector area to the flash area.
- Note 1: Before writing data to the flash memory from the RAM area in MCU mode, the vector area must be switched to the RAM area by using SYSCR3<RVCTR>, data must be written to the vector addresses (INTUNDEF, INTSWI: 0x01F8 to 0x01F9, INTWDT: 0x01FC to 0x01FD) that correspond to nonmaskable interrupts, and the interrupt subroutine (RAM area) must be defined. This allows you to trap the errors that may occur due to an unexpected nonmaskable interrupt during a write. If SYSCR3<RVCTR> is set in the flash memory area and if an unexpected interrupt occurs during a write, a malfunction may occur because the vector area in the flash memory cannot be read properly.
- Note 2: Before using a certain interrupt in MCU mode, the vector address corresponding to that interrupt and the interrupt service routine must be established inside the RAM area. In this case, the nonmaskable interrupt setting must be made, as explained in Note 1.
- Note 3: Before jumping from the flash memory to the RAM area, RAM must be allocated to the code area by making the appropriate SYSCR3<RAREA> setting (setting made in step 4 in the procedure described on the previous page).

Example: Case in which a program is transferred to RAM, a sector erase is performed on 0xE000 through 0xEFFF in the code area, and then 0x3F data is written to 0xE500.

If nonmaskable interrupts (INTSWI, INTUNDEF or INTWDT) occur, system clock reset is generated.

```
cRAMStartAdd equ 0x0200
                                                              ; RAM start address
main section code abs = 0xF000
                                                              ; Disable interrupts (step 1)
; #### Transfer the program to RAM #### (step 2)
                  LD
                                HL,cRAMStartAdd
                  LD
                                IX,sRAMprogStart
sRAMLOOP:
                  ΙD
                                                             ; Transfer the program from sRAMprogStart to
                                A.(IX)
                  LD
                                (HL),A
                                                             : sRAMprogEnd to cRAMStartAdd.
                  INC
                                HL
                  INC
                                IX
                  CMP
                                IX,sRAMprogEnd
                  J
                                NZ,sRAMLOOP
; #### Set a nonmaskable interrupt vector inside the RAM area #### (step 3)
                  LD
                                HL.0x01FC
                                                             ; Set INTUNDEF and INTSWI interrupt vectors
                  LDW
                                (HL),sINTSWI - sRAMprogStart + cRAMStartAdd
                  LD
                                HL.0x01F8
                                                              ; Set INTWDT interrupt vector
                  IDW
                                (HL),sINTWDT - sRAMprogStart + cRAMStartAdd
; #### Allocate RAM to the code area. Switch the vector area to RAM #### (step 4)
                  LD
                                 (SYSCR3),0x06
                                                             ; Set RAREA and RVCTR to "1"
                  LD
                                 (SYSCR4),0xD4
                                                              ; Enable Code
; #### Sector erase and write process ####
                                HL,0xF555
                                                             ; Variable for command sequence
                                DE,0xFAAA
                                                             ; Variable for command sequence
; Sector erase process (step 5)
                  LD
                                C,0x00
                                                             ; Set upper addresses
                  LD
                                IX,0xE000
                                                             ; Set middle and lower addresses
                  CALL
                                sSectorErase - sRAMprogStart + cRAMStartAdd
                                                              : Perform a sector erase (0xE000)
; Write process (step 11)
                  ΙD
                                C 0x00
                                                              : Set upper addresses
                  ΙD
                                 IX.0xE500
                                                             ; Set middle and lower addresses
                  LD
                                B.0x3F
                                                             ; Data to be written
                  CALL
                                 sByteProgram - sRAMprogStart + cRAMStartAdd
```



```
; Write process (0xE500)
; #### Allocate RAM to the code area. Switch the vector area to RAM #### (step 17)
                  LD
                                 (SYSCR3),0x00
                                                              ; Set RAREA and RVCTR to "0"
                  LD
                                 (SYSCR4),0xD4
                                                              ; Enable Code
; #### Execute the next main program ####
                                                              ; Execute the main program
                  J
                                 XXXXX
; #### Program to be executed in RAM ####
sRAMprogStart:
                  NOP
                                                              ; Fail-safe process
                  NOP
                  NOP
                  NOP
                  NOP
                  LD
                                 (SYSCR2),0x10
                                                              ; Generate system clock reset
sSectorErase:
                  CALL
                                sAddConv - sRAMprogStart + cRAMStartAdd \\
                                                              ; Address conversion process
; Sector erase process (step 7)
                  LD
                                (HL),E
                                                              ; 1st Bus Write Cycle (note 1)
                  LD
                                 (DE),L
                                                              ; 2nd Bus Write Cycle (note 1)
                  LD
                                 (HL),0x80
                                                              ; 3rd Bus Write Cycle (note 1)
                  LD
                                 (HL),E
                                                              ; 4th Bus Write Cycle (note 1)
                  LD
                                 (DE),L
                                                              ; 5th Bus Write Cycle (note 1)
                  LD
                                 (IX),0x30
                                                              ; 6th Bus Write Cycle (note 1)
                                 sRAMopEnd
; Write process (step 13)
sByteProgram:
                  CALL
                                 sAddConv - sRAMprogStart + cRAMStartAdd
                                                              ; Address conversion process
                  LD
                                 (HL),E
                                                              ; 1st Bus Write Cycle (note 1)
                  LD
                                 (DE),L
                                                              ; 2nd Bus Write Cycle (note 1)
                  LD
                                                              ; 3rd Bus Write Cycle (Note 1)
                                 (HL),0xA0
                  ΙD
                                 (IX),B
                                                              ; 4th Bus Write Cycle (note 1)
; End process
sRAMopEnd:
                  NOP
                                                              ; (note 2)
                  NOP
                                                              ; (note 2)
                  NOP
                                                              ; (note 2)
sLOOP1:
                  LD
                                 A,(IX)
                                                              ; (steps 8,14)
                  CMP
                                 A,(IX)
                  J
                                 NZ,sLOOP1
                                                              ; Loop until the read values become the same
                  LD
                                 (FLSCR1),0x40
                                                              ; Disable the execution of command sequence
                                                              ; (steps 9 and 15)
                  LD
                                 (FLSCR2),0xD5
                                                              ; Reflect the FLSCR1 setting
                  RET
                                                              ; Return to flash memory
; Address conversion process (steps 6 and 12)
sAddConv:
                  LD
                                WA,IX
                  SWAP
                                 С
                  AND
                                 C,0x10
                  SWAP
                  AND
                                 80x0,W
                  OR
                                 C,W
                  XOR
                                 C.0x08
```

Page 299 2019/08/01

	SHRC	С	
	OR	C,0xA0	
	LD	(FLSCR1),C	; Enable the execution of command sequence. Make the
			; FAREA setting.
	LD	(FLSCR2),0xD5	; Reflect the FLSCR1 setting
	LD	WA,IX	
	TEST	C.3	
	J	Z,sAddConvEnd	
	OR	W,0x80	
	LD	IX,WA	
sAddConvEnd:	RET		
; Interrupt subrou	tino		
, interrupt subrou	une		
sINTWDT:	urie		
	LD	IX,0xF000	
sINTWDT:		IX,0xF000 A,(IX)	
sINTWDT:	LD		
sINTWDT:	LD LD	A,(IX)	; Loop until the read values become the same
sINTWDT:	LD LD CMP	A,(IX) A,(IX)	; Loop until the read values become the same ; Generate system clock reset
sINTWDT:	LD LD CMP J	A,(IX) A,(IX) NZ,sINTWDT	•

Note 1: In using a write instruction in the n-th bus write cycle, make sure that you use a write instruction of more than three machine cycles or arrange write instructions in such a way that they are generated at intervals of three or more machine cycles. If a 16-bit transfer instruction is used or if write instructions are executed at intervals of two machine cycles, the flash memory command sequence will not be transmitted properly, and a malfunction may occur.

Note 2: If a read of the flash memory (toggle operation) is to be performed after a write instruction is generated in the n-th bus write cycle, instructions must be arranged in such a way that they are generated at intervals of three or more machine cycles; machine cycles are counted from when the last n-th bus write cycle is generated to when each instruction is generated. Three NOP instructions are normally used. If the interval between instructions is short, the toggle bit does not operation correctly.



20.5.2.2 How to write to the flash memory by using a support program (API) of BOOTROM

TMP89FS62V has following support program (API) inside BOOTROM. The following shows how to per-form an erase and a write on the flash memory by using a support program (API) of BOOTROM in MCU mode. For details, please refer to "20.6 API (Application Programming Interface)".

Steps 1 through 16 shown below concern the control by a program in the flash memory.

- 1. Transfer the subroutine program of nonmaskable interrupt (INTSWI, INTWDT) to RAM.
- 2. Establish the nonmaskable interrupt vector in the RAM area.
- 3. After setting both SYSCR3<RAREA> and SYSCR3<RVCTR> to "1", set "0xD4" on SYSCR4. Then allocate RAM to the code area, and switch the vector area to the RAM area.
- 4. Set "0xD5" on FLSCR2<CR1EN> after setting FLSCR1<BAREA> to "1".
- 5. Set the erasing address range to A register. For example, to erase sector area from 0xE000 through 0xEFFF, set 0x0E to register. To erase sector area from 0x1F000 through 0x1FFFF, set 0x1F to register.
- 6. Set "0xD5" to C register as enable code.
- 7. Call address (0x1012). (Sector erase is performed. It is not necessary from 2 through 4 steps, if programing area is already erased beforehand.)
- 8. Set "0x00" to C register.
- 9. Set A[15:0] of address for programing to WA register.
- 10. Set programing data to E register.
- 11. Set "0xD5" to (SP-) as enable code.
- 12. Call address (0x1010). (Byte program is performed)
- 13. If programing is continued for other address, return to step 8.
- 14. Set "0xD5" to FLSCR2<CR1EN> after setting FLSCR1<BAREA> to "0".
- 15. Set "0xD4" to SYSCR4 after setting SYSCR3<RAREA, RVCTR> to "0".

Example: Case in which a sector erase is performed on 0xE000 through 0xEFFF in the data area, and then data at 0x0100 through 0x01FF is written to 0xE000 through 0xE0FF in the data area.

If nonmaskable interrupts (INTSWI, INTUNDEF or INTWDT) occur, system clock reset is generated.

.BTWrite equ 0x1010 ; Write data to the flash memory

.BTEraseSec equ 0x1012 ; Sector Erase .BTEraseChip equ 0x1014 ; Chip Erase

.BTGetRP equ 0x1016 ; Check the status of the security program

.BTSetRP equ 0x1018 ; Configure the security program

cRAMStartAdd equ 0x0200 ; RAM start address

main section code abs = 0xF000

; #### Transfer the program to RAM ####

LD HL,cRAMStartAdd LD IX,sRAMprogStart

Page 301 2019/08/01

```
sRAMLOOP:
                 LD
                                A,(IX)
                                                             ; Transfer the program from sRAMprogStart to
                  LD
                                (HL),A
                                                             ; sRAMprogEnd to cRAMStartAdd.
                  INC
                                HL
                 INC
                                IX
                  CMP
                                IX,sRAMprogEnd
                                NZ,sRAMLOOP
; #### Set a nonmaskable interrupt vector inside the RAM area ####
                                HL,0x01FC
                                                             ; Set INTUNDEF and INTSWI interrupt vectors
                 LDW
                                (HL),sINTSWI - sRAMprogStart + cRAMStartAdd
                 LD
                                HL,0x01F8
                                                             ; Set INTWDT interrupt vector
                 LDW
                                (HL),sINTWDT - sRAMprogStart + cRAMStartAdd
; #### Allocate RAM to the code area. Switch the vector area to RAM ####
                 LD
                                (SYSCR3),0x06
                                                             ; Set RAREA and RVCTR to "1"
                 LD
                                (SYSCR4),0xD4
                                                             ; Enable Code
; #### Allocate BOOTROM to the data/code area ####
                 LD
                                (FLSCR1),0x50
                                                             ; Set BAREA to "1" (note 1)
                  LD
                                                             ; Reflect the FLSCR1 setting
                                (FLSCR2),0xD5
; #### Sector erase process (API) ####
                 LD
                                A,0x0E
                                                             ; Specify the area to be erased (0xE000 through 0xEFFF)
                 LD
                                C,0xD5
                                                             ; Enable Code
                  CALL
                                (.BTEraseSec)
                                                             ; Execute sector erase
; #### Write process ####
                                HL,0xE000
                                                             ; Flash start address (address where data is written)
                  LD
                                IY,0x0100
                                                             ; RAM start address
sLOOP1:
                 LD
                                C,0x00
                                                             ; Address where data is written (bit 16)
                 LD
                                WA,HL
                                                             ; Address where data is written (bits 15 to 0)
                 LD
                                E,(IY)
                                                             ; Data to be written
                 LD
                                (SP-),0xD5
                                                             ; Enable Code
                 CALL
                                (.BTWrite)
                                                             ; Write data to the flash memory (1 byte)
                                ΙΥ
                 INC
                                                             · Increment flash address
                 INC
                                н
                                                             ; Increment RAM address
                 CMP
                                L.0x00
                                                             ; Finish 256-byte write?
                 J
                                NZ,sLOOP1
                                                             ; Return to sLOOP1 if the number of bytes is less than 256
; #### End process ####
                                                             ; Set BAREA to "0"
                 LD
                                (FLSCR1),0x40
                 LD
                                (FLSCR2),0xD5
                                                             ; Enable Code
                  LD
                                (SYSCR3),0x00
                                                             ; Set RAREA and RVCTR to "0"
                 LD
                                (SYSCR4),0xD4
                                                             ; Enable Code
                  J
                                XXXX
; #### Program to be executed in RAM ####
sRAMprogStart:
; Interrupt subroutine
sINTWDT:
sINTSWI:
                 LD
                                IX,0xF000
                 LD
                                A,(IX)
                  CMP
                                A,(IX)
                                NZ,sINTWDT
                  J
                                                             ; Loop until the read values become the same
                 LD
                                (SYSCR2),0x10
                                                             ; Generate system clock reset
                 RETN
```



sRAMprogEnd: NOP

Note 1: Do not allocate the above program to 0x1000 through 0x17FF in the code area in the flash memory. If this area is set to BAREA="1", it changes from the flash memory area to the BOOTROM area so that the program will not function properly and the microcontroller may malfunction.

Note 2: It is not necessary to add DI instruction for above example program, because the support program include it. However, the support program does not include EI instruction. Therefore, if interrupt process is used, enable IMF after finishing all above process.

Page 303 2019/08/01

20.5 Access to the Flash Memory Area

TMP89FS62VUG



20.5.2.3 How to set the security program by using a support program (API) of BOOTROM

- 1. Transfer the subroutine program of nonmaskable interrupt (INTSWI, INTWDT) to RAM.
- 2. Establish the nonmaskable interrupt vector in the RAM area.
- 3. After setting both SYSCR3<RAREA> and SYSCR3<RVCTR> to "1", set "0xD4" on SYSCR4. Then allocate RAM to the code area, and switch the vector area to the RAM area.
- 4. Set "0xD5" on FLSCR2<CR1EN> after setting FLSCR1<BAREA> to "1".
- 5. Set "0xD5" to A register as enable code.
- 6. Set "0x00" to C register.
- 7. Call address (0x1016). (After processing, security program state returns to A register.)
- 8. If A register is not "0xFF", jump to sSKIP because security program is already set.
- 9. Set "0xD5" to A register as enable code.
- 10. Set "0x00" to C register.
- 11. Call address (0x1018). (Security program is performed.)
- 12. Set "0xD5" to FLSCR2 after setting FLSCR1<BAREA> to "0".
- 13. Set "0xD4" to SYSCR4 after setting SYSCR3<RAREA, RVCTR> to "0".

Example: Whether the security program is enabled or disabled is checked. If it is disabled, it is enabled.

```
.BTWrite
                                equ 0x1010
                                                             ; Write data to the flash memory
                  .BTEraseSec equ 0x1012
                                                             ; Sector Erase
                  .BTEraseChip equ 0x1014
                                                             ; Chip Erase
                  .BTGetRP
                                equ 0x1016
                                                             ; Check the status of the security program
                  .BTSetRP
                                equ 0x1018
                                                             ; Enable the security program
                  cRAMStartAdd equ 0x0200
                                                             ; RAM start address
main section code abs = 0xF000
; #### Transfer the program to RAM ####
                 LD
                                HL,cRAMStartAdd
                                IX,sRAMprogStart
                 LD
sRAMLOOP:
                 LD
                                A,(IX)
                                                             ; Transfer the program from sRAMprogStart to
                 LD
                                (HL),A
                                                             ; sRAMprogEnd to cRAMStartAdd.
                 INC
                                HL
```

Page 305 2019/08/01

```
INC
                                IX
                  CMP
                                IX,sRAMprogEnd
                                NZ,sRAMLOOP
; #### Set a nonmaskable interrupt vector inside the RAM area ####
                                HL,0x01FC
                  LD
                                                             ; Set INTUNDEF and INTSWI interrupt vectors
                  LDW
                                (HL),sINTSWI - sRAMprogStart + cRAMStartAdd
                  LD
                                HL,0x01F8
                                                             ; Set INTWDT interrupt vector
                  LDW
                                (HL),sINTWDT - sRAMprogStart + cRAMStartAdd
; #### Allocate RAM to the code area. Switch the vector area to RAM ####
                                (SYSCR3),0x06
                                                             ; Set RAREA and RVCTR to "1"
                  LD
                  LD
                                (SYSCR4),0xD4
                                                             ; Enable Code
; #### Allocate BOOTROM to the data/code area ####
                  LD
                                (FLSCR1),0x50
                                                             ; Set BAREA to "1" (note 2)
                                (FLSCR2),0xD5
                  LD
                                                             ; Reflect the FLSCR1 setting
; #### Check the status of the security program ####
                  LD
                                A,0xD5
                                                             ; Enable Code
                  LD
                                 C,0x00
                                                             ; Set 0x00 (note 1)
                  CALL
                                 (.BTGetRP)
                                                             ; Check the status of the security program
                  CMP
                                                              ; The status of the security is released when the return value ;
                                A,0xFF
                                                              is 0xFF
                                NZ,sSKIP
                                                             ; Go to sSKIP if the security program is enabled
; #### Security program enable process (API) ####
                  LD
                                A,0xD5
                                                             ; Enable Code
                  LD
                                C,0x00
                                                             ; Set 0x00 (note 1)
                  CALL
                                (.BTSetRP)
                                                             ; Enable the security program
sSKIP:
                  ΙD
                                                             ; Set BAREA to "0"
                                (FLSCR1),0x40
                  ΙD
                                (FLSCR2),0xD5
                                                             : Enable Code
                  LD
                                 (SYSCR3),0x00
                                                             ; Set RAREA and RVCTR to "0"
                  ΙD
                                 (SYSCR4),0xD4
                                                              ; Enable Code
                  J
                                XXXX
; #### Program to be executed in RAM ####
sRAMprogStart:
; Interrupt subroutine
sINTWDT:
sINTSWI:
                  LD
                                 IX,0xF000
                  LD
                                A,(IX)
                  CMP
                                A,(IX)
                  J
                                NZ,sINTWDT
                                                             ; Loop until the read values become the same
                  LD
                                (SYSCR2),0x10
                                                             : Generate system clock reset
                  RETN
                  NOP
```

Note 1: Make sure that you set the C register to "0x00".

Note 2: Do not allocate the above program to 0x1000 through 0x17FF in the code area in the flash memory. If this area is set to BAREA="1", it changes from the flash memory area to the BOOTROM area so that the program will not function properly and the microcontroller may malfunction.

Note 3: It is not necessary to add DI instruction for above example program, because the support program include it. However, the support program does not include EI instruction. Therefore, if interrupt process is used, enable IMF after finishing all above process.

2019/08/01 Page 306

sRAMprogEnd:



20.5.2.4 How to read data from flash memory

To read data from flash memory, execute transfer instruction for memory. It is possible to read the corresponding individual data (include data of code area) to each address in flash memory, if FLSCR1<FAREA> and FLSCR2<CR1EN> is selected properly.

Example: Case in which data is read from 0xF000 in the code area and stored at 0x98 in RAM

LD	(FLSCR1),0xA8	; Select AREA C1
LD	(FLSCR2),0xD5	; Reflect the FLSCR1 setting
LD	A,(0xF000)	; Read data from 0xF000
LD	(0x98),A	; Store data at 0x98
LD	(FLSCR1),0x40	; Select AREA D0
LD	(FLSCR2),0xD5	; Reflect the FLSCR1 setting

Page 307 2019/08/01

20. Flash Memory

20.5 Access to the Flash Memory Area

TMP89FS62VUG



20.6 API (Application Programming Interface)

The BOOTROM has a support program (API) which contains a special subroutine for erasing or writing on the flash memory. After mapping of the BOOTROM, it allows easy erasing or writing on the flash memory by only calling the subroutine in BOOTROM. The Table 20-5 shows the list of API.

Table 20-5 List of API

	Contents	Using Stack (Note2)	Working Register (Note1)	Argument		Return value		
Address				Register	Setting Value	Register		Contents
	Writing the data to specified address of one byte.		WA	WA	Specify the address to be written.	-	-	-
0x1010 (.BTWrite)	7	7bytes	ВС	С	0x00			
		rbytes	DE IX	E	Specify the data to be written.			
				(SP-)	0xD5 (Enable Code)			
0x1012 (.BTEraseSec)	Erasing the specified one sector.	4bytes	WA BC	А	Specify the sector to be erased.		-	-
			DE IX	С	0xD5 (Enable Code)			
	Executing the Chip		WA	А	0xD5 (Enable Code)	-	-	-
0x1014 (.BTEraseChip)	Erase.	6bytes	BC DE IX	E C 0x00				
0::1016	Getting the status of Security Program.		WA BC	А	0xD5 (Enable Code)	А	0xFF	Security Program disabled.
0x1016 (.BTGetRP)		6bytes	DE IX	С	0x00		Other than 0xFF	Security Program enabled.
	Setting the Security Pro-		WA	Α	0xD5 (Enable Code)	-	-	-
0x1018 (.BTSetRP)	gram.	6bytes	BC DE IX	С	0x00			
0x101E (.BTCalcUART)	for HADT (Donal note)	ie)	WA BC	WA	Captured value by timer counter	W	Setting	value for RTSEL
,			DE IX IY	С	The number of bit for calculation.	A	Setting	value for UARTDR

- Note 1: Because working registers (general-purpose registers) are rewritten in the support program, the contents of general-purpose registers should be saved before calling the support program.
- Note 2: While the support program is executed, a maximum 7 bytes are used as stack which doesn't include the stack used by interrupts. Therefore, be sure to reserve a stack area beforehand.
- Note 3: Each API works properly without the setting Enable Code (0xD5) as argument. However, it is recommended to set the Enable Code (0xD5) to keep compatibility in the family products.

20.6.1 .BTWrite

Data in E register is written into the address specified by WA register. C register should be written 0x00 and (SP-) should be written Enable Code (0xD5) before calling the subroutine.

20.6.2 .BTEraseSec

The sector specified by A register is erased. C register should be written Enable Code (0xD5) before calling the subroutine. Table 20-6 shows the sector erased by this API.

A register Erased area 0x01 0x1000 through 0x1FFF 0x02 0x2000 through 0x2FFF 0x03 0x3000 through 0x3FFF 0x04 0x4000 through 0x4FFF 0x05 0x5000 through 0x5FFF 0x06 0x6000 through 0x6FFF 0x07 0x7000 through 0x7FFF 0x08 0x8000 through 0x8FFF 0x09 0x9000 through 0x9FFF 0x0A 0xA000 through 0xAFFF 0x0B 0xB000 through 0xBFFF 0x0C 0xC000 through 0xCFFF 0x0D 0xD000 through 0xDFFF 0x0E 0xE000 through 0xEFFF 0x0F 0xF000 through 0xFFFF Others Reserved

Table 20-6 Erased Sector by setting of A register

Note: Reserved: Do not set the reserved data into A register. Unexpected sector might be erased by the reserved data setting.

20.6.3 .BTEraseChip

All flash memory area is erased. C register should be written 0x00 and A register should be written Enable Code (0xD5) before calling the subroutine.

20.6.4 .BTGetRP

The security status of flash memory can be read out. C register should be written 0x00 and A register should be written Enable Code (0xD5) before calling the subroutine.

After completion of the execution, API returns A register with the contents of 0xFF7F (security status) in Product ID as return value.

20.6.5 .BTSetRP

The setting of security program can be executed by this API. C register should be written 0x00 and A register should be written Enable Code (0xD5) before calling the subroutine.

20.6.6 .BTCalcUART

This API calculates the proper setting for baud rate of UART from the value of C and WA register. Generally, 8 bits data (0x80) of UART is captured by 16-bit timer counter which is set to pulse width measurement mode. In this case, the timer counter input pin should be assigned to RXD pin. And stores the captured value in WA register. Be sure to select fcgck/2 as the source clock for 16-bit timer counter and capture the length of 8 bits. C register should be written 0x08.

RXD pin can be used as TCA pin. To capture the value, please select the pin as TCA pin by SER-SEL<TCA0SEL> temporarily. After capturing, be sure to resume the pin to RXD pin.

The possible value for WA register as argument is from 0x0020 to 0x3BFF. In the return value of W register, bits 5, 4 and 3 are suitable value for UARTCR2<RTSEL> and the return value of A register is a suitable data for UARTDR. The API sets bits 7, 6, 2, 1 and 0 to "0" as return value. Therefore, set the proper value for UARTCR2<RXDNC, STOPBR>. If the contents of WA register is out of the area 0x0020 to 0x3BFF, the API returns WA register with 0xFFFF as return value.

Note 1: If the captured value of WA register is little even though the value is within 0x0020 to 0x3BFF, the proper setting may not be gotten.

The following procedure shows example how to calculate the baud rate for UART in MCU mode by using support program.

- 1. By serial interface selection control register SERSEL<TCA0SEL>, assign TCA pin to RXD pin.
- 2. Set 16-bit timer counter to pulse width measurement mode. And set falling edge/L level as an external trigger and select fcgck/2 as the source clock.
- 3. Receive data 0x80 via RXD pin for adjusting UARTCR2<RTSEL> and UARTDR and capture it by 16-bit timer counter. In this case, enabling of UART is no need.
- 4. Write the captured value into WA register. Because general-purpose registers (DE, BC, IX, IY) are rewritten in the support program, the contents of these registers should be saved before calling the support program.
- 5. Set the interrupt master enable flag to "disable (DI)" (IMF \leftarrow "0").
- 6. Set "0xD5" on FLSCR2<CR1EN> after setting FLSCR1<BAREA> to "1".
- 7. Set "0x08" to C register as the number of bit.
- 8. Call address (0x101E).
- 9. Set bits 5 to 3 of W register into UARTCR2<RTSEL> and set the contents of A register to UARTDR. If the value of WA register is 0xFFFF which indicates an error of calculation, retry the execution from receiving data 0x80 for adjusting UARTCR2<RTSEL> and UARTDR.
- 10. Set "0xD5" to FLSCR2<CR1EN> after setting FLSCR1<BAREA> to "0".
- Note 1: If general-purpose registers (WA, BC, DE, IX, IY) are used in non-maskable interrupt subroutine, occurring of non-maskable interrupt may cause unexpected result.
- Note 2: With success of calculation, this API returns "0" into bits 7, 6, 2, 1 and 0 as return value. Therefore, set proper value for these bits to set UART0CR2<RXDNC> and UART0CR2<STOPBR>.

Example: Captures the low width of 8 bit value via RXD0 pin by 16-bit timer counter (TCA0) which is set to the pulse width measurement mode. And calculates baud rate for UART from the captured value.

.BTCalcUART equ 0x101E ; Calculating the setting for UART (Baud rate) CalcUART section code abs = 0xF000 ; #### Assign TCA0 input to RXD0 pin #### LD (SERSEL),0x40 ; Assign TCA0 pin to RXD0 pin ; #### Receive data (0x80) from a master device #### (TA0MOD),0x5E ; Set the pulse width measurement mode and select falling ; edge/L level for external trigger ; Select fcgck/2 as the source clock sTimerStart: LD (TA0CR),0x01 ; Timer start Receives data (0x80) via TCA0 pin LD WA,(TA0DRL) ; Write the captured data into WA register LD (TA0CR), 0x00 ; Timer stop DI ; #### Allocate BOOTROM to the data/code area #### LD (FLSCR1),0x50 ; Set BAREA to "1" LD (FLSCR2),0xD5 ; Reflect the FLSCR1 setting ; #### Calculation for UART setting (API) #### LD C,0x08 ; The number of bit length (8 bit) CALL (.BTCalcUART) ; Calculate UART setting CMP W, 0xFF Z, sTimerStart ; Return to sTimerStart if W register equals 0xFF ; #### Setting the calculated result to UART registers #### LD (UARTCR2),W ; Set RTSEL LD (UARTDR), A ; Set UARTDR ; #### End process #### LD (FLSCR1),0x40 ; Set BAREA to "0" LD (FLSCR2),0xD5 ; Reflect the FLSCR1 setting

21. Serial PROM Mode

21.1 Outline

The TMP89FS62V has a 4K-byte BOOTROM (Mask ROM) for programming to flash memory. BOOTROM is available in serial PROM mode. The serial PROM mode is controlled by RXD0/SI0 pins, TXD0/SO0 pins, MODE pin, and RESET pin. In serial PROM mode, communication is performed via the UART.

Table 21-1 Operating Range in Serial PROM Mode

Parameter	Min	Max	Unit
Power supply voltage	4.5	5.5	٧
High frequency	1	10	MHz

21.2 Security

In serial PROM mode, two security functions are provided to prevent illegal memory access attempts by a third party: password and security program functions. For more security-related information, refer to "21.12 Security".

21.3 Serial PROM Mode Setting

21.3.1 Serial PROM mode control pins

To execute on-board programming, activate the serial PROM mode. Table 21-2 shows the pin setting used to activate the serial PROM mode.

Table 21-2 Serial PROM Mode Setting

Pin	Setting
RXD0 / SI0 / P21 pin	H level
TXD0 / SO0 / P20 pin	H level
MODE, RESET pin	

Note:Before you activate the serial PROM mode, you must set the RXD0/SI0/P21 and TXD0/SO0/P20 pins to high (H) level by using a pull-up resistor.

Table 21-3 Pin Functions in Serial PROM Mode

Pin name (in serial PROM mode)	Input/out- put	Function Pin name		Pin name (in MCU mode)	
TXD0	Output	Serial PROM mode control/serial data output TXD0 / S00 / P20			
RXD0	Input	Serial PROM mode control/serial data input	(See note 1)	RXD0 / SI0 / P21	
RESET	Input	Serial PROM mode control	(See flote 1)	RESET	
MODE	Input	Serial PROM mode control		MODE	
VDD	Power supply	4.5 V to 5.5 V			
VAREF / AVDD	Power supply	Connect to VDD.			
vss	Power supply	0 V			
AVSS	Power supply	Connect to VSS.	Connect to VSS.		
Input/output port other than RXD0 and TXD0	Input/ output	These ports are in the high-impedance state in the serial PROM mode. The port input is physically fixed to a specified input level in order to prevent a penetration current (the port input is disabled).			
XIN	Input	Connect a reconstant to make these pine self-appillate			
XOUT	Output	Connect a resonator to make these pins self-oscillate.			

Note 1: If other parts are mounted on a user board, they may interfere with data being communicated through these communication pins during on-board programming. It is recommended that these parts be somehow isolated to prevent the pins from being affected.



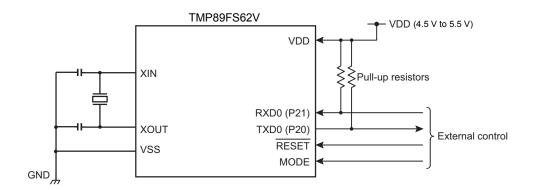


Figure 21-1 Serial PROM Mode Pin Setting

Note 1: In the case of access using the UART, the control of the SCLK0 pin is unnecessary.

Note 2: For information on other pin settings, refer to "Table 21-3 Pin Functions in Serial PROM Mode".

Page 315 2019/08/01

Example Connection for On-board Writing 21.4

Figure 21-2 shows example connections to perform on-board writing.

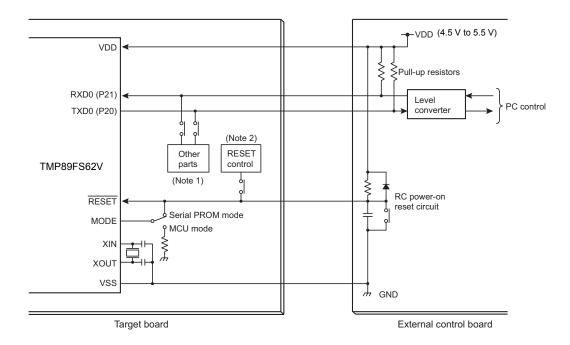


Figure 21-2 Example Connections for On-board Writing

- Note 1: If other parts on a target board interfere with the UART communication in serial PROM mode, disconnect these pins by using a jumper or switch.
- Note 2: If the reset control circuit on a target board interferes with the startup of serial PROM mode, disconnect the circuit by using a jumper, etc.
- Note 3: For information on other pin settings, refer to "Table 21-3 Pin Functions in Serial PROM Mode".

21.5 Activating the Serial PROM Mode

Activate the serial PROM mode by performing the following procedure. For information on the detailed timing, refer to "21.14.1 Reset timing".

- 1. Supply power to the VDD pin.
- 2. Set the \overline{RESET} and MODE pins to low.
- 3. Set the RXD0/SI0/P21 and TXD0/SO0/P20 pins to high.
- 4. Wait until the power supply and clock oscillation stabilize.
- 5. Set the \overline{RESET} and MODE pins from low to high.
- 6. Input the matching data 0x86 to the RXD0/SI0/P21 pins after the setup period has elapsed.

Page 317 2019/08/01

21.6 Interface Specifications

The serial PROM mode supports the UART mode as a communication method.

To execute an on-board program, the communication format of the external controller (personal computer, microcontroller, etc.) must be set as described below.

21.6.1 UART communication

- Baud rate: 9600 to 128000 bps (automatic detection)

- Data length: 8 bits (LSB first)

Parity bit: NoneSTOP bit: 1 bit

If the TMP89FS62V receives serial data "0x86" after a reset, it starts the UART communication. It also meas-ures the pulse width of the received data (0x86), and automatically establishes the reference baud rate. In all sub-sequent data communication transactions, this reference baud rate is used. For information on the communication timings of each operation command, refer to "21.14 AC Characteristics (UART)".

Usable baud rates differ depending on the operating frequency and are shown in Table 21-4. However, there is the possibility of data communication not working properly, even if a baud rate shown in Table 21-4 is used, because data communication is affected by frequency errors of a resonator of the external controller (personal computer, etc.), the load capacity of a communication pin, and various other factors.



Table 21-4 Usable Baud Rates as a General Guideline

	9600 bps	19200 bps	38400 bps	57600bps	115200 bps	128000 bps
10 MHz	0	0	0	0	0	0
8 MHz	0	0	0	0	0	0
7.3728 MHz	0	0	0	0	0	-
6.144 MHz	0	0	0	-	-	0
6 MHz	0	0	0	0	0	0
5 MHz	0	0	0	-	-	-
4.9152 MHz	0	0	0	0	-	-
4.19 MHz	0	0	0	-	-	0
4 MHz	0	0	0	0	0	0
2 MHz	0	0	0	0	-	-
1 MHz	0	0	-	0	-	-

Note 1: "O" means a usable baud rate. "-" means an unusable baud rate.

Page 319 2019/08/01

11.7 Memory Mapping
TMP89FS62VUG

21.7 Memory Mapping

Figure 21-3 shows memory maps in serial PROM and MCU modes.

In serial PROM mode, the BOOTROM (mask ROM) is mapped to the 0x1000 through 0x17FF in the data area and 0x1000 through 0x1FFF in the code area respectively.

When the command to write data to flash memory (hereafter called the 0x30 command) or the command to erase data from flash memory (hereafter called the 0xF0 command) is executed, BOOTROM automatically converts addresses. Therefore, as the address of flash memory, specify an address equivalent to that specified in MCU mode (if FLSCR1<BAREA>="0"), namely, 0x1000 through 0xFFFF.

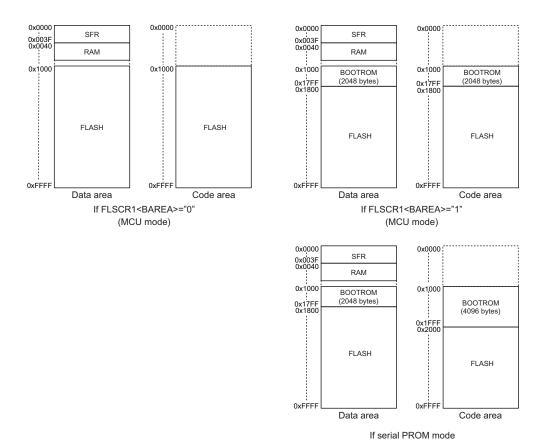


Figure 21-3 Memory Mapping

21.8 Operation Commands

In serial PROM mode, the commands shown in Table 21-5 are used. After a reset is released, the TMP89FS62V goes into a standby state and awaits the arrival of matching data 1 (0x86).



Table 21-5	Operation	Command in	Serial	PROM Mode
1 4016 21-3	Operation	Command in	Seliai	FROM Mode

Command data	Operation command	Description
0x86, 0x79	Setup (matching data 1, 2)	After a reset is released, the serial PROM mode always starts operation with this command.
0xF0	Flash memory erase	Data in the flash memory area (address 0x1000 through 0xFFFF) can be erased.
0x30	Flash memory write	Data can be written to the flash memory area (address 0x1000 through 0xFFFF).
0x40	Flash memory read	Data can be read from the flash memory area (address 0x1000 through 0xFFFF).
0x90	Flash memory SUM output	0xFF check data and 2-byte checksums of the entire flash memory area (address 0x1000 through 0xFFFF) are output in descending order (from upper to lower bytes).
0xC0	Product ID code output	Product ID codes are output.
0xC3	Flash memory status output	The security program status and other status codes are output.
0xD0	Mask ROM emulation setting	Flash products of 124K or 96Kbytes can be provisioned to emulate a small-capacity mask ROM product.
0xFA	Flash memory security setting	The security program setting is enabled.

Each command is outlined below. For detailed information on how each command works, refer to 21.8.1 and subsequent sections.

1. Flash memory erase command

Either Chip Erase (total erase of flash memory) or Sector Erase (erase of flash memory in 4K-byte units) can be used to erase the data in flash memory. Data in the erased area is 0xFF. If the security program is enabled or if the option code EPFC_OP is 0xFF, the flash erase command of Sector Erase cannot be executed.

To disable the security program setting, execute the flash erase command of Chip Erase. Before erasing the data in flash memory, the TMP89FS62V performs password authentication except where a product is a blank product or EPFC_OP is 0xFF. If a password is not authenticated, the flash memory erase command is not executed.

2. Flash memory write command

Data can be written in single-byte units to a specified address in flash memory. Provision the external controller so that it transmits data to write as binary data in the Intel Hex format. If errors do not occur until the end record is reached, the TMP89FS62V calculates checksums in the entire flash memory area (0x1000 through 0xFFFF), and returns the calculation results. If the security program is enabled, the flash memory write command cannot be executed. In this case, execute Chip Erase beforehand by using the flash memory erase command. Before executing the flash memory write command, the TMP89FS62V performs password authentication except where a product is a blank product. If a password is not authenticated, the flash memory write command is not executed.

3. Flash memory read command

Data can be read from a specified address in flash memory in single-byte units. Provision the external controller so that it transmits the address in memory where a read starts, as well as the number of bytes. After outputting the number of data equal to the number of bytes, the TMP89FS62V calculates the checksums of the output data, and returns the calculation results. If the security program is enabled, the flash memory read command cannot be executed. In this case, execute Chip Erase beforehand by using the flash memory erase command. Before executing the flash memory read command, the TMP89FS62V performs password authentication except where a product is blank. If a password is not authenticated, the flash memory read command is not executed.

Page 321 2019/08/01

21.8 Operation Commands

4. Flash memory SUM output command

Checksums in the entire flash memory area (0x1000 through 0xFFFF) are calculated, and the calculation results are returned.

5. Product ID code output command

This is a code output used to identify a product. The output code consists of information on the ROM area and on the RAM area respectively. The external controller reads this code to identify the product to which data is to be written.

6. Flash memory status output command

The status of 0xFFE0 through 0xFFFF and that of the security program are output. The external controller reads this code to identify the status of flash memory.

7. Mask ROM emulation setting command

This command is nonfunctional in the TMP89FS62V. It becomes functional if used for a product with flash memory of more than 96Kbytes.

8. Flash memory security setting command

This command is used to prohibit the reading or writing of data in flash memory in parallel mode. In serial PROM mode, the flash memory write command is prohibited. To disa-ble the flash memory security program, execute Chip Erase by using the flash memory erase command.



21.8.1 Flash memory erase command (0xF0)

Table 21-6 shows the flash memory erase commands.

Table 21-6 Flash Memory Erase Commands

	Transfer byte	Transfer data from the external controller to TMP89FS62V	Baud rate	Transfer data from TMP89FS62V to the external controller
	1st byte 2nd byte	Matching data 1 (0x86)	Automatic adjustment Baud rate after adjustment	- (Automatic baud rate adjustment) OK: Echo back data (0x86) Error: No data transmitted
	3rd byte 4th byte	Matching data 2 (0x79)	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back data (0x79) Error: No data transmitted
	5th byte 6th byte	Operation command data (0xF0) -	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back data (0xF0) Error: 0xA1 × 3, 0xA3 × 3, 0x63 × 3 (note 1)
	7th byte 8th byte	Password count storage address bit 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	9th byte 10th byte	Password count storage address bit 15 to 08	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
BOOT	11th byte 12th byte	Password count storage address bit 07 to 00	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
ROM	13th byte 14th byte	Password comparison start address bit 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	15th byte 16th byte	Password comparison start address bit 15 to 08	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	17th byte 18th byte	Password comparison start address bit 07 to 00	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	19th byte	Password string (note 3)	Baud rate after adjustment	-
	m-th byte	-	Baud rate after adjustment	OK: No data transmitted Error: No data transmitted
	n-th - 2 byte	Erase area specification	Baud rate after adjustment	-
	n-th - 1 byte	-	Baud rate after adjustment	OK: Checksum (high) (note 3) Error: No data transmitted
	n-th byte	-	Baud rate after adjustment	OK: Checksum (low) (note 3) Error: No data transmitted
	n-th + 1 byte	(Wait for the next operation command data)	Baud rate after adjustment	-

- Note 1: " $0x^{**} \times 3$ " means that the device goes into an idle state after transmitting 3 bytes of $0x^{**}$. For further information, refer to Table 21-17.
- Note 2: For information on the erase area specification, refer to "21.8.1.1 Specifying the erase area". For information on checksums, refer to "21.10 Checksum (SUM)". For information on passwords, refer to "21.12.1 Passwords".
- Note 3: Do not transmit a password string if 0xFFFA of a flash memory is 0xFF, or blank product. (However, the password count storage address and the password comparison start address must be transmitted.)
- Note 4: If a value less than 0x20 is transmitted at the n-th 2 byte (execution of Sector Erase) and if 0xFFFA of flash memory is 0xFF, the TMP89FS62V goes into an idle state.
- Note 5: When a password error occurs, the TMP89FS62V stops communication and goes into an idle state. Therefore, when a password error occurs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.
- Note 6: If a communication error occurs during the transfer of a password address or a password string, the TMP89FS62V stops communication and goes into an idle state. Therefore, when a password error occurs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.

Page 323 2019/08/01

21.8 Operation Commands

21.8.1.1 Specifying the erase area

The flash memory erase command is used to specify an area in flash memory to be erased at n-th-2 byte; specifically, ERASEC is used to specify the address of an area to be erased.

If data of less than 0x20 is specified, Sector Erase (erasing flash memory in 4K-byte units) is executed. Executing Sector Erase with 0xFFFA memory set to "0xFF" or with the security program enabled will cause the device to go into an infinite loop state.

If data of more than 0x20 is specified, Chip Erase (total erasure of flash memory) is executed, and the security program in flash memory is disabled. Therefore, to disable the security program in flash memory, execute Chip Erase, not Sector Erase.



Erase area specification data (data at n-th-2 bytes)

	7	6	5	4	3	2	1	0
ERASEC								

0x00 Reserved		T		
0x02			0x00	Reserved
0x03			0x01	0x1000 - 0x1FFF
0x04			0x02	0x2000 - 0x2FFF
0x05			0x03	0x3000 - 0x3FFF
0x06			0x04	0x4000 - 0x4FFF
0x07			0x05	0x5000 - 0x5FFF
0x08			0x06	0x6000 - 0x6FFF
0x09			0x07	0x7000 - 0x7FFF
0x0A			0x08	0x8000 - 0x8FFF
0x0B			0x09	0x9000 - 0x9FFF
0x0C			0x0A	0xA000 - 0xAFFF
0x0D 0xD000 - 0xDFFF 0x0E 0xE000 - 0xEFFF 0x0F 0xF000 - 0xFFFF 0x0F 0xF000 - 0xFFFF 0x10 Reserved 0x11 Reserved 0x11 Reserved 0x12 Reserved 0x13 Reserved 0x14 Reserved 0x15 Reserved 0x16 Reserved 0x17 Reserved 0x17 Reserved 0x18 Reserved 0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1A Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved			0x0B	0xB000 - 0xBFFF
ERASEC Erase area start address Erase area start address 0x0E 0xE000 - 0xEFFF 0x0F 0xF000 - 0xFFFF Erase area start address 0x10 Reserved 0x11 Reserved 0x12 Reserved 0x13 Reserved 0x14 Reserved 0x15 Reserved 0x16 Reserved 0x17 Reserved 0x17 Reserved 0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1A Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved			0x0C	0xC000 - 0xCFFF
ERASEC Erase area start address 0x0F			0x0D	0xD000 - 0xDFFF
ERASEC Erase area start address 0x10 Reserved 0x11 Reserved 0x12 Reserved 0x13 Reserved 0x14 Reserved 0x15 Reserved 0x15 Reserved 0x16 Reserved 0x17 Reserved 0x18 Reserved 0x18 Reserved 0x1A Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved 0x1F Reserved			0x0E	0xE000 - 0xEFFF
0x11 Reserved 0x12 Reserved 0x13 Reserved 0x14 Reserved 0x15 Reserved 0x16 Reserved 0x17 Reserved 0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x0F	0xF000 - 0xFFFF
0x12 Reserved 0x13 Reserved 0x14 Reserved 0x15 Reserved 0x16 Reserved 0x17 Reserved 0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1A Reserved 0x1B Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved	ERASEC	Erase area start address	0x10	Reserved
0x13 Reserved 0x14 Reserved 0x15 Reserved 0x16 Reserved 0x17 Reserved 0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x11	Reserved
0x14 Reserved 0x15 Reserved 0x16 Reserved 0x17 Reserved 0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x12	Reserved
0x15 Reserved 0x16 Reserved 0x17 Reserved 0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x13	Reserved
0x16 Reserved 0x17 Reserved 0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x14	Reserved
0x17 Reserved 0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x15	Reserved
0x18 Reserved 0x19 Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x16	Reserved
0x19 Reserved 0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x17	Reserved
0x1A Reserved 0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x18	Reserved
0x1B Reserved 0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x19	Reserved
0x1C Reserved 0x1D Reserved 0x1E Reserved 0x1F Reserved			0x1A	Reserved
0x1D Reserved 0x1E Reserved 0x1F Reserved			0x1B	Reserved
0x1E Reserved 0x1F Reserved			0x1C	Reserved
0x1F Reserved			0x1D	Reserved
			0x1E	Reserved
0x20 or more Chip Erase (erasure of the entire area)			0x1F	Reserved
· · · · · · · · · · · · · · · · · · ·			0x20 or more	Chip Erase (erasure of the entire area)

Note 1: If Sector Erase is performed on an area where flash memory does not exist, the TMP89FS62V stops communication, and goes into an idle state.

Note 2: If Reserved data is transmitted, the TMP89FS62V stops communication, and goes into an idle state.

Page 325 2019/08/01

21.8.2 Flash memory write command (operation command: 0x30)

Table 21-7 shows the transfer formats of flash memory write commands.

Table 21-7 Transfer Formats of Flash Memory Write Commands

	Transfer byte	Transfer data from the external controller to TMP89FS62V	Baud rate	Transfer data from TMP89FS62V to the external controller
	1st byte 2nd byte	Matching data 1 (0x86) -	Automatic adjustment Baud rate after adjustment	- (Automatic baud rate adjustment) OK: Echo back data (0x86) Error: No data transmitted
	3rd byte 4th byte	Matching data 2 (0x79)	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back data (0x79) Error: No data transmitted
	5th byte 6th byte	Operation command data (0x30) -	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back data (0x30) Error: 0xA1 × 3, 0xA3 × 3, 0x63 × 3 (note 1)
	7th byte 8th byte	Password count storage address 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	9th byte 10th byte	Password count storage address 15 to 08	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	11th byte 12th byte	Password count storage address 07 to 00	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
BOOT ROM	13th byte 14th byte	Password comparison start address 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	15th byte 16th byte	Password comparison start address 15 to 08	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	17th byte 18th byte	Password comparison start address 07 to 00	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	19th byte	Password string (note 3)	Baud rate after adjustment	-
	m-th byte	-	Baud rate after adjustment	OK: No data transmitted Error: No data transmitted
	m-th+1 byte : n-th-3 byte	Intel Hex format (binary)	Baud rate after adjustment	
	n-th-2 byte	-	Baud rate after adjustment	OK: 0x55 Overwrite detect: 0xAA
	n-th-1 byte	-	Baud rate after adjustment	OK: Checksum (high) (note 3) Error: No data transmitted
	n-th byte	-	Baud rate after adjustment	OK: Checksum (low) (note 3) Error: No data transmitted
	n-th+1 byte	(Wait for the next operation command data)	Baud rate after adjustment	-

Note 1: $"0x^{**} \times 3"$ means that the device goes into an idle state after transmitting 3 bytes of $0x^{**}$. For further information, refer to Table 21-17.

Note 2: For information on the Intel Hex format, refer to "21.11 Intel Hex Format (Binary)". For information on checksums, refer to "21.10 Checksum (SUM)". For information on passwords, refer to "21.12.1 Passwords".

Note 3: If the area 0xFFE0 through 0xFFFF is all 0xFF, password authentication is not performed and, therefore, the password string need not be transmitted. The password count storage address and password comparison start address,



- however, must be specified, even for a blank product. If the password count storage address and/or password compar-ison start address is/are incorrect, a password error occurs, the TMP89FS62V stops communication, and it goes into an idle state. Therefore, if a password error occurs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.
- Note 4: If the security program is enabled in flash memory or if a password error occurs, the TMP89FS62V stops communication, and goes into an idle state. Therefore, if a password error occurs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.
- Note 5: If a communication error occurs during the transfer of a password address or a password string, the TMP89FS62V stops communication and goes into an idle state. Therefore, when a password error occurs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.
- Note 6: If all data in flash memory are the same data, make sure that you never write data to the address 0xFFE0 through 0xFFFF. If data is written to this address, a password error occurs, and the subsequent operations cannot be performed.
- Note 7: The n-th-2 byte is a flag for detecting an overwrite. If memory contents at an address where data is to be written are other than 0xFF, the n-th-2 byte is 0xAA (data is not written to this address, and the data write routine is skipped). The checksum at the n-th-1 byte or n-th byte is calculated based on data in which data in memory areas where data was not written are included. Therefore, if an overwrite is detected, the checksum of transmitted data does not match that at the n-th-1 byte or n-th byte.

Page 327 2019/08/01

21.8 Operation Commands

21.8.3 Flash memory read command (operation command: 0x40)

Table 21-8 and Table 21-9 show the transfer formats of the flash memory read command.

Table 21-8 Transfer Formats of the Flash Memory Read Command

	Transfer byte	Transfer data from the external controller to TMP89FS62V	Baud rate	Transfer data from TMP89FS62V to the ex-ternal controller
	1st byte 2nd byte	Matching data 1 (0x86)	Automatic adjustment Baud rate after adjustment	- (Automatic baud rate adjustment) OK: Echo back data (0x86) Error: No data transmitted
	3rd byte 4th byte	Matching data 2 (0x79)	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back data (0x79) Error: No data transmitted
	5th byte 6th byte	Operation command data (0x40)	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back data (0x40) Error: 0xA1 × 3, 0xA3 × 3, 0x63 × 3 (note 1)
	7th byte 8th byte	Password count storage address 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	9th byte 10th byte	Password count storage address 15 to 08	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	11th byte 12th byte	Password count storage address 07 to 00	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	13th byte 14th byte	Password comparison start address 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
BOOT ROM	15th byte 16th byte	Password comparison start address 15 to 08	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	17th byte 18th byte	Password comparison start address 07 to 00	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	19th byte	Password string (note 3)	Baud rate after adjustment	-
	m-th byte	-	Baud rate after adjustment	OK: No data transmitted Error: No data transmitted
	m-th + 1 byte m-th + 2 byte	Read start address 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	m-th + 3 byte m-th + 4 byte	Read start address 15 to 08	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	m-th + 5 byte m-th + 6 byte	Read start address 07 to 00	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	m-th + 7 byte m-th + 8 byte	Number of bytes to read 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	m-th + 9 byte m-th + 10 byte	Number of bytes to read 15 to 08	Baud rate after adjustment Baud rate after adjustment	OK: No data transmitted Error: No data transmitted



Table 21 0	Transfer Formats	of the Flach	Mamory Paad	Command
1 4 5 6 6 7 1 - 3	Hansici i Ulliais	ULLIE LIASH	INICITIOTA LICAN	Communant

	Transfer byte	Transfer data from the external controller to TMP89FS62V	Baud rate	Transfer data from TMP89FS62V to the ex-ternal controller
	m-th + 11 byte m-th + 12 byte	Number of bytes to read 07 to 00	Baud rate after adjustment Baud rate after adjustment	
воот	m-th + 13 byte : n-th - 2 byte		Baud rate after adjustment Baud rate after adjustment	,
ROM	n-th - 1 byte	-	Baud rate after adjustment	OK: Checksum (high) (note 3) Error: No data transmitted
	n-th byte	-	Baud rate after adjustment	OK: Checksum (low) (note 3) Error: No data transmitted
	n-th + 1 byte	(Wait for the next operation command data)	Baud rate after adjustment	-

- Note 1: "0x** × 3" means that the device goes into an idle state after transmitting 3 bytes of 0x**. For further information, refer to Table 21-17.
- Note 2: For information on checksums, refer to "21.10 Checksum (SUM)". For information on passwords, refer to "21.12.1 Passwords".
- Note 3: If the area 0xFFE0 through 0xFFFF is all 0xFF, password authentication is not performed and, therefore, the password string need not be transmitted. The password count storage address and password comparison start address, however, must be specified, even for a blank product. If the password count storage address and/or password compar-ison start address are/is incorrect, a password error occurs; the TMP89FS62V stops communication and goes into an idle state. Therefore, if a password error occurs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.
- Note 4: If the security program is enabled in flash memory or if a password error occurs, the TMP89FS62V stops communication, and goes into an idle state. Therefore, if a password error occurs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.
- Note 5: If a communication error occurs during the transfer of a password address or a password string, the TMP89FS62V stops communication and goes into an idle state. Therefore, when a password error occurs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.
- Note 6: If the number of bytes received at the m-th + 7 byte, m-th + 9 byte or m-th + 11 byte is more than 0x000000 or the size of internal memory, the TMP89FS62V stops communication and goes into an idle state.

Page 329 2019/08/01

21.8 Operation Commands
TMP89FS62VUG

21.8.4 RAM loader command

TMP89FS62V cannot support the RAM loader command in the serial PROM mode.



21.8.5 Flash memory SUM output command (operation command: 0x90)

Table 21-10 shows the transfer formats of the flash memory SUM output command.

Table 21-10 Transfer Formats of the Flash Memory SUM Output Command

	Transfer byte	Transfer data from the external controller to TMP89FS62V	Baud rate	Transfer data from TMP89FS62V to the external controller
	1st byte 2nd byte	Matching data 1 (0x86)	Automatic adjustment Baud rate after adjustment	- (Automatic baud rate adjustment) OK: Echo back data (0x86) Error: No data transmitted
	3rd byte 4th byte	Matching data 2 (0x79)	Baud rate after adjustment Baud rate after adjustment	
BOOT ROM	5th byte 6th byte	Operation command data (0x90)	Baud rate after adjustment Baud rate after adjustment	
	7th byte	-	Baud rate after adjustment	0x55 : - 0xAA: All data are 0xFF. (note 3)
	8th byte	-	Baud rate after adjustment	OK: Checksum (high) (note 2) Error: No data transmitted
	9th byte	-	Baud rate after adjustment	OK: Checksum (low) (note 2) Error: No data transmitted
	10th byte	(Wait for the next operation command data)	Baud rate after adjustment	-

Note 1: " $0x^{**} \times 3$ " means that the device goes into an idle state after transmitting 3 bytes of $0x^{**}$. For further information, refer to Table 21-17.

Note 2: For information on checksums, refer to "21.10 Checksum (SUM)".

Note 3: If data to be included in the checksum are all 0xFF, the 7th byte becomes 0xAA. If any one piece of data to be included in the checksum is other than 0xFF, the 7th byte becomes 0x55.

21. Serial PROM Mode

21.8 Operation Commands
TMP89FS62VUG



21.8.6 Product ID code output command (operation command: 0xC0)

Table 21-12 shows the transfer formats of the product ID code output command.

Table 21-12 Transfer Formats of the Product ID Code Output Command

	Transfer byte	Transfer data from the external controller to TMP89FS62V	Baud rate	Tran	sfer data from TMP89FS62V to the exter-nal controller
	1st byte 2nd byte	Matching data 1 (0x86)	Automatic adjustment Baud rate after adjustment	OK: Ech	atic baud rate adjustment) o back data (0x86) o data transmitted
	3rd byte 4th byte	Matching data 2 (0x79)	Baud rate after adjustment Baud rate after adjustment		o back data (0x79) o data transmitted
	5th byte 6th byte	Operation command data (0xC0)	Baud rate after adjustment Baud rate after adjustment		o back data (0xC0) A1 × 3, 0xA3 × 3, 0x63 × 3 (note 1)
	7th byte		Baud rate after adjustment	0x3A	Start mark
	8th byte		Baud rate after adjustment	0x13	Number of transfer data (from 9th to 27th bytes)
	9th byte		Baud rate after adjustment	0x03	Length of address (3 bytes)
	10th byte		Baud rate after adjustment	0xFD	Reserved
	11th byte		Baud rate after adjustment	0x00	Reserved
	12th byte		Baud rate after adjustment	0x00	Reserved
	13th byte		Baud rate after adjustment	0x00	Reserved
	14th byte (note 2)			0xF0	ROM size code
BOOT ROM	15th byte		Baud rate after adjustment	0x01	ROM block count (1 block)
	16th byte (note 3)		Baud rate after adjustment	0x00	First address of ROM (upper byte)
	17th byte (note 3)		Baud rate after adjustment	0x10	First address of ROM (middle byte)
	18th byte (note 3)		Baud rate after adjustment	0x00	First address of ROM (lower byte)
	19th byte (note 3)		Baud rate after adjustment	0x00	Last address of ROM (upper byte)
	20th byte (note 3)		Baud rate after adjustment	0xFF	Last address of ROM (middle byte)
	21st byte (note 3)		Baud rate after adjustment	0xFF	Last address of ROM (lower byte)
	22nd byte		Baud rate after adjustment	0x00	Reserved
	23rd byte		Baud rate after adjustment	0x00	Reserved
	24th byte		Baud rate after adjustment	0x60	Reserved
	25th byte		Baud rate after adjustment	0x00	Reserved
	26th byte		Baud rate after adjustment	0x0C	Reserved
	27th byte		Baud rate after adjustment	0x3F	Reserved
	28th byte		Baud rate after adjustment	0xYY	0xYY: Checksum of transfer data (complement of 2 of the sum total from 9th through 27th bytes)
	29th byte	(Wait for the next operation command data)	Baud rate after adjustment		-

Note 1: " $0x^{**} \times 3$ " means that the device goes into an idle state after transmitting 3 bytes of $0x^{**}$. For further information, refer to Table 21-17.

Page 333 2019/08/01

Note 2: The ROM size code at the 14th byte is shown in Table 21-12.

Note 3: 16th through 21st bytes show the range of addresses in flash memory where data can be written.

21.8 Operation Commands

Table 21-12 ROM Size Code (14th Byte)

7	6	5	4	3	2	1	0	_
		ROMSIZE			"0"	"0"	"0"	TMP89FS62V specified value (1111 0000)
							-	
ROMSIZE	Data o	on the flash r	nemory size	e	00010 : 41 00100 : 81 01000 : 10 10000 : 33 11000 : 44 11110 : 60 10001 : 90 11111 : 13	Kbytes 6Kbytes 2Kbytes 8Kbytes 0Kbytes 6Kbytes		Read only



21.8.7 Flash memory status output command (0xC3)

Table 21-13 shows the flash memory status output commands.

Table 21-13 Flash Memory Status Output Commands

	Transfer byte	Transfer data from the external controller to TMP89FS62V	Baud rate	Transfer data fr	rom TMP89FS62V to the exter- nal controller
	1st byte 2nd byte	Matching data 1 (0x86)	Automatic adjustment Baud rate after adjustment	-(Automatic bar OK: Echo back Error: No data	,
	3rd byte 4th byte	Matching data 2 (0x79)	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back Error: No data	` '
	5th byte 6th byte	Operation command data (0xC3) -	Baud rate after adjustment Baud rate after adjustment	OK: Echo back	data (0xC3) 3, 0xA3 × 3, 0x63 × 3 (note 1)
воот	7th byte		Baud rate after adjustment	0x3A	Start mark
ROM	8th byte		Baud rate after adjustment	0x04	Byte count (from 9th through 12th bytes)
	9th byte		Baud rate after adjustment	0x00 to 0x7F	Status code 1 (note 2)
	10th byte		Baud rate after adjustment	0x00	Reserved
	11th byte		Baud rate after adjustment	0x00	Reserved
	12th byte		Baud rate after adjustment	0x00	Reserved
	13th byte		Baud rate after adjustment	Checksum (complement of 2 of the sum total from 9th through 12th bytes)	
	14th byte	(Wait for the next operation command data)	Baud rate after adjustment	-	

Note 1: " $0x^{**} \times 3$ " means that the device goes into an idle state after transmitting 3 bytes of $0x^{**}$. For further information, refer to Table 21-17.

Page 335 2019/08/01

Note 2: For detailed information on the status code 1, refer to "21.8.7.1 Flash memory status code".

21.8 Operation Commands

21.8.7.1 Flash memory status code

The flash memory status code is 7-byte data. It shows the status of the flash memory security program and that of the address from 0xFFE0 to 0xFFFF.

Table 21-14 Flash Memory Status Code

Data	Description	In the case of TMP89FS62V
1st	Start mark	0x3A
2nd	Number of transfer data (4 bytes from 3rd through 6th bytes)	0x04
3rd	Status code1	0x00 through 0x7F (note 1)
4th	Reserved	0x00
5th	Reserved	0x00
6th	Reserved	0x00
7th	Checksum of transfer data (complement of 2 of the sum total of 3rd through 6th bytes)	If 3rd data is 0x00: 0x00 If 3rd data is 0x01: 0xFF If 3rd data is 0x02: 0xFE If 3rd data is 0x03: 0xFD :

Note 1: The indefinite value is read from bits of 6 to 4.

Status code 1

7	6	5	4	3	2	1	0	
				EPFC	DAFC	RPENA	BLANK	Initial value (0*** ****)

EPFC	Password string judgment when the flash memory erase command is executed (status of 0xFFFA)	0: 1:	PCSA only)
DAFC	Security program check of the on- chip debugging function (OCD) (status of 0xFFFB)	0: 1:	7 - 3 - 3 - 3 - 3 - 3 - 3 - 3 - 3 - 3 -
RPENA	Status of the flash memory security program		Status in which the security program is disabled Status in which the security program is enabled
BLANK	Status of 0xFFE0 through 0xFFFF	0: 1:	If data in the area 0xFFE0 through 0xFFFF are all 0xFF If data in the area 0xFFE0 through 0xFFFF are other than 0xFF

Restrictions are placed on the execution of some operation commands, depending on the contents of the status code 1. Detailed information on this is shown in the table below. If the security program is enabled, two commands cannot be executed: the flash memory write command and Sector Erase command. To execute these commands, Chip Erase must be performed on flash memory before they are executed.



		Flash memory write command and flash		Flash memory SUM output command, product		nory erase mand	Flash memory security	
RPENA	BLANK	EPFC	DAFC	memory read command	ID output command, and status output com- mand	Chip erase	Sector erase	setting command
0	0	0	0	0	0	0	×	×
1	0	0	0	×	0	0	×	×
	4	0	*	Pass	0	0	×	Pass
0	1	1	*	Pass	0	Pa	iss	Pass
	4	0	*	×	0	0	×	Pass
1	"	1	*	×	0	Pass	×	Pass

Note: O: A command can be executed.

Pass: A password is required to execute a command.

(After a command is echoed back, the TMP89FS62V stops communication, and goes into an idle state.)

Page 337 2019/08/01

^{×:} A command cannot be executed.

21.8.8 Mask ROM emulation setting command (0xD0)

Table 21-15 shows the mask ROM emulation setting command.

This command is nonfunctional in the TMP89FS62V. It becomes functional if used for a product with flash memory of more than 96Kbytes.

Table 21-15 Command to Change the Mask ROM Emulation Setting

	Number of transfer bytes	Transfer data from the external controller to TMP89FS62V	Baud rate	Transfer data from TMP89FS62V to the external controller
	1st byte 2nd byte	Matching data 1 (0x86)	Automatic adjustment Baud rate after adjustment	-(Automatic baud rate adjustment) OK: Echo back data (0x86) Error: No data transmitted
BOOT ROM	3rd byte 4th byte 5th byte 6th byte	Matching data 2 (0x79) - Operation command data (0xD0) -	Baud rate after adjustment Baud rate after adjustment Baud rate after adjustment Baud rate after adjustment	
	7th byte 8th byte	Set value	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back data (0xD1) Error: No data transmitted
	9th byte	(Wait for the next operation command data)	Baud rate after adjustment	-

Note 1: " $0x^* \times 3$ " means that the device goes into an idle state after transmitting 3 bytes of $0x^*$. For further information, refer to Table 21-17.



21.8.9 Flash memory security setting command (0xFA)

Table 21-16 shows the flash memory security setting command.

Table 21-16 Flash Memory Security Setting Command

	Transfer byte	Transfer data from the external controller to TMP89FS62V	Baud rate	Transfer data from TMP89FS62V to the external controller
	1st byte 2nd byte	Matching data 1 (0x86)	Automatic adjustment Baud rate after adjustment	- (Automatic baud rate adjustment) OK: Echo back data (0x86) Error: No data transmitted
	3rd byte 4th byte	Matching data 2 (0x79) -	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back data (0x79) Error: No data transmitted
	5th byte 6th byte	Operation command data (0xFA) -	Baud rate after adjustment Baud rate after adjustment	- OK: Echo back data (0xFA) Error: 0xA1 × 3, 0xA3 × 3, 0x63 × 3 (note 1)
	7th byte 8th byte	Password count storage address 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	9th byte 10th byte	Password count storage address 15 to 08	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
BOOT ROM	11th byte 12th byte	Password count storage address 07 to 00	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	13th byte 14th byte	Password comparison start address 23 to 16	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	15th byte 16th byte	Password comparison start address 15 to 08	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	17th byte 18th byte	Password comparison start address 07 to 00	Baud rate after adjustment Baud rate after adjustment	- OK: No data transmitted Error: No data transmitted
	19th byte	Password string (note 3)	Baud rate after adjustment	-
	m-th byte	-	Baud rate after adjustment	OK: No data transmitted Error: No data transmitted
	n-th byte	-	Baud rate after adjustment	OK: 0xFB (note 3) Error: No data transmitted
	n-th + 1 byte	(Wait for the next command data)	Baud rate after adjustment	-

- Note 1: " $0x^{**} \times 3$ " means that the device goes into an idle state after transmitting 3 bytes of $0x^{**}$. For further information, refer to Table 21-17.
- Note 2: For information on passwords, refer to "21.12.1 Passwords".
- Note 3: If the flash memory security setting command is executed for a blank product or if a password error occurs for a non-blank product, the TMP89FS62V stops communication and goes into an idle state. Therefore, if a password error oc-curs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.
- Note 4: If a communication error occurs during the transfer of a password address or password string, the TMP89FS62V stops communication and goes into an idle state. Therefore, if a password error occurs, initialize the TMP89FS62V by using the RESET pin, and restart the serial PROM mode.
- Note 5: If the flash memory security is not enabled, it becomes possible to read ROM data freely in parallel PROM mode. Make sure that you enable the flash memory security in mass production.

Page 339 2019/08/01

21.9 Error Code
TMP89FS62VUG

21.9 Error Code

Table 21-17 shows the error codes that the TMP89FS62V transmits when it detects errors.

Table 21-17 Error Codes

Data transmitted	Meaning of error data
0x63, 0x63, 0x63	Operation command error
0xA1, 0xA1, 0xA1	Framing error in the received data
0xA3, 0xA3, 0xA3	Overrun error in the received data

Note: If a password error occurs, the TMP89FS62V does not transmit an error code.



21.10 Checksum (SUM)


For the following operation commands, a checksum is returned to verify the appropriateness of the result of command execution:

- Flash memory erase command (0xF0)
- Flash memory write command (0x30)
- Flash memory SUM output command (0x90)
- Flash memory read command (0x40)
- Product ID code output command (0xC0)
- Flash memory status output command (0xC3)

21.10.1 Calculation method

The checksum (SUM) is calculated with the sum of all bytes, and the obtained result is returned as a word. The data is read in single-byte units, and the calculated result is returned as a word.

Example:

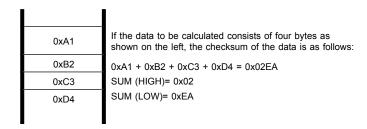

In the case of the product ID code output command and flash memory status output command, however, a different calculation method is used. For more information, refer to Table 21-18.

21.10.2 Calculation data

Table 21-18 shows the data for which a checksum is calculated for each command.

Table 21-18 Data for which a Checksum Is Calculated

Operation command	Calculation data	Description		
Flash memory erase command	All data in the erased area of flash memory (whole or part of flash memory)	In the case of the chip erase, an entire area of the flash m ory is used. When the sector erase is executed, only the erased area is used to calculate the checksum.		
Flash memory write command		Even if a part of the flash memory is written, the checksum		
Flash memory SUM output command	Data in the entire area of flash memory	of the entire flash memory area (0x1000 to 0xFFFF) is calcula ted. The data length, address, record type and checksum in In tel Hex format are not included in the checksum.		
Flash memory read command	Data in the read area of flash memory			
Product ID code output command	9th through 18th bytes of transferred data	For details, refer to "21.8.6 Product ID code output comma (operation command: 0xC0)".		
Flash memory status output command	9th through 12th bytes of transferred data	For details, refer to Table "Table 21-13 Flash Memory Status Output Commands".		

Page 341 2019/08/01

21.11 Intel Hex Format (Binary)

For the following two commands, the Intel Hex format is used in part of the transfer format:

- Flash memory write command (0x30)

For information on the definition of the Intel Hex format, refer to Table 21-19.

Data is in binary form. The start mark ":" must be transmitted as binary data of 0x3A.

- 1. After receiving the checksum of each data record, the TMP89FS62V goes into a wait state and awaits the arrival of the start mark (0x3A ":") of the next data record. Although the external controller transmits data other than 0x3A between records, the TMP89FS62V ignores such data when it is in this wait state.
- 2. The external controller must be provisioned so that after it transmits the checksum of end record, it goes into a wait state and does not transmit any data until the arrival of 3-byte data (overwrite detection, upper and lower bytes of the checksum).
- 3. If a receiving error or Intel Hex format error occurs, the TMP89FS62V goes into an idle state without returning an error code to the external controller. The Intel Hex format error occurs in the following cases:
 - If the record type is other than 0x00, 0x01, or 0x02h
 - If a checksum error of the Intel Hex format occurs
 - If the data length of an extended record (record type = 0x02) is not 0x02
 - If the TMP89FS62V receives the data record after receiving an extended record (record type = 0x02) whose segment address is more than 0x2000
 - I the data length of the end record (record type = 0x01) is not 0x00
 - If the offset address of an extended record (record type = 0x02) is not 0x0000
- 4. The period from a completion of the transmitting last data record to a start of the transmitting end record should be 3ms or more.

Table 21-19 Definition of the Intel Hex Format

	(1)	(2)	(3)	(4)	(5)	(6)
	Start mark	Data length (1 byte)	Offset address (2 bytes)	Record type (1 byte)	Data	Checksum (1 byte)
Data record (record type = 00)	3A	Number of data in a data field	Starting byte stor- age address * Specified using big- endian	00	Data (1 to 255 bytes)	(2) Data length(3) Offset address(4) Record type(5) DataComplement of 2 of the sum total of the above
End record (record type = 01)	3A	00	00 00	01	None	(2) Data length(3) Offset address(4) Record typeComplement of 2 of the sum total of the above
Extended record (record type = 02)	3A	02	00 00	02	Segment address (2 bytes) * Specified using bigendian	(2) Data length (3) Offset address (4) Record type (5) Segment address Complement of 2 of the sum total of the above

21.12 Security

In serial PROM mode, two security functions are provided to prohibit illegal memory access attempts by a third party: password and security program functions.

21.12.1 Passwords

A password is one of the security functions, and can be used when the TMP89FS62V operates in serial PROM mode or when the on-chip debugging function (hereafter called OCD) is used. Specifically, a password can be established by using data (part of user memory) in flash memory. If a password is established, a password authentication process must be performed to execute the flash memory read command, flash memory write command, and other operation commands. In the case of the OCD, the password authentication process is required prior to the start of the OCD system.

In parallel PROM mode, there are no access-related restrictions using a password. To establish the access-related restrictions that work in both serial and parallel PROM modes, the security program must be set to an appropriate setting.

21.12.1.1 How a password can be specified

With the TMP89FS62V, any piece of data in flash memory (8 or more consecutive bytes) can be specified as a password. A password thus specified is authenticated by comparing a password string transmitted by the external controller with the memory data string of MCU where the password is specified. The area where a password can be specified is 0x1000 through 0xFEFF in flash memory.

21.12.1.2 Password structure

A password consists of three components: PNSA, PCSA, and a password string. Figure 21-4 shows the password structure (example of a transmitted password).

• PNSA (password count storage address)

A 3-byte address is specified in the area 0x1000 through 0xFEFF. The memory data of a specified address is the number of bytes of a password string. If the memory data is less than 0x07 or if an address is outside the specified address range, a password error occurs.

The memory data specified here is defined as N.

PCSA (password comparison start address)

A 3-byte address is specified in the area 0x1000 through 0xFEFF-N. An address thus specified is the starting address to be used to compare with a password string. If an address is outside the specified address range, a password error occurs.

Password string

Data of 8 bytes to 255 bytes (=N) must be specified as a password string. Memory data and a password string are compared by a specified number "N" of bytes; a comparison starts at an address specified by PCSA. If there is a mismatch as a result of this comparison or if data of 3 or more consecutive bytes is specified, a password error occurs, and the TMP89FS62V goes into an idle state. In this idle state, external devices cannot communicate with the TMP89FS62V. To resume communication, the TMP89FS62V must be restarted in serial PROM mode by using the RESET pin.

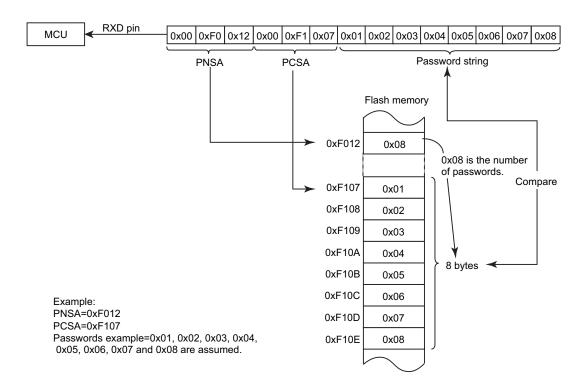


Figure 21-4 Password Structure (Example of a Password Transmitted)



21.12.1.3 Password setting, cancellation and authentication

· Password setting

Because a password is created by using part of a user program, a special password setting routine is unnecessary. A password can be set by simply writing a program to flash memory.

· Password cancellation

To cancel a password, Chip Erase (all erase) must be performed on flash memory. A password is canceled when flash memory is all initialized to 0xFF.

· Password authentication

If there is data other than 0xFF in any one byte of data written to the address 0xFFE0 through 0xFFFF of the TMP89FS62V, a product is considered a non-blank product, and pass-word authentication is required to execute an operation command. In this password authentication process, PNSA, PCSA and a password string are used. An operation command is executed only if a password has been successfully authenticated. If a password is unsuccessfully authenticated, the TMP89FS62V goes into an idle state.

If all data written to the address 0xFFE0 through 0xFFFF are 0xFF, a product is considered blank, and no password authentication is performed. To execute some special operation commands, however, PNSA and PCSA are still required (a password string is not required) even if a product is blank. In this case, the addresses defined in Table 21-20 must be selected as PNSA and PCSA.

Whether a product is blank or non-blank can be confirmed by executing the status output command.

The operation commands that require PNSA and PCSA (password string) for them to be executed are as follows:

- Flash memory erase command (0xF0)
- Flash memory write command (0x30)
- Flash memory read command (0x40)
- Flash memory security setting command (0xFA)

21.12.1.4 Password values and setting range

A password must be set in accordance with the conditions shown in Table 21-20. If a password created without meeting these conditions is used, a password error occurs. In this case, the TMP89FS62V does not transmit data and goes into an idle state.

Table 21-20 Password Values and Setting Range

Password	Blank product (note 1)	Non-blank product	
PNSA (password count storage address)	0x1000 ≤ PNSA ≤ 0xFEFF	0x1000 ≤ PNSA ≤ 0xFEFF	
PCSA (password comparison start address)	0x1000 ≤ PCSA ≤ 0xFEFF	0x1000 ≤ PCSA ≤ 0xFF00 - N	
N (password count)	*	8 ≤ N	
Password string	Not required (notes 4 and 5)	Required (note 3)	

Note 1: *: Don't care.

Note 2: When addresses from 0xFFE0 through 0xFFFF are filled with "0xFF", the product is recognized as a blank product.

Page 345 2019/08/01

21.12 Security

TMP89FS62VUG

Note 3: The data including the same consecutive data (three or more bytes) cannot be used as a password. (A password error occurs during password authentication. The TMP89FS62V does not transmit any data and goes into an idle state.)

- Note 4: In executing flash memory write command, the blank product receives the Intel Hex format data immediately after receiving PCSA; it does not receive password strings. In this case, the subsequent processing is performed correctly because the TMP89FS62V keeps ignoring incoming data until the start mark (0x3A ":") in the Intel Hex format is detected, even if the external controller transmits the dummy password string. However, if the dummy password string con-tains "0x3A", it is detected as the start mark erroneously, and the microcontroller enters the halt mode. If this causes a problem, do not transmit the dummy password strings.
- Note 5: In executing the flash memory erase command, do not transmit a password string to a blank product.

21.12.2 Security program

The security program can be used in parallel and serial PROM modes and for OCD. It has a special memory for protection, and a special command is required to make this protection setting. If the security program is enabled, the reading or writing of flash memory in parallel PROM mode is prohibited. In serial PROM mode, the read and write of flash memory and other operation commands cannot be used. In performing OCD, two options about system startup are provided: prohibiting the system startup by using an option code and starting the system by password authentication.

21.12.2.1 How the security program functions

With the TMP89FS62V, you can control the read of flash memory by writing protection-related information to a specially-designed memory. Because protection-related information is written to this specially-de-signed memory, no user memory resource are required.

21.12.2.2 Enabling or disabling the security program

- Enabling the security program
 To enable the security program, execute the flash memory security setting command.
- Disabling the security program
 To disable the security program, execute Chip Erase of the flash memory erase command.

21.12.3 Option codes

If a specified option code is placed at a specified address inside the interrupt vector area, whether password string authentication is performed or not when executing the flash memory erase command and whether the security program is checked or not when starting OCD can be designated.

- Erase password free code EPFC OP (0xFFFA)

If changes are frequently made to a program during software development, there are cases in which a password may get lost. In this case, you can cancel the password string authentication of the flash memory erase command (0xF0) by setting the erase password free code (EPFC_OP). EPFC_OP is assigned to 0xFFFA in the vector area. Allocate 0xFF to this EPFC_OP to cancel the password string of the flash memory erase command (0xF0).

It is recommended that the password string authentication of the flash memory erase command (0xF0) be enabled during mass production by allocating data other than 0xFF to EPFC OP.

Only Chip Erase can cancel the password string authentication by using the flash memory erase command. If Sector Erase is executed with EPFC_OP set to 0xFF, the TMP89FS62V goes into an idle state. Commands other than the flash memory erase command cannot cancel the password string authentication.

- OCD security program free code DAFC OP (0xFFFB)

With the TMP89FS62V, you can enable the security program to prevent illegal access attempts by a third party. If the security program is enabled, restrictions are imposed on operation commands related to memory access, and the startup of OCD.

The security program should be usually enabled at the time of shipment. If there is the possibility that the OCD may be used by keeping the contents of memory intact, it is possible to directly start the OCD by setting the OCD security program free code (DAFC_OP) and thereby skipping the security program check (the password string authentication, however, is still required).

DAFC_OP is assigned to 0xFFFB in the vector area. To skip the security program check at the startup of the OCD, assign 0xFF to DAFC_OP. In this case, the security program check is not performed, and the OCD can be started by performing only the password string authentication.

If DAFC_OP is not 0xFF, whether the OCD can be used or not is determined by the status of the security program. If the OCD is started with the security program enabled, the TMP89FS62V stops communication and goes into an idle state. To use the OCD when the TMP89FS62V is in this idle state, Chip Erase must be executed for flash memory by using the flash memory erase command (0xF0). If the security program is disabled, the OCD can be started by performing only the password string authentication.

Table 21-21 Option Codes

Symbol	Function	Address	Set value
EPFC_OP	Password string authentication when the flash memory erase command is executed	0xFFFA	0xFF: The password string authentication is skipped (only PNSA and PCSA are authenticated). Other than 0xFF: The password string, PNSA, and PCSA are authenticated.
DAFC_OP	Security program check when the OCD is started	0xFFFB	0xFF: The security program check is skipped. Other than 0xFF: The security program check is performed.



Example :Case in which the password authentication and OCD security program authentication are disabled Vector Section romdata abs = 0xFFFA

DB 0xFF ; Cancel the password string during the erase operation (EPFC_OP)

DB 0xFF ; Permit access when the OCD is started (DAFC_OP)

21.12 Security

TMP89FS62VUG

21.12.4 Recommended settings

Table 21-22 shows the option codes and recommended security program settings.

Table 21-22 Option Codes and Recommended Security Program Settings

		Device status		Serial PR	OM mode	DM mode Parallel PROM mode		
	EPFC_OP (0xFFFA)	DAFC_OP (0xFFFB)	Security Program	Memory read	Erase	Memory read	Erase	OCD
At the time of debug- ging during software development	0xFF	0xFF	Disable	Password string re- quired	Possible	Possible	Possible	Can be used
	0xFF	0xFF	- Enable			Impossible	Possible	Can be used
		Other than 0xFF			Possible			Cannot be used
In quantity production	Other than	0xFF		Impossible	Password			Can be used
	0xFF	Other than 0xFF			string re- quired			Cannot be used

Note 1: In parallel PROM mode, Chip Erase can be performed irrespective of the option code setting.

Note 2: If the security program is not enabled in parallel PROM mode, ROM data can be read with no restrictions. Make sure that in parallel PROM mode, you always enable the security program to protect ROM data.

21.13 Flowchart

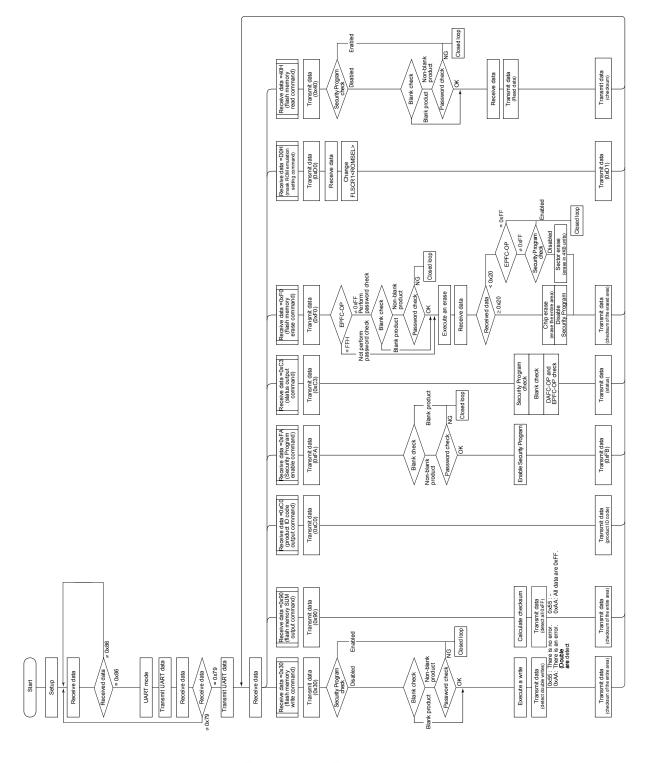


Figure 21-5 Flowchart

Page 351 2019/08/01

21.14 AC Characteristics (UART)

Table 21-23 UART Timing-1

Descriptor	O made at	Clock frequency	Minimum required time		
Parameter	Symbol	(fcgck)	At fcgck = 1 MHz	At fcgck = 10 MHz	
Time from when MCU receives 0x86 to when it echoes back	CMeb1	Approx. 660	660 µs	66 µs	
Time from when MCU receives 0x79 to when it echoes back	CMeb2	Approx. 540	540 µs	54 µs	
Time from when MCU receives an operation command to when it echoes back	CMeb3	Approx. 300	300 µs	30 µs	
Time required to calculate the checksum (except the time of the writing to flash memory)	CMfsm	Approx. 2800000 (60KB)	2.8 s	280 ms	
Time when MCU receives Intel Hex data to when it transmits overwrite detection data	CMwr	Approx. 200	200 μs	20 µs	
Time from when MCU receives data (number of read bytes) to when it transmits memory data	CMrd	Approx. 430	430 µs	43 µs	
Time from when MCU receives data (mask ROM emulation setting data) to when it echoes back	CMem2	Approx. 420	420 μs	42 µs	
Time required to enable the security program	CMrp	Approx. 1080	1.08 ms	108 µs	

Table 21-24 UART Timing-2

Description	O. made al	Clock frequency	Minimum required time		
Parameter	Symbol	(fcgck)	At fcgck = 1 MHz	At fcgck = 10 MHz	
Time required to keep MODE and RESET pins at L after power-on	RSsup	-	10	ms	
Time from when MODE and RESET pins are set to H to the acceptance of RXD	RXsup	-	20	ms	
Time from when MCU echoes back 0x86 to the acceptance of RXD	CMtr1	Approx. 140	140 µs	14 µs	
Time from when MCU echoes back 0x79 to the acceptance of RXD	CMtr2	Approx. 90	90 µs	9 μs	
Time from when MCU echoes back an operation command to the acceptance of RXD	CMtr3	Approx. 270	270 µs	27 µs	
Time from when the execution of a current command is completed to the acceptance of the next operation command	CMnx	Approx. 1100	1.1 ms	110 µs	
Time from the completion of the receiving last data record to acceptance of the end record	CMer	-	3 ms		

21.14.1 Reset timing

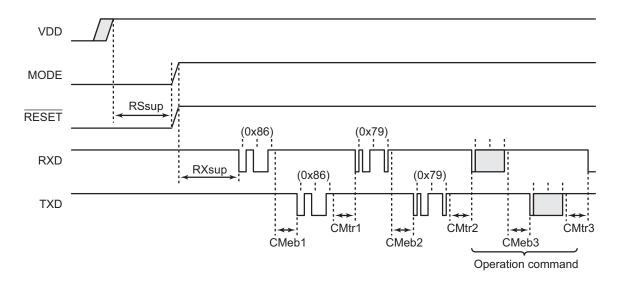


Figure 21-6 Reset Timing

21.14.2 Flash memory erase command (0xF0)

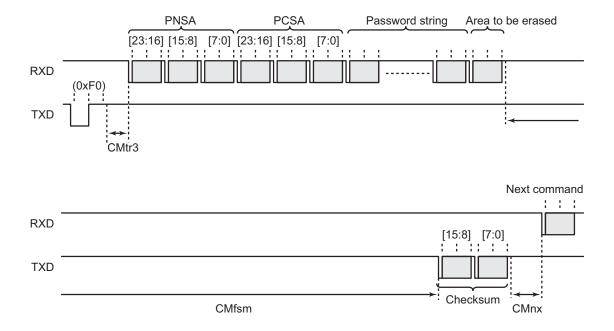


Figure 21-7 Flash Memory Erase Command

21.14.3 Flash memory write command (0x30)

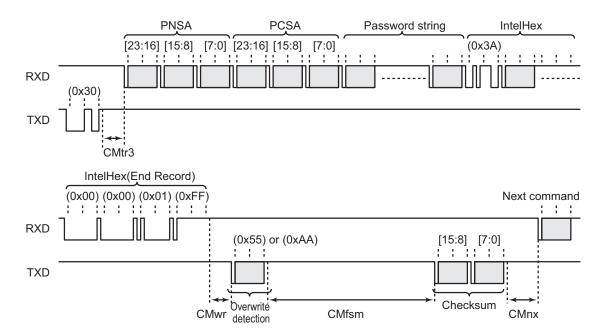


Figure 21-8 Flash Memory Write Command

21.14.4 Flash memory read command (0x40)

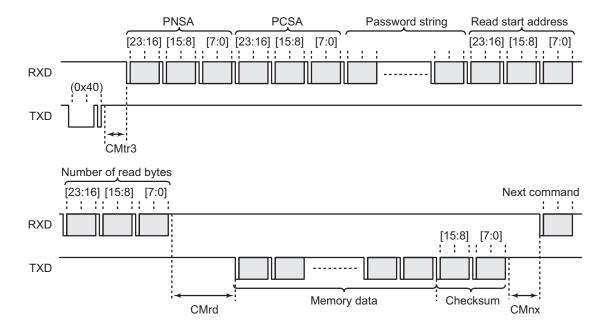


Figure 21-9 Flash Memory Read Command



21.14.5 Flash memory SUM output command (0x90)

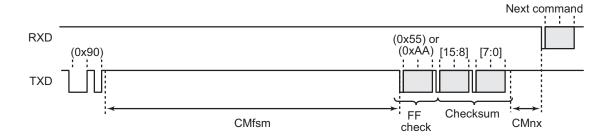


Figure 21-10 Flash Memory SUM Output Command

21.14.6 Product ID code output command (0xC0)

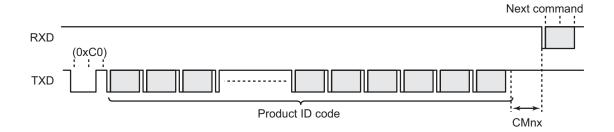


Figure 21-11 Product ID Code Output Command

Page 355 2019/08/01

21.14.7 Flash memory status output command (0xC3)

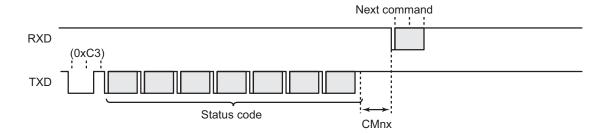


Figure 21-12 Flash Memory Status Output Command

21.14.8 Mask ROM emulation setting command (0xD0)

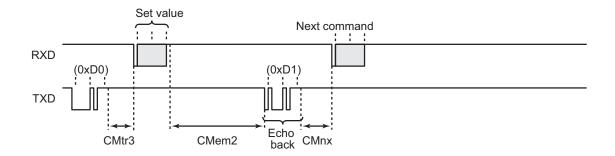


Figure 21-13 Mask ROM Emulation Setting Command

21.14.9 Flash memory security setting command (0xFA)

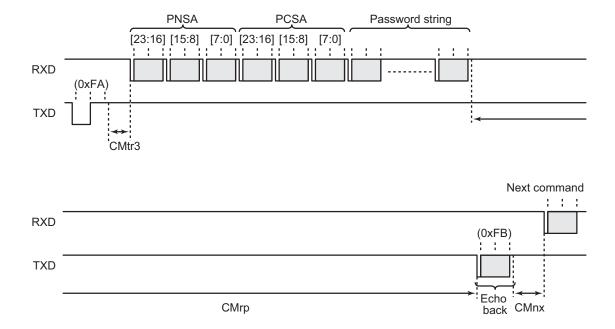


Figure 21-14 Flash Memory Security Setting Command

22. On-chip Debug Function (OCD)

The TMP89FS62V has an on-chip debug function. Using a combination of this function and the TOSHIBA onchip debug emulator RTE870/C1, the user is able to perform software debugging in the on-board environment. This emulator can be operated from a debugger installed on a PC so that the emulation and debugging functions of an application program can be used to modify a program or for other purposes.

This chapter describes the control pins needed to use the on-chip debug function and how a target system is connected to the on-chip debug function. For more detailed information on how to use the on-chip debug emulator RTE870/C1, refer to the emulator operating manual.

22.1 Features

The on-chip debug function of the TMP89FS62V has the following features:

- Debugging can be performed in much the same way as when a microcontroller packaged with the MCU is used.
- The debugging function can be realized using two communication control pins.
- · Useful on-chip debug functions include the following:
 - 8 breaks function are provided (one of which can also be used as an event function).
 - A trace function that allows the newest two branch instructions to be stored in real time is provided.
 - Functions to display active memory and to overwrite active memory are provided.
- · Built-in flash memory can be erased and written.

22.2 Control Pins

The on-chip debug function uses two pins for communication and four pins for power supply, reset and mode control. The pins used for the on-chip debug function are shown in Table 22-1.

Ports P20 and P21 are used as communication control pins of the on-chip debug function. If the RTE870/C1 On-Chip Debug Emulator is used, therefore, Ports P20 and P21 cannot be debugged as port pins or UART0 and SIO0 pins.

Table 22-1 Pins Used for the On-chip Debug Function

Pin name (during on-chip debugging)	Input/out- put	Function		Pin name (in MCU mode)		
OCDCK	Input	Communication control pin (clock control)		P20 / TXD0 / SO0		
OCDIO	I/O	Communication control pin (data control)	Alata A	P21 / RXD0 / SI0		
RESET	Input	Reset control pin	(Note 1)	RESET		
MODE	Input	Mode control pin		MODE		
VDD	Power supply	4.5 V to 5.5 V (Note 1)				
vss	Power supply	0 V				
Input and output ports other than P20 and P21	I/O	Can be used for an application in a target system				
XIN	Input					
XOUT	Output	To be connected to an oscillator to put these pins in a state of self-oscillation				

Note 1: To use all on-chip debug functions, the power supply voltage must be within the range 4.5 V to 5.5 V. If it is within the range 4.3 V to less than 4.5 V, functional limitations occur with some of the debug functions. For more detailed information, refer to the emulator operating manual.

How to Connect the On-chip Debug Emulator to a Target System

22.3 How to Connect the On-chip Debug Emulator to a Target System

To use the on-chip debug function, the specific pins on a target system must be connected to an external debugging system.

The on-chip debug emulator RTE870/C1 can be connected to a target system via an interface control cable. TOSH-IBA provides a connector for this interface control cable as an accessory tool. Mounting this connector on a target system will make it easier to use the on-chip debug function.

The connection between the on-chip debug emulator RTE870/C1 and a target system is shown in Figure 22-1.

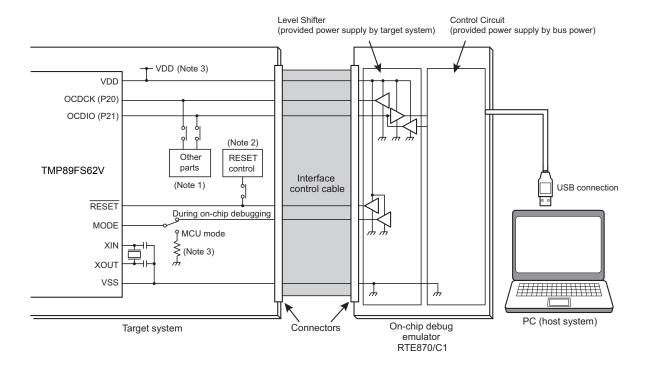


Figure 22-1 How the On-chip Debug Emulator RTE870/C1 Is Connected to a Target System

- Note 1: Ports P20 and P21 are used as communication control pins of the on-chip debug function. If the on-chip debug emulator RTE870/C1 is used, therefore, the port functions and the functions of UART0 and SIO0, which are also used as ports, cannot be debugged. If the emulator is disconnected to be used as a single MCU, the functions of ports P20 and P21 can be used. To use the on-chip debug function, however, P20 and P21 should be disconnected using a jumper, switch, etc. if there is the possibility of other parts affecting the communication control.
- Note 2: If the reset control circuit on an application board affects the control of the on-chip debug function, it must be disconnected using a jumper, switch, etc.
- Note 3: The power supply voltage VDD must be provided by a target system. The VDD pin is connected to the emulator so that the level of voltage appropriate for driving communication pins can be obtained by using the power supply of a target system. The connection of the VDD pin is for receiving the power supply voltage, not for supplying it from the emulator side to a target system.

22.4 Security

The TMP89FS62V provides two security functions to prevent the on-chip debug function from being used through illegal memory access attempted by a third person: a password function and a Security Program function. If a password is set on the TMP89FS62V, it is necessary to authenticate the password for using the on-chip debug function. By setting both a password and the Security Program on the TMP89FS62V, it is possible to prohibit the use of all on-chip debug functions. Furthermore, by using the option code, the on-chip debug function only can be used even if the Security Program is enabled. However, to use the on-chip debug function in this setting, a password authentication process is required.

For information on how to set a password and to enable the read protection and option code, refer to "Serial PROM Mode".



23. Input/Output Circuit

23.1 Control Pins

The input/output circuitries of the TMP89FS62V control pins are shown below.

Control pin	I/O	Circuitry	Remarks
XIN XOUT	Input Output	Refer to the P0 ports in the chapter of Input/Output Ports.	
XTIN XTOUT	Input Output	Refer to the P0 ports in the chapter of Input/Output Ports.	
RESET	Input	Refer to the P1 ports in the chapter of Input/Output Ports.	
MODE	Input		R = 100 Ω (typ.)

Page 359 2019/08/01

23. Input/Output Circuit

23.1 Control Pins

TMP89FS62VUG

24. Electrical Characteristics

24.1 Absolute Maximum Ratings

The absolute maximum ratings are rated values which must not be exceeded during operation, even for an instant. Any one of the ratings must not be exceeded. If any absolute maximum rating is exceeded, a device may break down or its performance may be degraded, causing it to catch fire or explode resulting in injury to the user. Thus, when designing products which include this device, ensure that no absolute maximum rating value will ever be exceeded.

 $(V_{SS} = 0 \ V)$

Parameter	Symbol	Pins	Ratings	Unit
Supply voltage	V _{DD}		-0.3 to 6.0	٧
	V _{IN1}	P0, P1, P2 (excluding P23), P4, P7, P8, P9, PB (tri-state port)	-0.3 to V _{DD} + 0.3	
Input voltage	V _{IN2}	P23 (sink open drain port)	-0.3 to V _{DD} + 0.3	V
	V _{IN3}	AIN0 to AIN7 (analog input voltage)	-0.3 to A _{VDD} + 0.3	
Output voltage	V _{OUT1}		-0.3 to V _{DD} + 0.3	V
	I _{OUT1}	P0, P1, P2 (excluding P23), P4, P7, P8, P9, PB (tri-state port)	-1.8	
Output current (per pin)	I _{OUT2}	P0, P1, P2, P4, P9 (pull-up resistor)	-0.4	
, , ,	I _{OUT3}	P0, P1, P2, P4, P7, P8, P9 (tri-state port)	3.2	
	I _{OUT4}	PB (large current port)	30	
	ΣΙ _{ΟUT1}	P0, P1, P2 (excluding P23), P4, P7, P8, P9, PB (tri-state port)	-30	mA
Output current (total)	ΣI _{OUT2}	P0, P1, P2, P4, P9 (pull-up resistor)	-4	
, , , , , ,	ΣI _{OUT3}	P0, P1, P2, P4, P7, P8, P9 (tri-state port)	60	
	ΣI _{OUT4}	PB (large current port)	120	
Power dissipation (Topr = 85°C)	P _D		250	mW
Soldering temperature (time)	Tsld		260 (10 s)	
Storage temperature	Tstg		-55 to 125	°C
Operating temperature	Topr		-40 to 85	


24.2 Operating Conditions


The operating conditions for a device are operating conditions under which it can be guaranteed that the device will operate as specified. If the device is used under operating conditions other than the operating conditions (supply voltage, operating temperature range, specified AC/DC values etc.), malfunction may occur. Thus, when designing products which include this device, ensure that the operating conditions for the device are always adhered to.

24.2.1 MCU mode (Flash Programming or erasing)

 $(V_{SS} = 0 \text{ V}, \text{Topr} = -10 \text{ to } 40^{\circ}\text{C})$

Parameter	Symbol	Pins	Condition		Max	Unit
Supply voltage	V_{DD}		NORMAL1, 2 modes	4.5	5.5	V
Ola ali faa assa aas	fc	XIN, XOUT	V >45V	1.0	10.0	NAL I-
Clock frequency	k frequency V _{DD} ≥ 4.5 V		0.25	10.0	MHz	

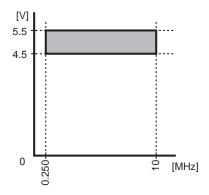

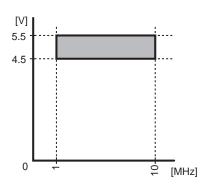

Gear clock(fcgck) frequency range

High-frequency clock(fc) frequency range


Figure 24-1 Clock gear (fcgck) and High-frequency clock (fc)




24.2.2 MCU mode (Except Flash Programming or erasing)

 $(V_{SS} = 0 V, Topr = -40 to 85^{\circ}C)$

Parameter	Symbol	Pins	Condition	Min	Max	Unit
Supply voltage	V _{DD}		NORMAL1, 2 modes IDLE0, 1, 2 modes SLOW1, 2 modes SLEEP0, 1 modes STOP mode	4.3	5.5	٧
	fc	XIN, XOUT		1.0	10.0	MHz
Clock frequency	fcgck		V _{DD} ≥ 4.3 V	0.25	10.0	IVITZ
	fs	XTIN, XTOUT		30	34	kHz

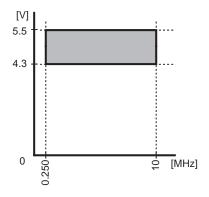

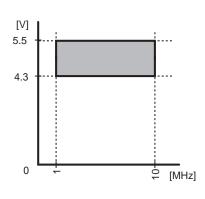

Gear clock(fcgck) frequency range

High-frequency clock(fc) frequency range

Figure 24-2 Clock gear (fcgck) and High-frequency clock (fc)


Page 363 2019/08/01


24.2 Operating Conditions

24.2.3 Serial PROM mode

 $(V_{SS} = 0 \text{ V}, \text{Topr} = -10 \text{ to } 40^{\circ}\text{C})$

Parameter	Symbol	Pins	Condition		Max	Unit
Supply voltage	V_{DD}		NORMAL1, 2 modes	4.5	5.5	V
Clock from tonov	fc	XIN, XOUT	V _{DD} ≥ 4.5 V	1.0	10.0	NAL I-
Clock frequency	fcgck		VDD 2 4.5 V	1.0	10.0	MHz

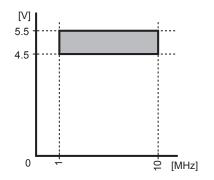

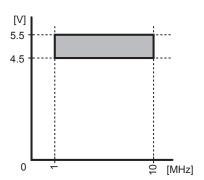

Gear clock(fcgck) frequency range

High-frequency clock(fc) frequency range

Figure 24-3 Clock gear (fcgck) and High-frequency clock (fc)



24.3 DC Characteristics

 $(V_{DD} = 4.5 \text{ to } 5.5 \text{V}, V_{SS} = 0 \text{ V}, \text{Topr} = -40 \text{ to } 85^{\circ}\text{C})$

Parameter	Symbol	Pins	Condition	Min	Тур.	Max	Unit
Hysteresis voltage	V_{HS}	Hysteresis input		-	0.9	_	V
	I _{IN1}	MODE	V _{DD} = 5.5 V				
Input current	I _{IN2}	P0, P1, P2, P4, P5, P7, P8, P9, PB	V _{IN} = V _{MODE} = 5.5 V/0 V	-	-	±2	μΑ
	I _{IN3}	RESET, STOP					
	R _{IN2}	RESET pull-up		100	220	500	
Input resistance	R _{IN3}	P0, P1, P2 (excluding P23 and P24), P4, P9 pull-up	V _{DD} = 5.5 V, V _{IN} = V _{MODE} = 0 V	30	50	100	kΩ
	I _{LO1}	P23, P24 (skin open drain port)	V _{DD} = 5.5 V, V _{OUT} = 5.5 V	-	-	2	
Output leakage current	I _{LO2}	P0, P1, P2 (excluding P23 and P24), P4, P5, P7, P8, P9, PB (tristate port)	V _{DD} = 5.5 V, V _{OUT} = 5.5 V/0 V	-	-	±2	μΑ
Innut high lavel	V _{IH1}	MODE pin		V _{DD} × 0.70	-	V _{DD}	
Input high level	V _{IH2}	Hysteresis input		V _{DD} × 0.75	_	V DD	
lanut laur laural	V _{IL1}	MODE pin		0	-	V _{DD} × 0.30	
Input low level	V _{IL2}	Hysteresis input			-	V _{DD} × 0.25	V
Output high voltage	V _{OH}	Except P23, P24, XOUT, XTOUT	$V_{DD} = 4.5 \text{ V}, I_{OH} = -0.7 \text{ mA}$	4.1	-	-	
Output low voltage	V _{OL}	Except XOUT, XTOUT	V _{DD} = 4.5 V, I _{OL} = 1.6 mA	-	-	0.4	
Output low current	I _{OL}	PB (Large current port)	V _{DD} = 4.5 V, V _{OL} = 1.0 V	-	20	-	mA

Note 1: Typical values show those at Topr = 25° C and V_{DD} = 5.0 V.

Note 2: Input current I_{IN3} : The current through pull-up resistor is not included.

Note 3: V_{IN} : The input voltage on the pin except MODE pin, V_{MODE} : The input voltage on the MODE pin

 $(V_{SS} = 0 V, Topr = -40 to 85 °C)$

Parameter	Symbol	Pins	Con	dition	Min	Тур.	Max	Unit	
Supply current in NORMAL 1, 2 modes (Note 7)			V _{DD} = 5.5 V V _{IN} = 5.3 V/0.2V, V _{MODE} =5.3V/0.1V fcgck = 10.0 MHz, fs = 32.768 kHz			14.5	25	mA	
Supply current in IDLE0, 1, 2 modes						5.5	7.5	110.4	
Supply current in SLOW 1 modes (Notes 5 and 7)	I _{DD}		V _{DD} = 5.5 V		-	-	200		
Supply current in SLEEP1 mode	(Note8)		V _{IN} = 5.3 V/0.2V, V _{MODE} =5.3V/0.1V			-	1	200	
Supply current in SLEEP0 mode			15 = 32.768 KHZ		-	-	200	μA	
Supply current in STOP mode			$V_{DD} = 5.5 \text{ V}$ $V_{IN} = 5.3 \text{ V}/0.2 \text{ V}$ $V_{MODE} = 5.3 \text{V}/0.1 \text{V}$			-	100		
Peak current of intermittent operation (Notes 7 and 9)	I _{DDRP-P}		V _{DD} = 5.5 V V _{IN} = 5.3 V/0.2 V V _{MODE} =5.3V/0.1V	When a program operates on flash memory or whe data is read from flash memory	-	10	-	mA	
Current for writing or erasing to flash memory and security (Notes 4, 8 and 9)	I _{DDEW}		V _{DD} = 5.5 V V _{IN} = 5.3 V/0.2 V V _{MODE} =5.3V/0.1V		-	26	-	I IIIA	

Note 1: Typical values shown are Topr = 25°C and V_{DD} = 5.0 V, unless otherwise specified.

Note 2: I_{DD} does not include I_{REF}. It is the electrical current in the state in which the peripheral circuitry has been operated.

Note 3: V_{IN} : The input voltage on the pin except MODE pin, V_{MODE} : The input voltage on the MODE pin

- 24.3 DC Characteristics
 - Note 4: When performing a write or erase on the flash memory or activating a security program in the flash memory, make sure that the operating temperature Topr is within the range −10°C to 40°C. If the temperature is outside this range, the resultant performance cannot be guaranteed.
 - Note 5: In SLOW1 mode, the difference between the peak current and the average current becomes large.
 - Note 6: Each supply current in SLOW2 mode is equivalent to that in IDLE0, IDLE1 and IDLE2 modes.
 - Note 7: When a program operates in the flash memory or when data is being read from the flash memory, the flash memory operates intermittently, and a peak current flows, as shown in Figure 24-4. In this case, the supply current I_{DD} (in NOR-MAL1, NORMAL2 and SLOW1 modes) is defined as the sum of the average peak current and MCU current.
 - Note 8: If a write or erase is performed on the flash memory or a security program is enabled in the flash memory, an instantaneous peak current flows, as shown in Figure 24-5.
 - Note 9: The circuit of a power supply must be designed such as to enable the supply of a peak current. This peak current causes the supply voltage in the device to fluctuate. Connect a bypass capacitor of about 0.1 µF near the power supply of the device to stabilize its operation.

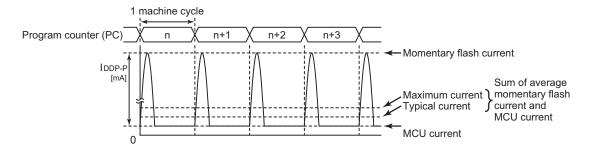


Figure 24-4 Intermittent Operation of Flash Memory

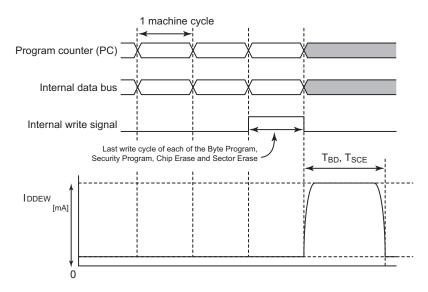


Figure 24-5 Current When an Erase or Write is Being Performed on the Flash Memory



24.4 AD Conversion Characteristics

		(* DL	, 1.0 to 0.0 v, v		5 v, ropi 10	10 00 0)
Parameter	Symbol	Condition	Min	Тур.	Max	Unit
Analog reference voltage / Power supply voltage of analog control circuit	V _{AREF} / A _{VDD}			V_{DD}		V
Analog input voltage range	V _{AIN}		A _{VSS}	-	V _{AREF} /A _{VDD}	
Power supply current of analog refer-		V _{DD} = V _{AREF} /A _{VDD} = 5.5 V	-	0.6	1.0	mA
ence voltage	I _{REF}	V _{DD} = V _{AREF} /A _{VDD} = 4.5 V	-	0.5	0.8	mA
Non-linearity error			-	-	±3.5	
Zero point error		$V_{DD} = V_{AREF}/A_{VDD} = 4.5 \text{ to}$	-	-	±3.5	LSB
Full scale error		5.5 V	-	-	±3.5	LSB
Total error	·		_	_	±3.5	

 $(V_{DD} = 4.5 \text{ to } 5.5 \text{V}, V_{SS} = A_{VSS} = 0.0 \text{ V}, \text{Topr} = -40 \text{ to } 85^{\circ}\text{C})$

- Note 1: The total error includes all errors except a quantization error, and is defined as the maximum deviation from the ideal conversion line.
- Note 2: The voltage to be input to the AIN input pin must be within the range V_{AREF}/A_{VDD} to V_{SS}. If a voltage outside this range is input, converted values will become indeterminate, and converted values of other channels will be affected.
- Note 3: If the AD converter is not used, fix the VAREF/AVDD pin to the V_{DD} level.

24.5 Power-on Reset Circuit Characteristics

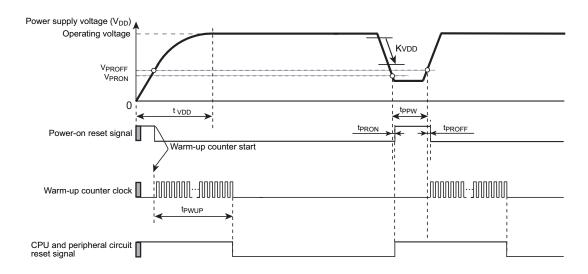


Figure 24-6 Power-on Reset Operation Timing

Note: Care must be taken in system designing since the power-on reset circuit may not fulfill its functions due to the fluctuations in the power supply voltage (V_{DD}) .

 $(V_{SS}=0 \text{ V, Topr} = -40 \text{ to } 85^{\circ}\text{C})$

Symbol	Parameter	Min.	Тур.	Max.	Unit
V _{PROFF}	Power-on reset releasing voltage ^{Note}	1.85	2.02	2.24	V
V_{PRON}	Power-on reset detecting voltage ^{Note}	1.70	1.85	2.05	V
t _{PROFF}	Power-on reset releasing response time	-	0.01	0.1	
t _{PRON}	Power-on reset detecting response time	-	0.01	0.1	ms
t _{PRW}	Power-on reset minimum pulse width	1.0	-	1	
t _{PWUP}	Warming-up time after a reset is cleared	-	102 x 29/fc	1	S
t _{VDD}	Power supply rise time	0.1	_	5	ms
K _{VDD}	Power supply falling gradient	1	_	-	ms/V

- Note 1: Because the power-on reset releasing voltage and the power-on reset detecting voltage change relative to one another, the detected voltage will never become inverted.
- Note 2: A clock output by an oscillating circuit is used as the input clock for a warming-up counter. Because the oscillation frequency does not stabilize until an oscillating circuit stabilizes, some errors may be included in the warming-up time.
- Note 3: Boost the power supply voltage such that t_{VDD} becomes smaller than t_{PWUP}.

Voltage Detecting Circuit Characteristics 24.6

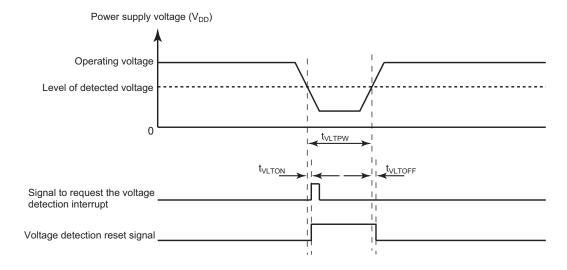


Figure 24-7 Operation Timing of the Voltage Detecting Circuit

Note: Care must be taken in system designing since the power-on reset circuit may not fulfill its functions due to the fluctuations in the power supply voltage (V_{DD}).

 $(V_{SS} = 0 \text{ V}, \text{Topr} = -40 \text{ to } 85^{\circ}\text{C})$

Symbol	Parameter	Min	Тур.	Max	Unit
t _{VLTOFF}	Voltage detection releasing response time	-	0.01	0.1	
t _{VLTON}	Voltage detecting detection response time	-	0.01	0.1	ms
t_{VLTPW}	Voltage detecting minimum pulse width	1.0	-	ı	



24.7 AC Characteristics

24.7.1 MCU mode (Except Flash Programming or erasing)

(V_{DD} = 4.3 to 5.5 V, V_{SS} = 0 V, Topr = -40 to 85 °C)

Parameter	Symbol	Condition	Min	Тур.	Max	Unit
Machine cycle time		NORMAL1, 2 modes	- 0.100 - - 117.6 -	-	4	μs
		IDLE0, 1, 2 modes				
	t _{cy}	SLOW1, 2 modes			133.3	
		SLEEP0, 1 modes		-		
High-level clock pulse width	t _{WCH}	For external clock operation (XIN input). fc = 10.0 MHz	-	50.0	_	
Low-level clock pulse width	t _{WCL}					ns
High-level clock pulse width	t _{WSH}	For external clock operation (XTIN input)		45.00		
Low-level clock pulse width	t _{WSL}	fs = 32.768 kHz	-	15.26	_	μs

24.7.2 MCU mode (Flash programming or erasing)

(V_{DD} = 4.5 to 5.5 V, V_{SS} = 0 V, Topr = –10 to 40 °C)

Parameter	Symbol	Condition	Min	Тур.	Max	Unit
Machine cycle time	t _{cy}	NORMAL1, 2 modes	0.100	-	4	μs
High-level clock pulse width	t _{WCH}	For external clock operation (XIN input).		50.0		
Low-level clock pulse width	t _{WCL}	fc = 10.0 MHz	_	50.0	_	ns

Page 369 2019/08/01

24.7.3 Serial PROM mode

(V_{DD} = 4.5 to 5.5 V, V_{SS} = 0 V, Topr = -10 to 40 °C)

Parameter	Symbol	Condition	Min	Тур.	Max	Unit
Machine cycle time	t _{cy}	NORMAL1, 2 modes	0.100	-	1	μs
High-level clock pulse width	t _{WCH}	For external clock operation (XIN input).		50.0		
Low-level clock pulse width	twcL	fc = 10.0 MHz	_	50.0	_	ns


24.8 Flash Characteristics


24.8.1 Write characteristics

(V_{DD} = 4.5 to 5.5 V, V_{SS} = 0 V, Topr = –10 to 40 °C)

Parameter	Condition	Min	Тур.	Max	Unit
Number of guaranteed writes to flash memory		-	-	1000	Times
Flash memory write time		-	-	3	
Flack manner and the s	Chip erase	-	-	126	ms
Flash memory erase time	Sector erase	-	-	30	

24.9 Oscillating Condition

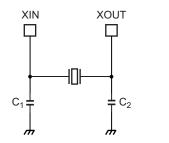

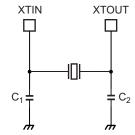

- (1) High-frequency oscillation
- (2) Low-frequency oscillation
- Note 1: To ensure stable oscillation, the resonator position, load capacitance, etc. must be appropriate. Because these factors are greatly affected by board patterns, please be sure to evaluate operation on the board on which the device will actually be mounted.
- Note 2: This product has been evaluated by the oscillator of Murata Manufacturing Co., Ltd. Please refer to the Murata Websit for details.

Page 371 2019/08/01


24. Electrical Characteristics


24.9 Oscillating Condition


TMP89FS62VUG

25. Package Dimensions

<u>ŠÛØÚI I ËÜËF€F€ËEÌE €07ÁÜ^çFÈE</u>

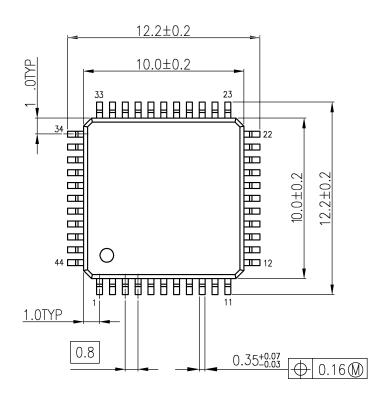

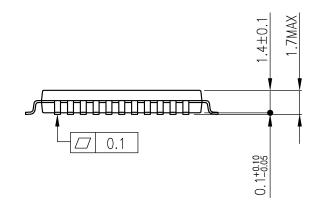

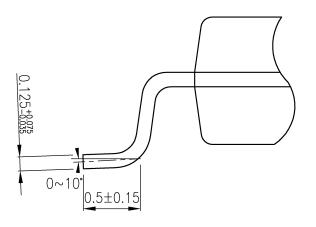

Page 373 2019/08/01

RESTRICTIONS ON PRODUCT USE

Toshiba Corporation and its subsidiaries and affiliates are collectively referred to as "TOSHIBA".

Hardware, software and systems described in this document are collectively referred to as "Product".

- TOSHIBA reserves the right to make changes to the information in this document and related Product without notice.
- This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's written permission, reproduction is permissible only if reproduction is without alteration/omission.
- Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before customers use the Product, create designs including the Product, or incorporate the Product into their own applications, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the "TOSHIBA Semiconductor Reliability Handbook" and (b) the instructions for the application with which the Product will be used with or for. Customers are solely responsible for all aspects of their own product design or applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.
- PRODUCT IS NEITHER INTENDED NOR WARRANTED FOR USE IN EQUIPMENTS OR SYSTEMS THAT REQUIRE
 EXTRAORDINARILY HIGH LEVELS OF QUALITY AND/OR RELIABILITY, AND/OR A MALFUNCTION OR FAILURE OF
 WHICH MAY CAUSE LOSS OF HUMAN LIFE, BODILY INJURY, SERIOUS PROPERTY DAMAGE AND/OR SERIOUS PUBLIC
 IMPACT ("UNINTENDED USE"). Except for specific applications as expressly stated in this document, Unintended Use includes,
 without limitation, equipment used in nuclear facilities, equipment used in the aerospace industry, lifesaving and/or life supporting
 medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment
 used to control combustions or explosions, safety devices, elevators and escalators, and devices related to power plant. IF YOU
 USE PRODUCT FOR UNINTENDED USE, TOSHIBA ASSUMES NO LIABILITY FOR PRODUCT. For details, please contact your
 TOSHIBA sales representative or contact us via our website.
- Do not disassemble, analyze, reverse-engineer, alter, modify, translate or copy Product, whether in whole or in part.
- Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable laws or regulations.
- The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right is granted by this document, whether express or implied, by estoppel or otherwise.
- ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF
 SALE FOR PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY
 WHATSOEVER, INCLUDING WITHOUT LIMITATION, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES
 OR LOSS, INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION
 AND LOSS OF DATA, AND (2) DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS
 RELATED TO SALE, USE OF PRODUCT, OR INFORMATION, INCLUDING WARRANTIES OR CONDITIONS OF
 MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY OF INFORMATION, OR NONINFRINGEMENT.
- Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). Product and related software and technology may be controlled under the applicable export laws and regulations including, without limitation, the Japanese Foreign Exchange and Foreign Trade Law and the U.S. Export Administration Regulations. Export and re-export of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and regulations.
- Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS compatibility of
 Product. Please use Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled
 substances, including without limitation, the EU RoHS Directive. TOSHIBA ASSUMES NO LIABILITY FOR DAMAGES OR
 LOSSES OCCURRING AS A RESULT OF NONCOMPLIANCE WITH APPLICABLE LAWS AND REGULATIONS.

TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION

https://toshiba.semicon-storage.com/