

# TC78B009FTG

## Precautions for Use

### Overview

The TC78B009FTG is a sensorless PWM predriver IC for 3-phase brushless motors. Motor speed can be controlled by selecting among the PWM Duty cycle, analog voltage, and I<sup>2</sup>C. Non-volatile memory (NVM) is implemented and it can set according to the motors and directions for use. It also realizes closed loop speed control function without an external microcomputer. TC78B009FTG is used with 6 external N-ch power MOSFETs, to drive motors of which the output range is wide.

## Contents

Overview .....	1
Contents .....	2
1. Setting Method .....	4
1.1. VM Power Supply Voltage Settings .....	4
1.2. VREG Terminal Settings .....	4
1.3. Startup Settings .....	5
1.4. Brake Sequence .....	5
1.5. Idling Detection .....	6
1.6. Accelerating/Decelerating .....	6
1.7. Position Detection .....	7
1.8. Maximum Rotation Speed .....	8
1.9. Closed loop .....	8
1.10. Output PWM Frequency .....	8
1.11. Commutation and Lead Angle Settings .....	9
Notes on Contents .....	12
IC Usage Considerations .....	12
Notes on handling of ICs .....	12
Points to remember on handling of ICs .....	13
RESTRICTIONS ON PRODUCT USE .....	14

### Table of Contents

Table 1.1	Power Supply Voltage Operating Range of VM Terminals .....	4
Table 1.2	VM Terminal Capacitors.....	4
Table 1.3	VREG Terminal Capacitors.....	4
Table 1.4	Forced Commutation Frequency.....	6
Table 1.5	Abnormality Detection Setting of the Maximum Rotation Frequency.....	8

### 1. Setting Method

#### 1.1. VM Power Supply Voltage Settings

If necessary, connect ceramic capacitors or electrolytic capacitors between the VM and GND as close to the IC as possible to reduce noise and fluctuations at the VM terminal. In particular, using ceramic capacitors in parallel with electrolytic capacitors and connecting them near the IC is effective in suppressing high-frequency power supply voltage fluctuations and noise.

Table 1.1 Power Supply Voltage Operating Range of VM Terminals

Item	Symbol	Min.	Standard	Max.	Unit	Remarks
VM power-supply voltage 1	$V_{M(opr1)}$	9	14.8	27	V	—
VM power-supply voltage 2	$V_{M(opr2)}$	5.5	—	9	V	The variation in electrical characteristics is large, and the electrical characteristics are not guaranteed. Please be careful.
VM Power-supply voltage 3	$V_{M(opr3)}$	10.8	14.8	27	V	VM power supply voltage range when writing to NVM.

- Note: The absolute maximum rating of the VM terminal is 30V. The absolute maximum rating is a standard that must not be exceeded even momentarily.

If the absolute maximum rating is exceeded, the IC may be destroyed, deteriorate, or be damaged, and there is a risk of destruction, deterioration, or damage to components other than the IC. Be sure to perform design so that the absolute maximum rating is not exceeded under any operating conditions.

Please use within the described operating range.

Table 1.2 VM Terminal Capacitors

Item	Recommended Usage Range	Unit
Electrolytic capacitor	10 - 1000	$\mu\text{F}$
Ceramic capacitors	0.01 - 1	$\mu\text{F}$

- Note: This is only a reference value, and the appropriate capacitance value will change depending on the motor current. Therefore, use a capacitor value that reduces power supply voltage fluctuations and noise even if it is out of the recommended range.

#### 1.2. VREG Terminal Settings

If necessary, connect a ceramic capacitor between VREG and GND as close to the IC as possible to reduce noise and voltage fluctuations at the VREG terminal.

Table 1.3 VREG Terminal Capacitors

Item	Recommended Value	Unit
Ceramic capacitors	0.1 - 1	$\mu\text{F}$

### 1.3. Startup Settings

The sensorless startup method using this product is to first perform initial position detection using DC excitation. After that, the motor is synchronized and rotated by forced commutation to generate the induced voltage of the motor. The rotation position of the motor is detected from the induced voltage and it is rotated without a sensor.

In addition, the success or failure of startup is determined by the DC excitation time, forced commutation frequency, and output Duty (output current limit and Duty at soft start) settings. However, the settings depend on the characteristics and load of the motor, so check them in actual operation and set them so that the rotor can be started from any position.

Also, if there is a dead zone at a specific position of the motor and position detection is not possible with the second DC excitation, the first DC excitation is used. Exclude that position so that the initial position is determined by the second DC excitation. If there is no such position, it is not necessary to use the first DC excitation.


In addition, when FG\_ON=0, the FG signal is output when shifting to sensorless control, and when FG\_ON=1, it is output when the forced commutation frequency is above the set value.

### 1.4. Brake Sequence

You can set the brake sequence as the state after the power is turned on or standby is released. In the brake sequence, the state of the output stage can also be set to the short brake, so if the motor is idling when the power is turned on or standby is released, the motor can be started from the stopped state. If you do not need to take such measures, there is no need to set the brake sequence.

### Motor operating waveform at startup

1<sup>st</sup>DC excitation time =0.2s, 2<sup>nd</sup> DC excitation time=0.4s,  
Forced commutation frequency=1.6Hz, FG\_ON=1 setting

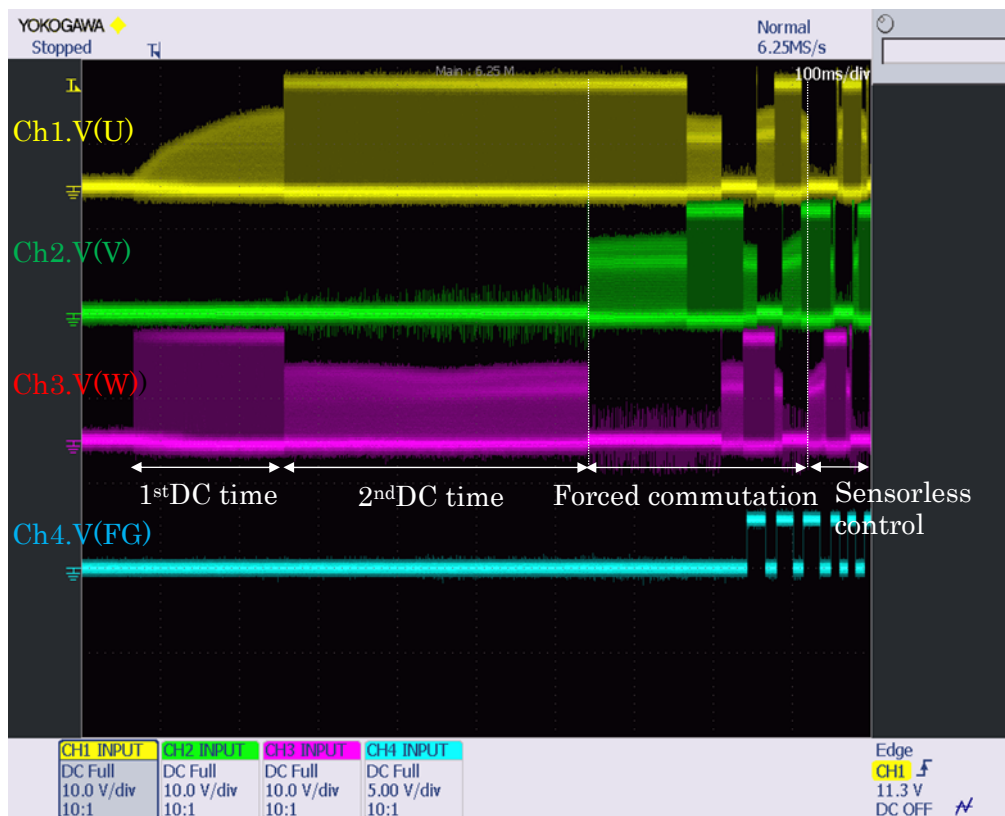

### 1.5. Idling Detection

This product does not perform the control of DC excitation and forced commutation when the motor is started from the idling state (the motor is using forward rotation), and it rotates with sensorless control from the beginning.

However, even if the motor is not idling, if the motor is vibrating due to an external factor, the position detection comparator may react and falsely detect it as an idling state. In such cases, set the hysteresis voltage so that the position detection comparator does not react. However, setting the hysteresis voltage makes it impossible to detect low-speed idling.

For example, when the power supply voltage is 15V, the maximum rotation speed is 3000rpm, and the hysteresis voltage of the position detection comparator is  $\pm 100\text{mV}$  (absolute value  $200\text{mV}$ ),  $3000\text{rpm} / 200\text{mV} / 15\text{V} = 40\text{rpm}$ , so rotation speeds of about 40rpm or less are not detected as idling. The startup sequence starts with DC excitation in the same startup sequence as when stopped.

Please note that if the motor is idling in the opposite direction, the startup sequence will start with DC excitation in the same starting sequence as when it was stopped.

Also, please note that regardless of the hysteresis voltage setting, if the idling speed is less than or equal to the detection time in the table below, the startup sequence starts with DC excitation in the same way as when idling.

Table 1.4 Forced Commutation Frequency

Resistor Settings 21[1:0] FST	Electrical Angular Frequency	Idling Detection Time (Electrical Angular Frequency)
00	1.6Hz	200ms (5Hz)
01	3.2Hz	100ms (10Hz)
10	6.4Hz	50ms (20Hz)
11	12.8Hz	25ms (40Hz)

### 1.6. Accelerating/Decelerating

In sensorless step, the acceleration/deceleration of the motor is controlled by limiting the amount of fluctuation in the Duty change.

The speed control is set by the Duty change limit and the Duty up time.

The time of the output Duty to reach the input value can be expressed by the following formula.

Output Duty time to reach input value = SPD input setting x Update time / (Duty change)

For example, if the following conditions are set,

When the SPD input (speed command) is input from 0% to 100% (full Duty, 512), SPD input setting = 512

DUTYCHG LIMIT: 001 setting, Duty change = 2/8

DUTY\_UP\_TIME: 0 setting, Duty up time = 2.7ms

The output Duty time to reach input value =  $512 \times 2.7\text{ms} / (2/8) = 5.5296\text{s}$

The output Duty changes by 2/8 every 2.7ms, meaning it takes 5.5296s to reach full Duty.

### 1.7. Position Detection


In position detection of the sensorless control of this product, the induced voltage (Back-EMF) of the motor is detected at the output PWM timing in the output OFF section. Therefore, the accuracy of position detection changes depending on the output PWM frequency, so it is recommended to set the output PWM frequency as 100 times or more than the rotation frequency (the frequency of 1 electrical angle).

However, if the output PWM frequency is set high when the rotation speed is slow, the induced voltage may not be detected because the induced voltage is small and the pulse time of the output PWM is short. Also, if the output PWM frequency is set low when the rotation speed is high, the number of output PWM pulses is small compared to the rotation speed, so position detection may shift.

For example, if the output PWM frequency = 23.4kHz and the rotation frequency of 1 electrical angle = 234Hz, then  $23.4\text{kHz} / 234\text{Hz} = 100$ , so set the output PWM frequency = 23.4kHz up to the rotation frequency of 1 electric angle = 234Hz. For rotation frequencies (to 469Hz) that exceed 234Hz, set output PWM frequency = 46.9kHz.

Depending on the characteristics of the motor and the characteristics of the external FET, the pulse width for detecting the induced voltage of the output PWM may not be sufficient due to the slew rate and ringing when the output PWM is switched, so the position of the motor may not be detected and unable to be used. In particular, there is a high possibility that a motor with a large L value, a high maximum rotation speed, and a large output current cannot be used.

Induced voltage (Back-EMF) waveform of motor operation  
120° commutation / Lead angle 0° / FG = 3ppr setting

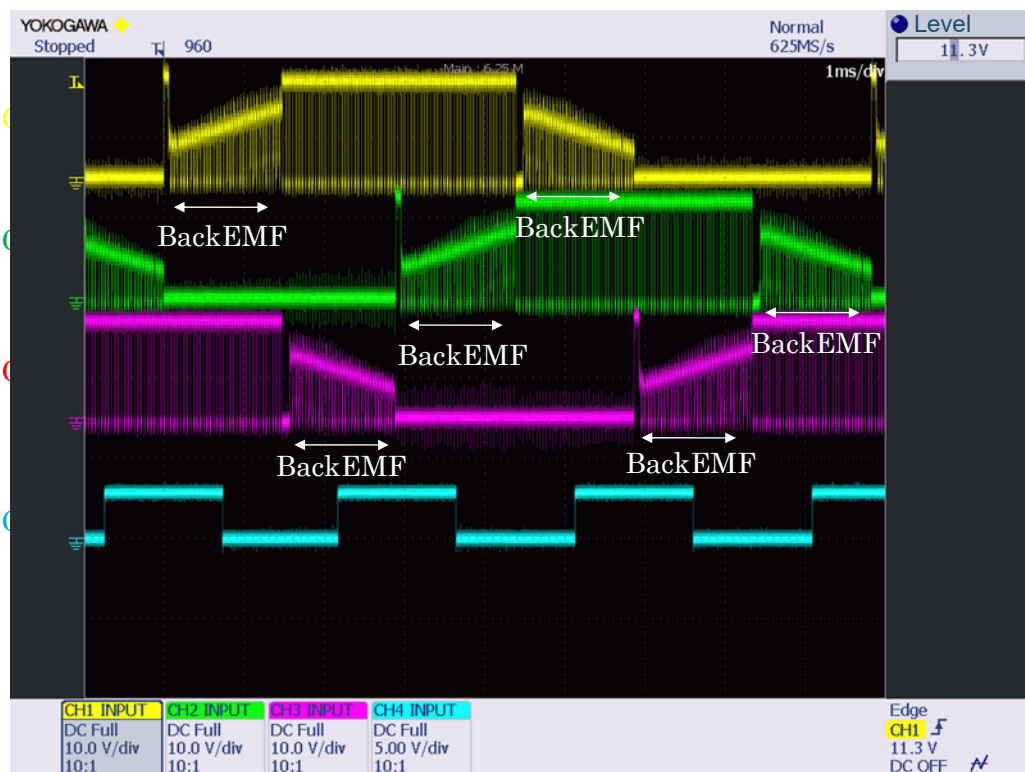

### 1.8. Maximum Rotation Speed

Abnormality detection of the maximum rotation frequency can be set as shown in the table below, but please set it with a margin of about 10% from the set value in consideration of the tolerance of this IC. In addition, it is recommended that the maximum applicable frequency of the motor is about 2.7kHz from the abnormality detection setting of the maximum rotation frequency and the output PWM frequency. For example, in the case of a 4-pole pair motor, the upper limit of the motor speed = 2.7kHz x 60s / 4-pole pair = 40.5krpm is a guideline for the maximum applicable motor speed.

Table 1.5 Abnormality Detection Setting of the Maximum Rotation Frequency

Resistor Settings 21[3:2] FMAX	Maximum Rotation Frequency
00	0.75kHz
01	1.5kHz
10	3kHz
11	Unavailable


### 1.9. Closed loop

Increasing the values of Kp and Ki will shorten the time to reach the target rotation speed, but may cause overshooting or vibration, so check it in actual operation before setting them. Also, Kp and Ki are dependent on each other, so changing one can affect the other as well.

### 1.10. Output PWM Frequency

To evaluate the initial setting, it is recommended to set the FPWM register as 111 (23.4kHz to 187.5kHz). However, as in the position detection of this product, detection is at the timing of the output PWM frequency, the position detection timing changes depending on the PWM frequency due to the influence of the motor rotation speed and the characteristics of the FET in the output stage. In the worst case, position detection may not be possible. In addition, the ripple of the output current may change and the efficiency may change, so check and set it on the actual machine.

Operation waveform with PWM = 23.4kHz set

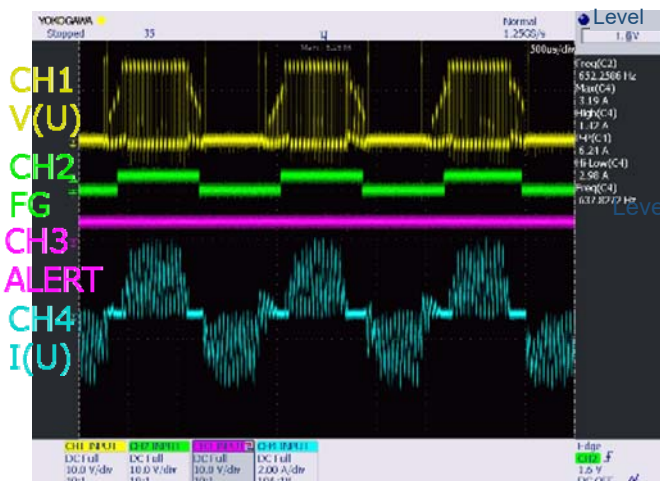

Operation waveform with PWM = 187.5kHz set







### 1.11. Commutation and Lead Angle Settings

Depending on the characteristics of the motor, efficiency and noise will change depending on the commutation method and lead angle setting, so check and set with the actual machine.


In the case of the following motor operation settings, the motor operation sound with 142.5° commutation / Lead angle 0° / With soft switching is the quietest.

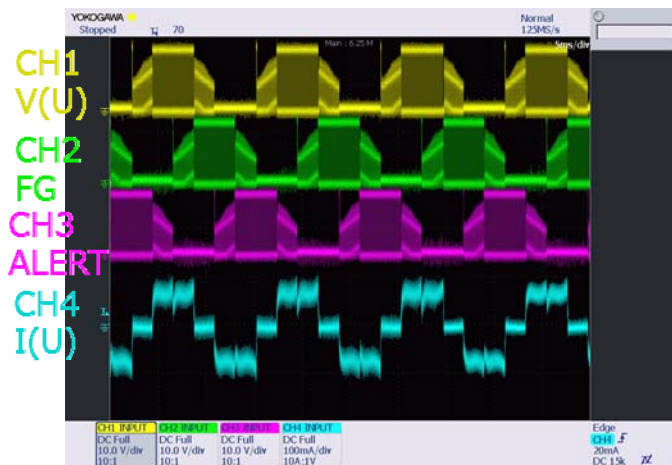


120° commutation / Lead angle 0° / Without soft switching setting  
Operating waveform

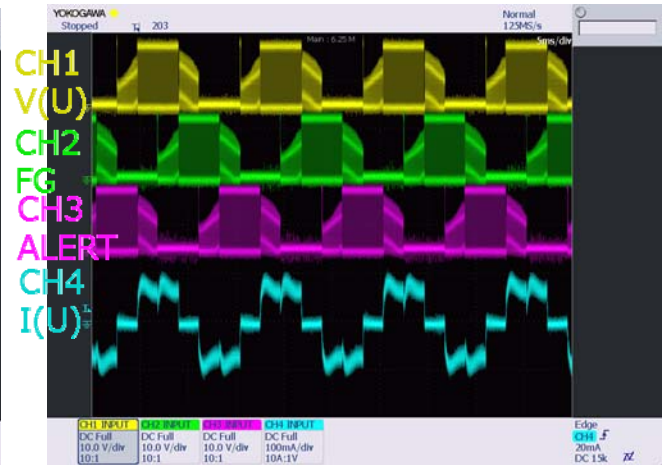


120° commutation / Lead angle 15° / Without soft switching setting  
Operating waveform

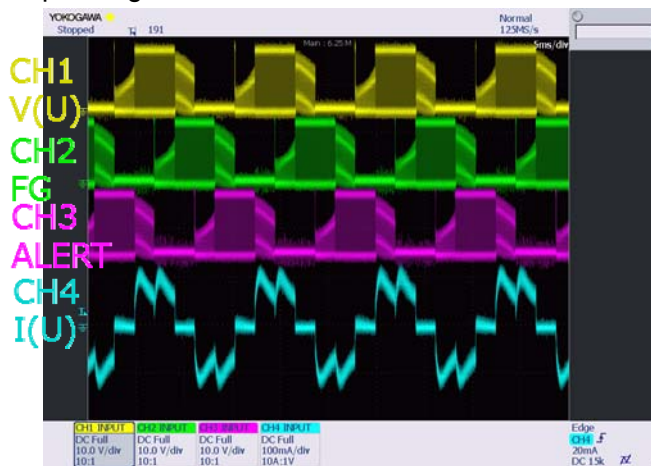


120° commutation / Lead angle 30° / Without soft switching setting  
Operating waveform

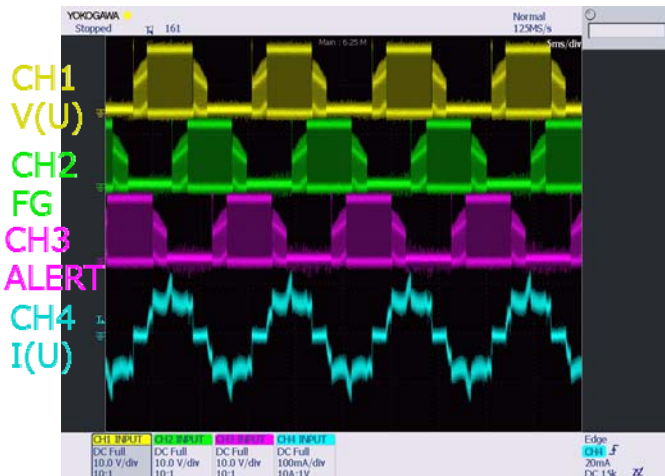


135° commutation / Lead angle 0° / Without soft switching setting  
Operating waveform

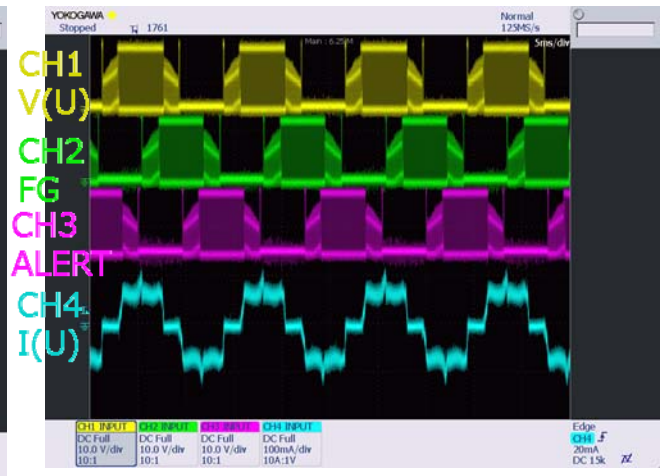


135° commutation / Lead angle 0° / With soft switching setting  
Operating waveform

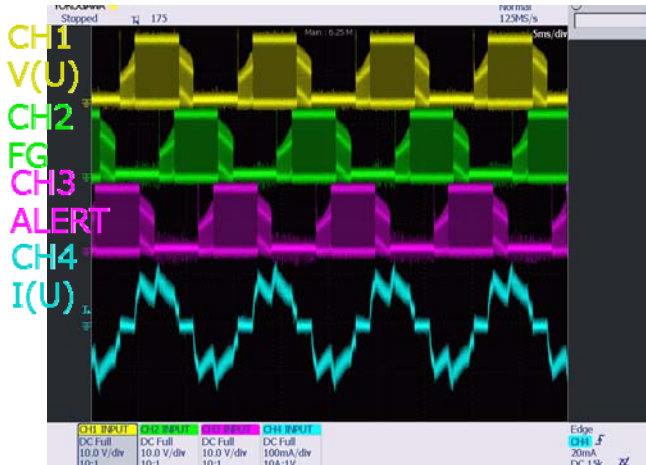


135° commutation / Lead angle 15° / Without soft switching setting  
Operating waveform

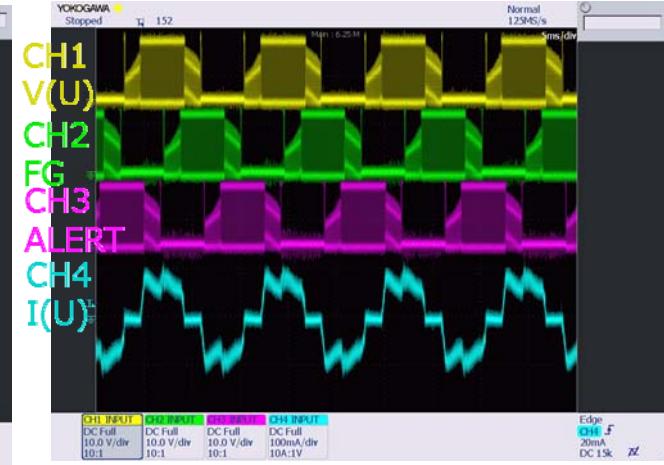


135° commutation / Lead angle 15° / With soft switching setting  
Operating waveform

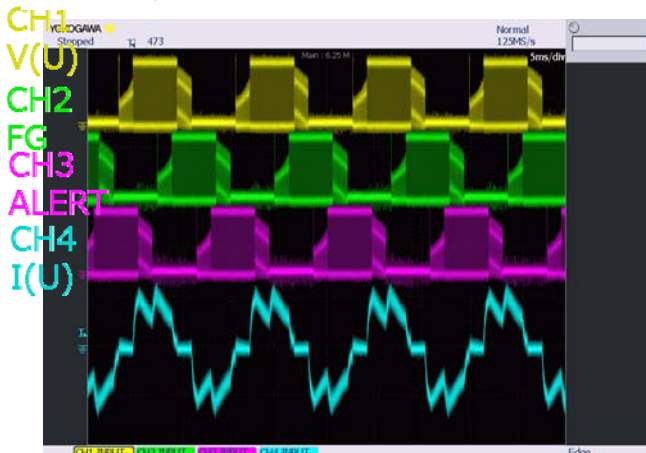


135° commutation / Lead angle 22.5° / Without soft switching setting  
Operating waveform

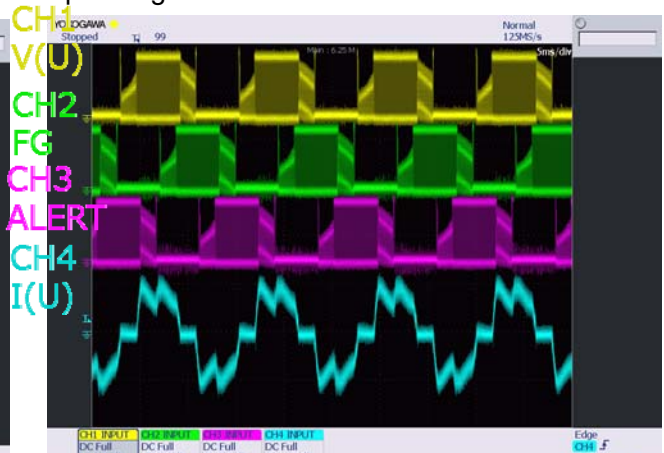


135° commutation / Lead angle 22.5° / With soft switching setting  
Operating waveform

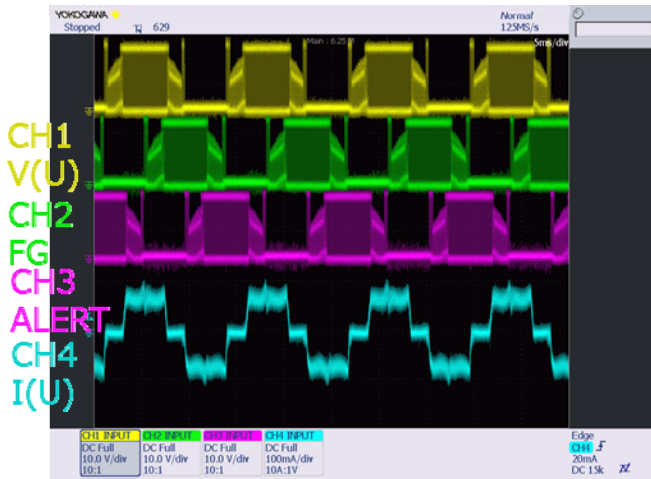


142.5° commutation / Lead angle 0° / With soft switching setting  
Operating waveform

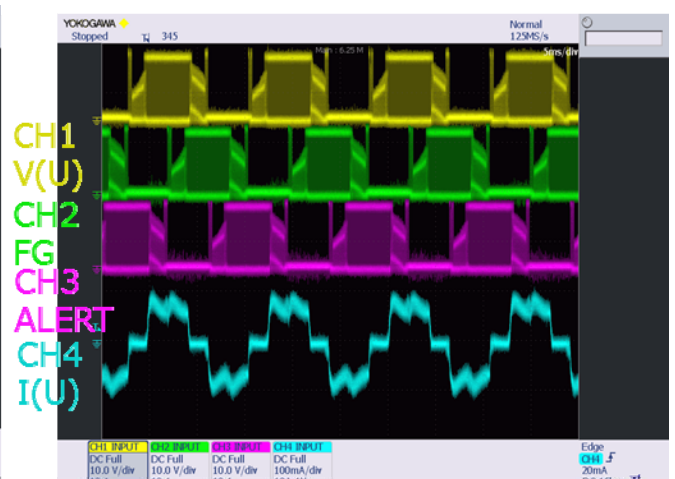


142.5° commutation / Lead angle 15° / With soft switching setting  
Operating waveform

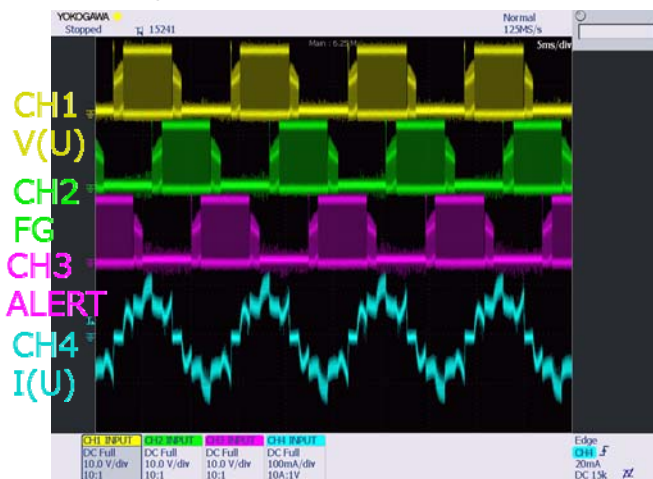


150° commutation / Lead angle 0° / Without soft switching setting  
Operating waveform

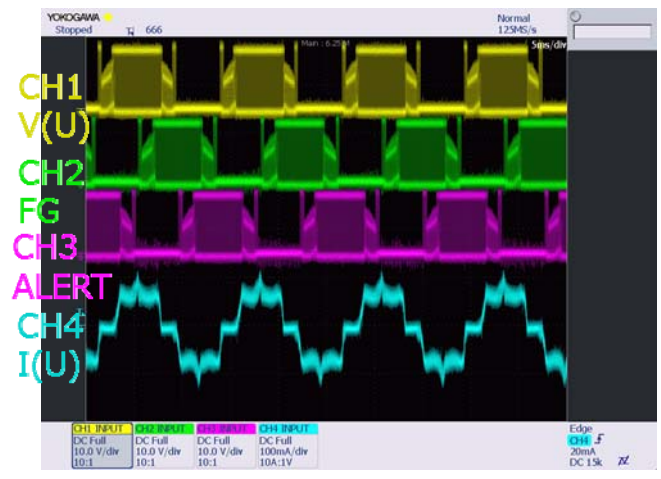

150° commutation / Lead angle 0° / With soft switching setting  
Operating waveform

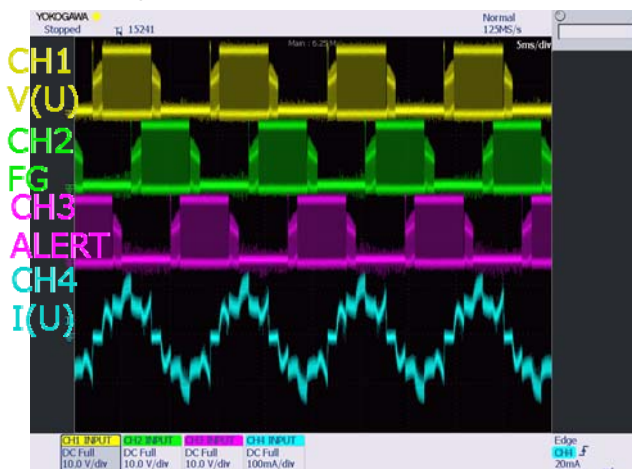

150° commutation / Lead angle 15° / Without soft switching setting  
Operating waveform

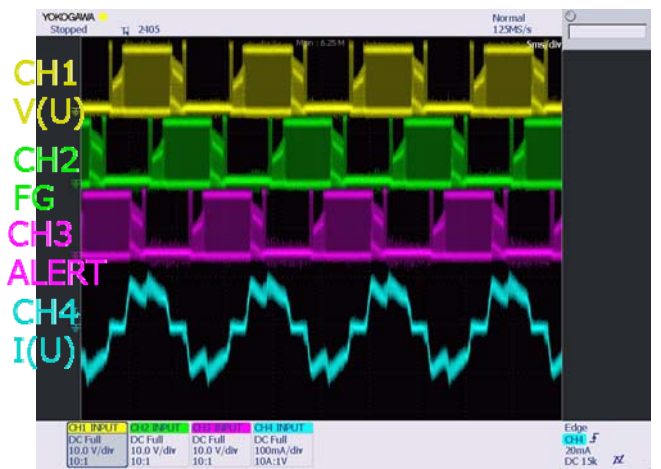

150° commutation / Lead angle 15° / With soft switching setting  
Operating waveform



## Notes on Contents

(1) Block Diagrams

Some of the functional blocks, circuits, or constants in the block diagram may be omitted or simplified for explanatory purposes.

(2) Equivalent Circuits

The equivalent circuit diagrams may be simplified or some parts of them may be omitted for explanatory purposes.

(3) Timing Charts

Timing charts may be simplified for explanatory purposes.

(4) Application Circuits

The application circuits shown in this document are provided for reference purposes only. Thorough evaluation is required, especially at the mass production design stage. Providing these application circuit examples does not grant a license for industrial property rights.

## IC Usage Considerations

### Notes on handling of ICs

[1] The absolute maximum ratings of a semiconductor device are a set of ratings that must not be exceeded, even for a moment.

Do not exceed any of these ratings.

Exceeding the rating(s) may cause the device breakdown, damage or deterioration, and may result injury by explosion or combustion.

[2] Use an appropriate power supply fuse to ensure that a large current does not continuously flow in case of over current and/or IC failure. The IC will fully break down when used under conditions that exceed its absolute maximum ratings, when the wiring is routed improperly or when an abnormal pulse noise occurs from the wiring or load, causing a large current to continuously flow and the breakdown can lead smoke or ignition. To minimize the effects of the flow of a large current in case of breakdown, appropriate settings, such as fuse capacity, fusing time and insertion circuit location, are required.

[3] If your design includes an inductive load such as a motor coil, incorporate a protection circuit into the design to prevent device malfunction or breakdown caused by the current resulting from the inrush current at power ON or the negative current resulting from the back electromotive force at power OFF. IC breakdown may cause injury, smoke or ignition.

Use a stable power supply with ICs with built-in protection functions. If the power supply is unstable, the protection function may not operate, causing IC breakdown. IC breakdown may cause injury, smoke or ignition.

[4] Do not insert devices in the wrong orientation or incorrectly.

Make sure that the positive and negative terminals of power supplies are connected properly.

Otherwise, the current or power consumption may exceed the absolute maximum rating, and exceeding the rating(s) may cause the device breakdown, damage or deterioration, and may result injury by explosion or combustion.

In addition, do not use any device that is applied the current with inserting in the wrong orientation or incorrectly even just one time.

**Points to remember on handling of ICs****(1) Over current Protection Circuit**

Over current protection circuits (referred to as current limiter circuits) do not necessarily protect ICs under all circumstances. If the over current protection circuits operate against the over current, clear the over current status immediately.

Depending on the method of use and usage conditions, such as exceeding absolute maximum ratings can cause the over current protection circuit to not operate properly or IC breakdown before operation. In addition, depending on the method of use and usage conditions, if over current continues to flow for a long time after operation, the IC may generate heat resulting in breakdown.

**(2) Heat Radiation Design**

In using an IC with large current flow such as power amp, regulator or driver, please design the device so that heat is appropriately radiated, not to exceed the specified junction temperature ( $T_j$ ) at any time and condition. These ICs generate heat even during normal use. An inadequate IC heat radiation design can lead to decrease in IC life, deterioration of IC characteristics or IC breakdown. In addition, please design the device taking into consideration the effect of IC heat radiation with peripheral components.

**(3) Back-EMF**

When a motor reverses the rotation direction, stops or slows down abruptly, a current flow back to the motor's power supply due to the effect of back-EMF. If the current sink capability of the power supply is small, the device's motor power supply and output pins might be exposed to conditions beyond absolute maximum ratings. To avoid this problem, take the effect of back-EMF into consideration in system design.

The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right is granted by this document, whether express or implied, by estoppel or otherwise.

## RESTRICTIONS ON PRODUCT USE

Toshiba Corporation and its subsidiaries and affiliates are collectively referred to as "TOSHIBA". Hardware, software and systems described in this document are collectively referred to as "Product".

- TOSHIBA reserves the right to make changes to the information in this document and related Product without notice.
- This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's written permission, reproduction is permissible only if reproduction is without alteration/omission.
- Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before customers use the Product, create designs including the Product, or incorporate the Product into their own applications, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the "TOSHIBA Semiconductor Reliability Handbook" and (b) the instructions for the application with which the Product will be used with or for. Customers are solely responsible for all aspects of their own product design or applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. **TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.**
- **PRODUCT IS NEITHER INTENDED NOR WARRANTED FOR USE IN EQUIPMENTS OR SYSTEMS THAT REQUIRE EXTRAORDINARILY HIGH LEVELS OF QUALITY AND/OR RELIABILITY, AND/OR A MALFUNCTION OR FAILURE OF WHICH MAY CAUSE LOSS OF HUMAN LIFE, BODILY INJURY, SERIOUS PROPERTY DAMAGE AND/OR SERIOUS PUBLIC IMPACT ("UNINTENDED USE").** Except for specific applications as expressly stated in this document, Unintended Use includes, without limitation, equipment used in nuclear facilities, equipment used in the aerospace industry, lifesaving and/or life supporting medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, and devices related to power plant. **IF YOU USE PRODUCT FOR UNINTENDED USE, TOSHIBA ASSUMES NO LIABILITY FOR PRODUCT.** For details, please contact your TOSHIBA sales representative or contact us via our website.
- Do not disassemble, analyze, reverse-engineer, alter, modify, translate or copy Product, whether in whole or in part.
- Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable laws or regulations.
- The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right is granted by this document, whether express or implied, by estoppel or otherwise.
- **ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF SALE FOR PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR LOSS, INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION AND LOSS OF DATA, AND (2) DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS RELATED TO SALE, USE OF PRODUCT, OR INFORMATION, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY OF INFORMATION, OR NONINFRINGEMENT.**
- Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). Product and related software and technology may be controlled under the applicable export laws and regulations including, without limitation, the Japanese Foreign Exchange and Foreign Trade Law and the U.S. Export Administration Regulations. Export and re-export of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and regulations.
- Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS compatibility of Product. Please use Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. **TOSHIBA ASSUMES NO LIABILITY FOR DAMAGES OR LOSSES OCCURRING AS A RESULT OF NONCOMPLIANCE WITH APPLICABLE LAWS AND REGULATIONS.**

---

## TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION

<https://toshiba.semicon-storage.com/>