<u>M4G Group (1)</u> <u>Application Note</u> <u>32-bit Timer Event Counter</u> <u>(T32A-B)</u> <u>Rectangular Wave Output Function</u>

Outlines

This application note is a reference material for developing products using rectangular wave output (PPG) function in the 32-bit timer event counter (T32A) functions of M4G Group (1).

This document helps the user check operation of the products and develop its programs.

Target sample program: Timer_PPG

Table of Contents

Outlines1
Table of Contents2
1. Preface
2. Reference Document
3. Function to Use
4. Target Device4
5. Operation Confirmation Condition
6. Evaluation Board Setting6
7. Operation of Evaluation Board
8. Outline of T32A Function7
9. Sample Program9
9.1. Initialization9
9.2. Sample Program Main Operation10
9.3. Output Example of Sample Program11
9.3.1. Setting Example of Terminal Software11
9.4. Duty Setting Change12
9.5. Operating Flow of Sample Program13
10. Precaution
11. Revision History20
RESTRICTIONS ON PRODUCT USE




1. Preface

This sample program executes to start the PPG output of the timer function when the PL4 push SW (S4) is pushed down.

When the PL5 Push SW (S5) is pushed down, the PPG output stops. And the duty ratio is changed to 10 %, 25 %, 50 %, 75%, or 90%, one after the other, by the push-down.

Structure diagram of Sample program

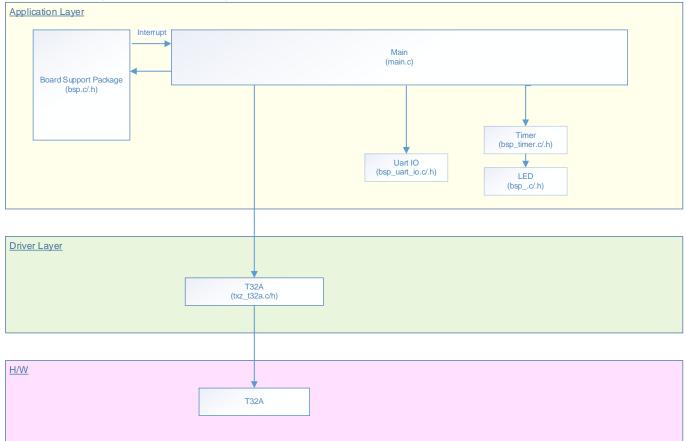

2. Reference Document

- Datasheet
- TMPM4G Group (1) datasheet Rev1.0 (Japanese edition)
- Reference manual 32-bit Timer Event Counter (T32A-B) Rev.2.1 (Japanese edition) Asynchronous Serial Communication Circuit (UART-C) Rev3.0 (Japanese edition) Input/Output Ports (PORT-M4G(1)) Rev.1.0 (Japanese edition) Exception (EXCEPT-M4G(1)) Rev1.0 (Japanese edition)
- Application note M4G Group (1) Application Note Startup(CMSIS System &Clock Configuration) Rev1.0
 Other reference document
 - Other reference document TMPM4G (1) Group Peripheral Driver User Manual (Doxygen)

3. Function to Use

IP	Channel	Port	Function/Operation mode
Asynchronous Serial	ch0	PE2(UT0RXD)	UART mode
Communication Circuit		PE3(UT0TXDA)	
Input/Output ports	-	PL4(INT12b)	External interrupt
	-	PL5(INT13b)	
32-bit Timer Event	ch0	-	Interval timer
Counter	ch3	PB4(T32A03OUTA)	PPG operation

4. Target Device

The target devices of this application note are as follows;

TMPM4G9F15FG	TMPM4G9F10FG	TMPM4G9FEFG	TMPM4G9FDFG
TMPM4G9F15XBG	TMPM4G9F10XBG	TMPM4G9FEXBG	TMPM4G9FDXBG
TMPM4G8F15FG	TMPM4G8F10FG	TMPM4G8FEFG	TMPM4G8FDFG
TMPM4G8F15XBG	TMPM4G8F10XBG	TMPM4G8FEXBG	TMPM4G8FDXBG
	TMPM4G7F10FG	TMPM4G7FEFG	TMPM4G7FDFG
	TMPM4G6F10FG	TMPM4G6FEFG	TMPM4G6FDFG

*This sample program operates on the evaluation board of TMPM4G9F15FG.

If other function than the TMPM4G9F15 one is checked, it is necessary that CMSIS Core related files (C startup file and I/O header file) should be changed properly.


The BSP related file is dedicated to the evaluation board (TMPM4G9F15). If other function than the TMPM4G9F15 one is checked, the BSP related file should be changed properly.



5. Operation Confirmation Condition

Used microcontroller Used board Unified development environment Unified development environment Terminal software Sample program TMPM4G9F15FG TMPM4G9F15FG Evaluation Board by Sensyst IAR Embedded Workbench for ARM 8.11.2.13606 µVision MDK Version 5.24.2.0 TeraTerm V4.96 V1000

Evaluation board (TMPM4G9F15FG Evaluation Board) Top view

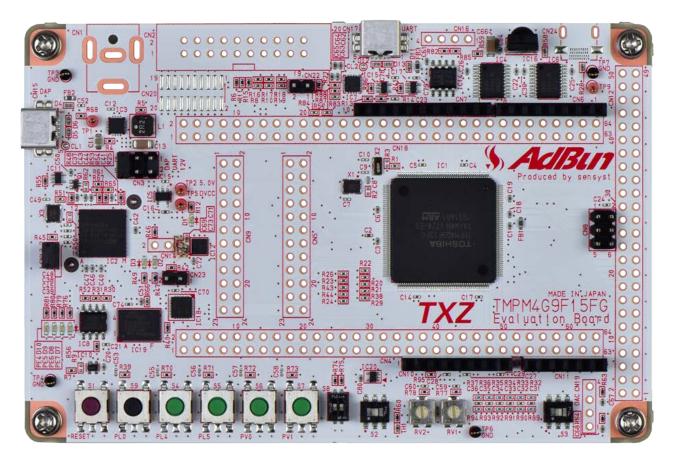


6. Evaluation Board Setting

The following pin connections should be done on the evaluation board.

CN5					
Board function	Through-hole No.	Through-hole No.			
USB UART conversion	1: USB_UT_RX	2: PE2			
USB UART conversion	3: USB_UT_TX	4: PE3			

	CN4	
Board function	Through-hole No.	Through-hole No.
Push switch (S5)	43: SW_INT1	44: PL5
Push switch (S4)	45: SW_INT0	46: PL4

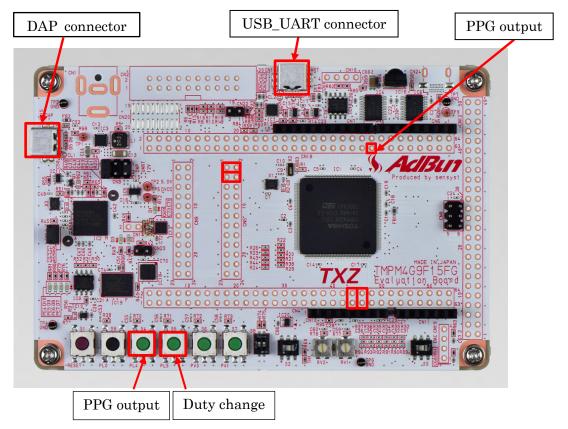

7. Operation of Evaluation Board

The PPG output and the duty ratio can be set using the push switches.

Кеу	Function
Push switch (S4): PL4	PPG output: start
Push switch (S5): PL5	Duty ratio change/PPG output stop

The duty ratios preset in this sample program are 10 %, 25 %, 50 %, 75 %, and 90 %. The PPG output can be monitored at PB4 (T32A03OUTA). (It can be monitored at CN18: 47 pin.)

8. Outline of T32A Function

T32A can work as a 16-bit timer (timer A, timer B) of 2ch or a 32-bit timer (timer C) of 1ch by 1UNIT circuit unit. The following table shows the list of the functions of the T32A.

Function category		Function		Description
	Time control Interval timer		mer	This function generates interrupt to CPU at set interval time.
		Event counter		Up counting or down counting or up/down counting can be selected as count operation. And when the count value matches the timer register, you can generate timer interrupt.
	Measurement control		Frequency measurement	Capture count value on rising edge and falling edge of input pulse. You can calculate frequency from difference of capture data.
16-bit timer		Capture	Pulse width measurement	Capture count value on rising edge and falling edge of input pulse. You can calculate Pulse Width from difference of capture data.
Timer A			Time difference measurement	Capture count value on rising edge or falling edge of input pulse. You can calculate Time difference from difference of capture data.
	Rectangular wave output			Can output rectangular wave of arbitrary frequency or arbitrary duty.
		Counter s	start	Timer counter start the count in synch with count start of master timer counter.
	Synchronous Operation	Counter stop		Timer counter stop the count in synch with count stop of master timer counter.
		Counter reload		Timer counter is reloaded in synch with reload of master timer counter.
	Time control	Interval timer		This function generates interrupt to CPU at set interval time.
	Measurement control	Event counter		Up counting or down counting or up/down counting can be selected as count operation. And when the count value matches the timer register, you can generate timer interrupt.
		Capture	Frequency measurement	Capture count value on rising edge and falling edge of input pulse. You can calculate frequency from difference of capture data.
16-bit timer			Pulse width measurement	Capture count value on rising edge and falling edge of input pulse. You can calculate Pulse Width from difference of capture data.
Timer B			Time difference measurement	Capture count value on rising edge or falling edge of input pulse. You can calculate Time difference from difference of capture data.
	Rectangular wave output	PPG		Can output rectangular wave of arbitrary frequency or arbitrary duty.
		Counter start		Timer counter start the count in synch with count start of master timer counter.
	Synchronous Operation	Counter stop		Timer counter stop the count in synch with count stop of master timer counter.
		Counter reload		Timer counter is reloaded in synch with reload of master timer counter.

Function category		Function		Description
Time control	Interval timer		This function generates interrupt to CPU at set interval time.	
Measurement control	Event counter		Up counting or down counting or up/down counting can be selected as count operation. And when the count value matches the timer register, you can generate timer interrupt.	
	Pulse count	1-phase pulse count	The change of the T32AxINC0 input signal or the T32AxINC1 input signal is counted. The counter can select a count increment or decrement.	
		2-phase pulse count	The change of the combination of the T32AxINC0 input signal and the T32AxINC1 input signal increments or decrements the counter value.	
timer		Capture	Frequency measurement	Capture count value on rising edge and falling edge of input pulse. You can calculate frequency from difference of capture data.
Timer C			Pulse width measurement	Capture count value on rising edge and falling edge of input pulse. You can calculate Pulse Width from difference of capture data.
			Time difference measurement	Capture count value on rising edge or falling edge of input pulse. You can calculate Time difference from difference of capture data.
	Rectangular wave output	PPG		Can output rectangular wave of arbitrary frequency or arbitrary duty.
		Counter start		Timer counter start the count in synch with count start of master timer counter.
	Synchronous Operation	Counter stop		Timer counter stop the count in synch with count stop of master timer counter.
		Counter reloa	ad	Timer counter is reloaded in synch with reload of master timer counter.

9. Sample Program

When Low input is detected at PL4, the PPG output starts. When Low input is detected at PL5, the PPG output stops. And the duty ratio is changed. The terminal software displays the duty ratio value.

The pulse width has been set to 500 µs in this sample program. 5 values are defined for the duty ratio of the PPG output (50 µs, 125 µs, 250 µs, 375 µs, and 450 µs) Those values generate 5 duty ratios, 10 %, 25 %, 50 %, 75 %, and 90 %, respectively.

9.1. Initialization

The following initialization is done after power is supplied. The initialization of each clock setting and the setting of the watchdog timer are done.



9.2. Sample Program Main Operation

The definition is set for the duty ratio of the PPG output signal. The BSP (Board Support Package) is initialized. The timer is initialized. The setting of the pulse output is initialized. The application is initialized. The timer starts after the USB-UART interface and the switches are initialized.


The status of the switches is polled. A push-down of a switch starts its corresponding operation. The polling is done using the ch0 of the Timer A. The pulse with the width of 500 μ s and the duty ratio of 10 % is output initially. The pulse is generated using the ch3 of the Timer A.

When the SW4 push-down is detected, the pulse is output. When the SW5 push-down is detected, the duty ratio changes from 10 %, 25 %, 50 %, 75 %, 90 %, and 10% again, in the order.

The terminal software displays the operation status.

When the value of the Timer A counter matches the values of the timer registers (**[T32AxRGA0]** and **[T32AxRGA1]**), the output signal from T32A03OUTA pin is changed High or Low, respectively, which a pulse with a predetermined width can be generated.

The following example is an output wave with a duty ratio of 25 % (Low active).

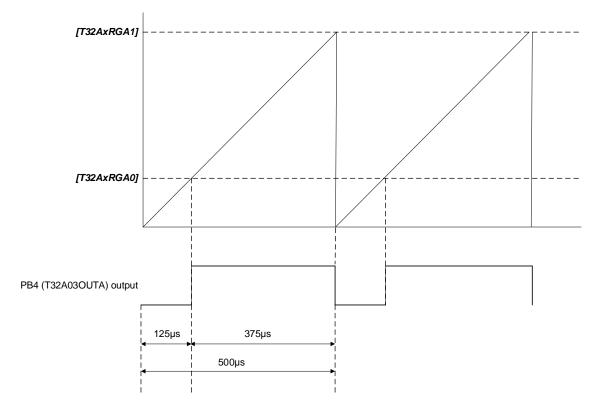



9.3. Output Example of Sample Program

After the sample program starts to operate, the command results are displayed as shown in the following.

PPG Output
Duty: 10%
Change to Duty: 25%
Change to Duty: 50%
Change to Duty: 75%
Change to Duty: 90%
Change to Duty: 10%
Change to Duty: 25%
PPG Output
Duty: 25%

9.3.1. Setting Example of Terminal Software

The operation of the terminal software (Tera Term) has been checked with the following settings.

Tera Term: Serial port se	tup			
<u>P</u> ort:	COM6	•	ОК	
Baud rate:	115200	•		
<u>D</u> ata:	8 bit	•	Cancel	
P <u>a</u> rity:	none	•		
<u>S</u> top:	1 bit	•	<u>H</u> elp	
Elow control:	none	•		
Transmit delay		ms	ec/ <u>l</u> ine	
Tera Term: Terminal setu	qu			— X
		New-	ive: AUTO -	OK
Term size = window response in the size is a size in the size in the size is a size in the size is a size in the size in the size in the size in the size is a size in the size		Trans	mit: CR+LF ▼	Cancel
Terminal <u>I</u> D: VT1		L	ocal echo	<u>H</u> elp
<u>A</u> nswerback:		A III	Auto switch (VT<-	>TEK)

9.4. Duty Setting Change

When the duty is changed, the following setting should be modified. static uint32_t tgtRisingTiming[5U] = { 10U, 25U, 50U, 75U, 90U }; 5 values are available from 10 % to 90 % in the above setting.


The following equations are used in this sample program. Pulse width setting p_pulse->init.pulse_trailing = 500U; 500-µs pulse width is defined above. Duty setting

RisingTimingus[i] = tgtRisingTiming[i] * 5U; The Low time is set by the equation above. The duty ratios of 10 %, 25 %, 50 %, 75 %, and 90 % are defined in tgtRisingTiming[i]. The rising times are calculated to 50, 125, 250, 375, and 450 μ s, respectively. The pulse width is supposed to be 500 μ s to calculate the duty ratios.


If the duty ratio is changed, the corresponding set value should be changed in the following. static uint32_t tgtRisingTiming[5U] = { 10U, 25U, 50U, 75U, 90U };


9.5. Operating Flow of Sample Program

The basic operating flows of the sample program are shown in the following;

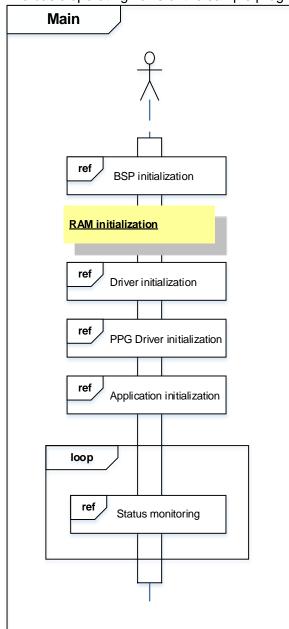





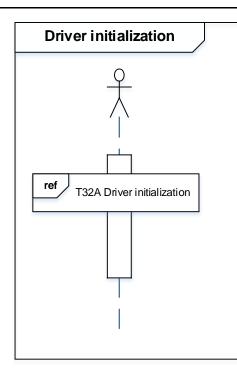


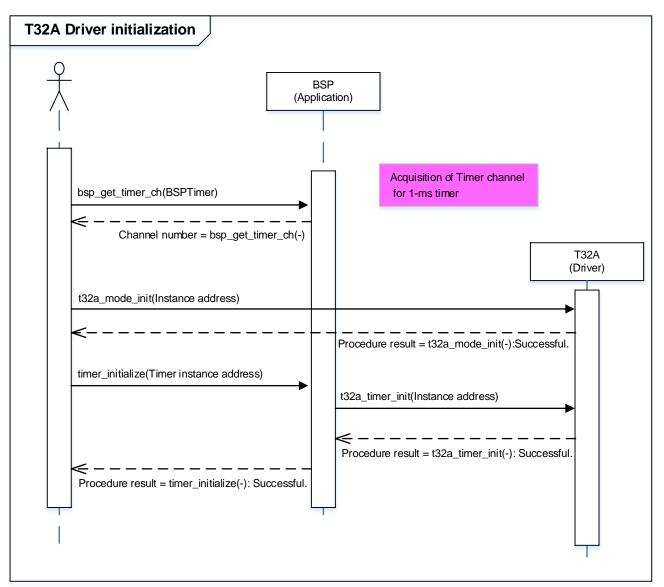




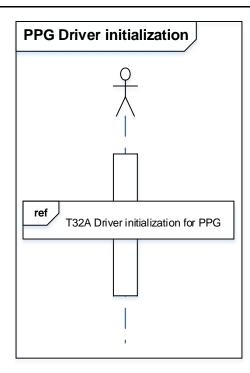

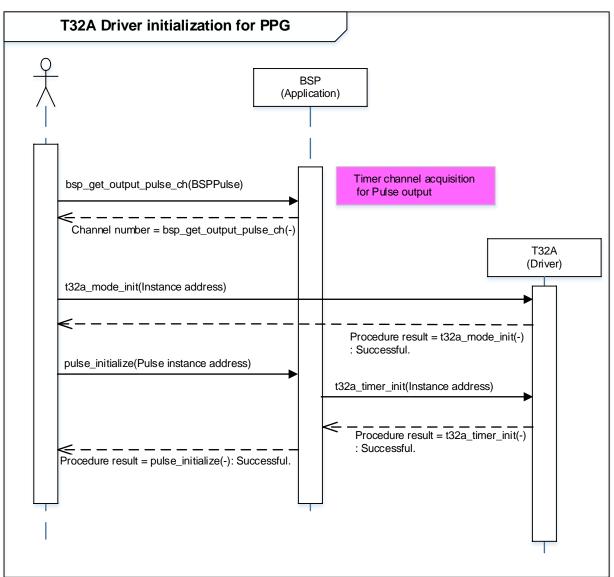


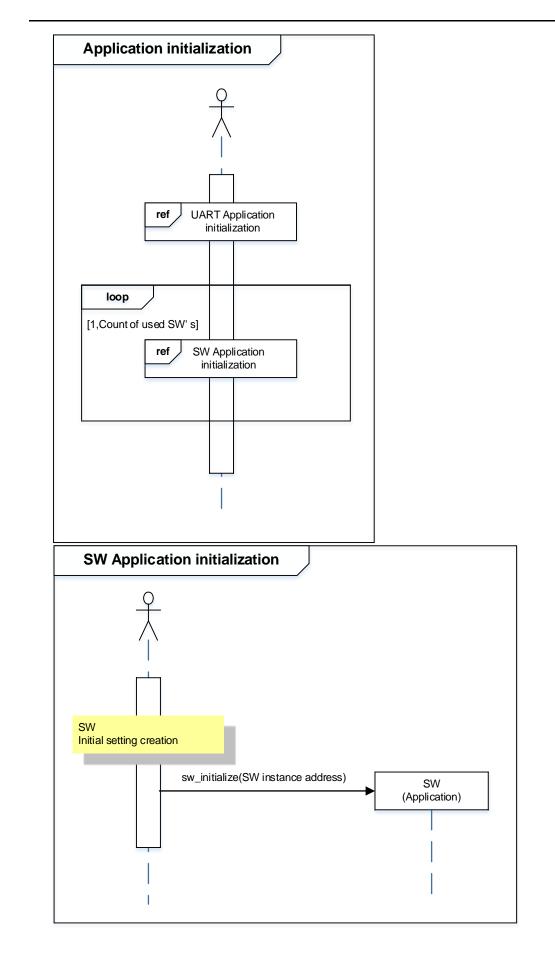




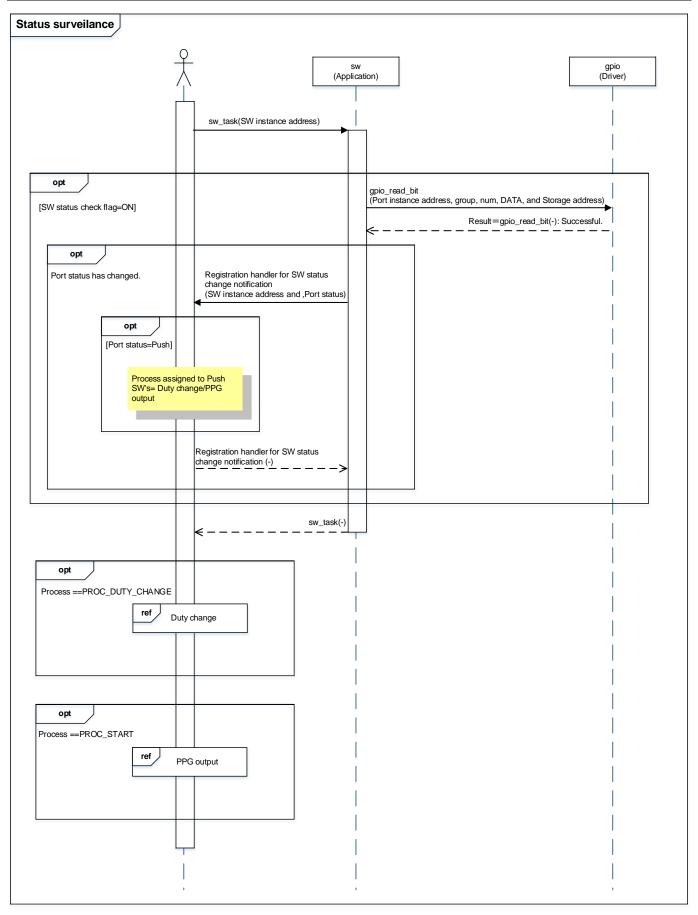



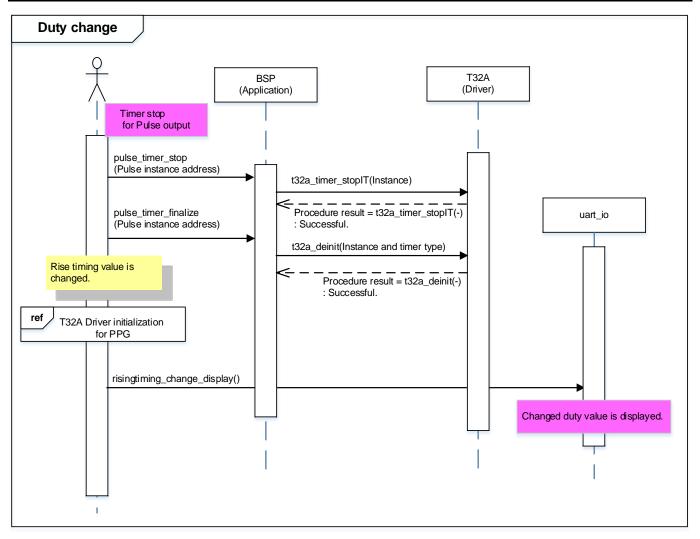



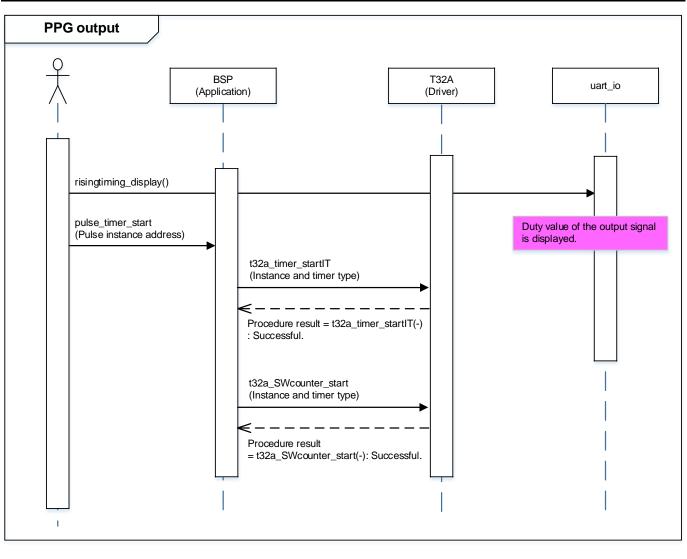



10. Precaution

When using the sample program with CPU other than TMPM4G9F15, please check operation sufficiently.

11. Revision History

Rev	Date	Page	Description
1.0	2018-12-12	-	First release

RESTRICTIONS ON PRODUCT USE

Toshiba Corporation and its subsidiaries and affiliates are collectively referred to as "TOSHIBA". Hardware, software and systems described in this document are collectively referred to as "Product".

- TOSHIBA reserves the right to make changes to the information in this document and related Product without notice.
- This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's
 written permission, reproduction is permissible only if reproduction is without alteration/omission.
- Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before customers use the Product, create designs including the Product, or incorporate the Product into their own applications, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the "TOSHIBA Semiconductor Reliability Handbook" and (b) the instructions for the application with which the Product will be used with or for. Customers are solely responsible for all aspects of their own product design or applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.
- PRODUCT IS NEITHER INTENDED NOR WARRANTED FOR USE IN EQUIPMENTS OR SYSTEMS THAT REQUIRE EXTRAORDINARILY HIGH LEVELS OF QUALITY AND/OR RELIABILITY, AND/OR A MALFUNCTION OR FAILURE OF WHICH MAY CAUSE LOSS OF HUMAN LIFE, BODILY INJURY, SERIOUS PROPERTY DAMAGE AND/OR SERIOUS PUBLIC IMPACT ("UNINTENDED USE"). Except for specific applications as expressly stated in this document, Unintended Use includes, without limitation, equipment used in nuclear facilities, equipment used in the aerospace industry, lifesaving and/or life supporting medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, and devices related to power plant. IF YOU USE PRODUCT FOR UNINTENDED USE, TOSHIBA ASSUMES NO LIABILITY FOR PRODUCT. For details, please contact your TOSHIBA sales representative or contact us via our website.
- Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable laws or regulations.
- The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right is granted by this document, whether express or implied, by estoppel or otherwise.
- ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF SALE FOR PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR LOSS, INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION AND LOSS OF DATA, AND (2) DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS RELATED TO SALE, USE OF PRODUCT, OR INFORMATION, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY OF INFORMATION, OR NONINFRINGEMENT.
- Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). Product and related software and technology may be controlled under the applicable export laws and regulations including, without limitation, the Japanese Foreign Exchange and Foreign Trade Law and the U.S. Export Administration Regulations. Export and re-export of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and regulations.
- Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS compatibility of Product. Please
 use Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without
 limitation, the EU RoHS Directive. TOSHIBA ASSUMES NO LIABILITY FOR DAMAGES OR LOSSES OCCURRING AS A RESULT OF
 NONCOMPLIANCE WITH APPLICABLE LAWS AND REGULATIONS.

TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION https://toshiba.semicon-storage.com/