

M4G Group (1) Application Note Trimming Circuit (TRM-A)

Outlines

This application note is a reference material for developing products using Trimming Circuit (TRM) function of M4G group (1). This document helps the user check operation of the products and develop its programs.

Target sample program: TRMOSC_M4G9



Table of Contents


Outlines	1
Table of Contents	2
1. Preface	3
2. Reference Document	4
3. Function to Use	4
4. Target Device	4
5. Operation Confirmation Condition	5
6. Evaluation Board Setting	6
7. Operation of Evaluation Board	6
8. Outline of TRM Function	7
9. Sample Program	8
9.1. Initialization	8
9.2. Sample Program Main Operation	8
9.3. Change of Frequency Measurement Setting	9
9.4. Output Example of Sample Program	10
9.4.1. Setting Example of Terminal Software	11
9.5. Operating Flow of Sample Program	12
10. Precaution	14
11. Revision History	14
RESTRICTIONS ON PRODUCT USE	15



1. Preface

This sample program should be used to check the operation of the Trimming circuit function. The internal high-speed oscillator is trimmed repeatedly until its frequency becomes a target one.

Structure diagram of Sample program

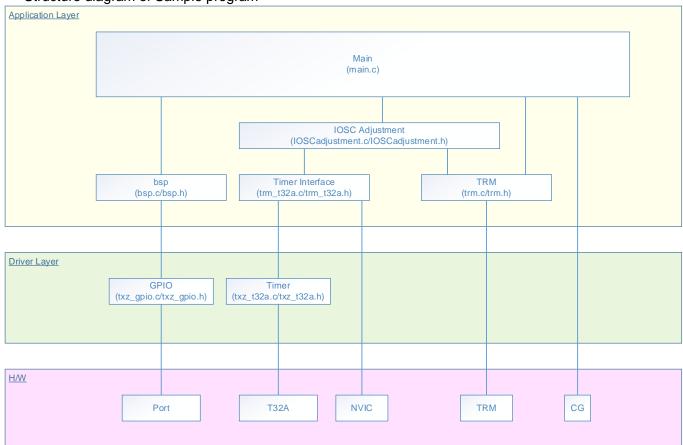



2. Reference Document

Datasheet

TMPM4G Group (1) datasheet Rev1.0 (Japanese edition)

· Reference manual

Trimming Circuit (TRM-A) Rev2.0 (Japanese edition)

32-bit Timer Event Counter (T32A-B) Rev2.1 (Japanese edition)

Asynchronous Serial Communication Circuit (UART-C) Rev3.0 (Japanese edition)

· Application note

M4G Group (1) Application Note Startup (CMSIS System & Clock Configuration) Rev1.0

• Other reference document

TMPM4G (1) Group Peripheral Driver User Manual (Doxygen)

3. Function to Use

IP	Channel	Port	Function/Operation mode
Trimming Circuit	-	-	Adjustment of the
			frequency of the internal oscillator
Asynchronous Serial	ch0	PE2 (UT0RXD)	UART mode
Communication Circuit		PE3 (UT0TXDA)	
32-bit Timer Event	ch0	PA1 (T32A00OUTA)	Rectangular Wave Output
Counter	ch8	-	Interval timer and Capture
	ch2	PB0 (T32A02INA0)	External clock input

4. Target Device

The target devices of this application note are as follows;

TMPM4G9F15FG	TMPM4G9F10FG	TMPM4G9FEFG	TMPM4G9FDFG
TMPM4G9F15XBG	TMPM4G9F10XBG	TMPM4G9FEXBG	TMPM4G9FDXBG
TMPM4G8F15FG	TMPM4G8F10FG	TMPM4G8FEFG	TMPM4G8FDFG
TMPM4G8F15XBG	TMPM4G8F10XBG	TMPM4G8FEXBG	TMPM4G8FDXBG
	TMPM4G7F10FG	TMPM4G7FEFG	TMPM4G7FDFG
	TMPM4G6F10FG	TMPM4G6FEFG	TMPM4G6FDFG

^{*} This sample program operates on the evaluation board of TMPM4G9F15FG.

If other function than the TMPM4G9F15 one is checked, it is necessary that CMSIS Core related files (C startup file and I/O header file) should be changed properly.

The BSP related file is dedicated to the evaluation board (TMPM4G9F15). If other function than the TMPM4G9F15 one is checked, the BSP related file should be changed properly.

2018-12-14 **4 / 15** Rev 1.0




5. Operation Confirmation Condition

Used microcontroller
Used board
Unified development environment
Unified development environment
Terminal software
Sample program

TMPM4G9F15FG
TMPM4G9F15FG Evaluation Board by Sensyst
IAR Embedded Workbench for ARM 8.11.2.13606
µVision MDK Version 5.24.2.0
Tera Term V4.96
V1000

Evaluation board (TMPM4G9F15FG Evaluation Board) Top view

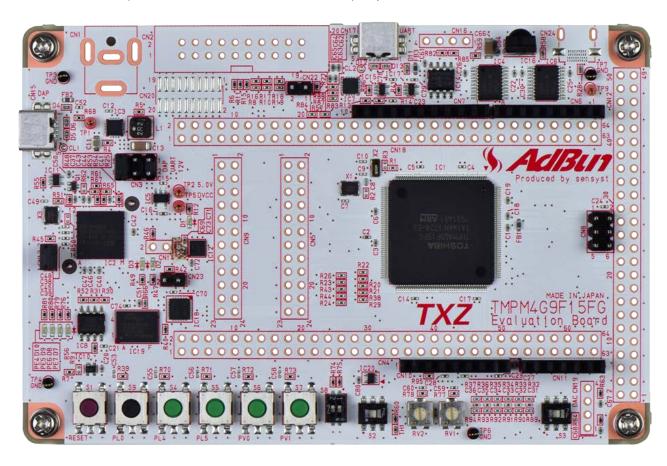




6. Evaluation Board Setting

The following pin connections should be done on the evaluation board.

	CN5	
Board function	Through-hole No.	Through-hole No.
USB UART conversion	1: USB_UT_RX	2: PE2
USB UART conversion	3: USB_UT_TX	4: PE3

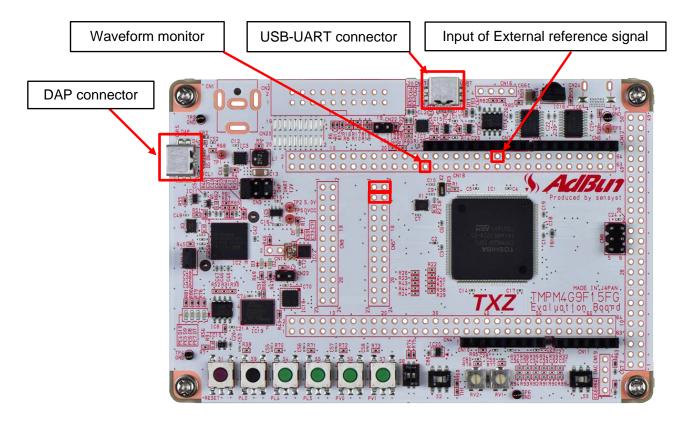

7. Operation of Evaluation Board

PC and the USB UART are connected for communication with the terminal software.

The sample program should be started up.

The message which shows the start of the sample program is output to the terminal software.

The frequency is adjusted by the Trimming circuit.

The adjusted frequency can be monitored at PA1.

After the trimming completes or the adjustment is done 10 times, "TRMOSC_DONE" is displayed.



8. Outline of TRM Function

The trimming circuit (TRM) can adjust the frequency of an internal oscillator. The list of the functions is shown below.

Function Classification	Function	Operation	
	Target oscillator	Internal High-Speed Oscillator 1 (IHOSC1)	
Frequency adjustment of the internal oscillator	Adjustment range	Coarse trimming: -18.8 to +30.4 % (Average 0.8 % step) Fine trimming: -0.8 to +0.7 % (0.1% step)	
	Monitor function	The reading of the internal trimming level is possible	
Protection	Protection function Incorrect writing is prevented.		



9. Sample Program

The frequency of the internal high-speed oscillator is adjusted using an external reference signal or the frequency of the clock which is provided by an external low-speed oscillator. The adjustment repeats until the adjusted frequency becomes a target one.

9.1. Initialization

The following initialization is done after power is supplied.

The initialization of each clock setting and the setting of the watchdog timer are done.

9.2. Sample Program Main Operation

The BSP (Board Support Package) is initialized.

As initialization of the application software, the UART initialization and the UART interrupt enable are done. The timer clock output is initialized.

The external input setting is initialized.

The TRM circuit is initialized.

The start message is displayed on the terminal software.

The frequency adjustment is done as follows;

- 1. The frequency is measured, and the difference from the target frequency is calculated.
- 2. Using the difference value, a coarse trimming value and a fine trimming value are calculated.
- 3. Using the calculated values, the coarse trimming and the fine trimming are done.


The trimming procedure 1-3 repeats.

After the adjusted frequency becomes the value within the minimum adjustment range or the trimming procedure repeats 10 times, the trimming procedure finishes.

2018-12-14 **8 / 15** Rev 1.0



The following is the case that T32A and fs are used to generate a reference signal. The fs is connected to the internal trigger input of T32A ch8 timer A. And the output of the timer A is connected to the internal trigger input of the timer B.

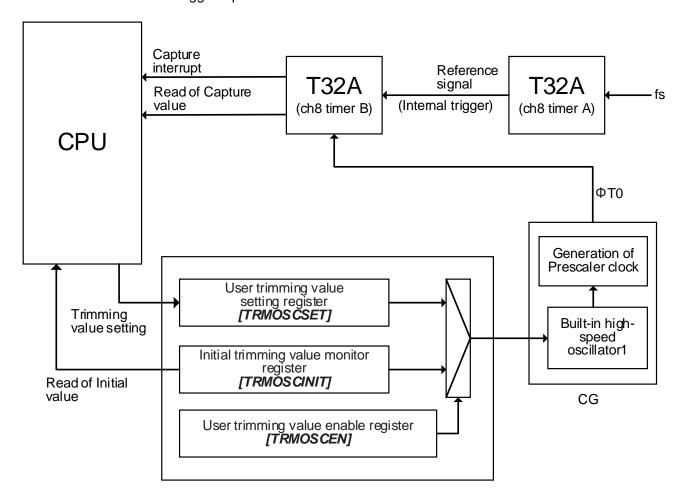

9.3. Change of Frequency Measurement Setting

The external reference signal or the fs can be used to measure the frequency of the Internal high-speed oscillator1. To select the external reference signal, "#define TRMOSC_LOSC" which is in the 19-th line in "txz sample def.h" should be commented out. If it is not commented out, the fs is used.



9.4. Output Example of Sample Program


When the sample program executes, the adjustment status, the adjustment end, and others are displayed as shown in the following figure.





9.4.1. Setting Example of Terminal Software


The operation of the terminal software (Tera Term) has been checked with the following settings.

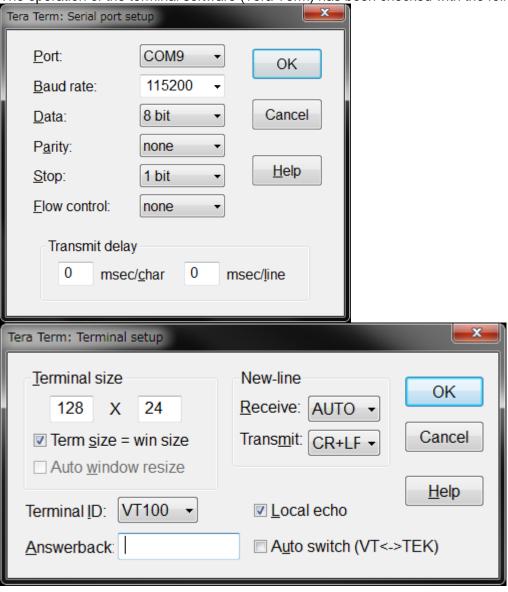




9.5. Operating Flow of Sample Program

The basic operating flows of the sample program are shown in the following;

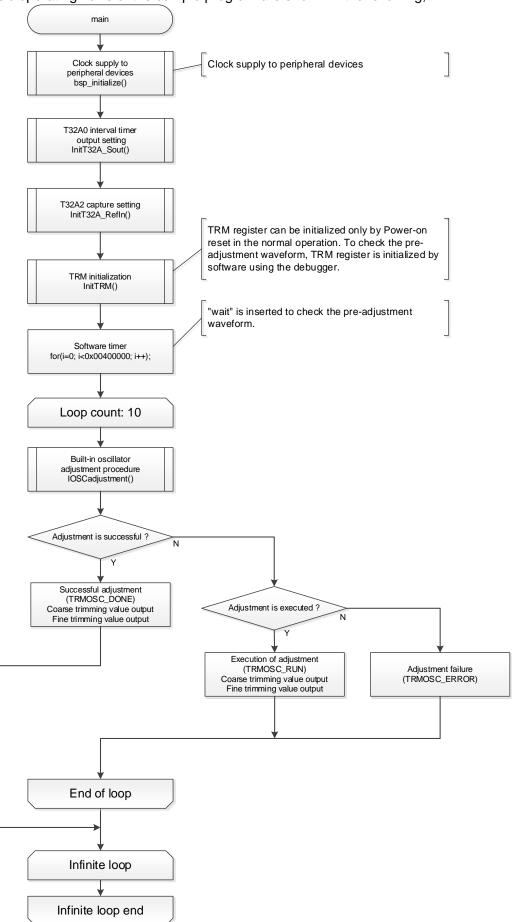



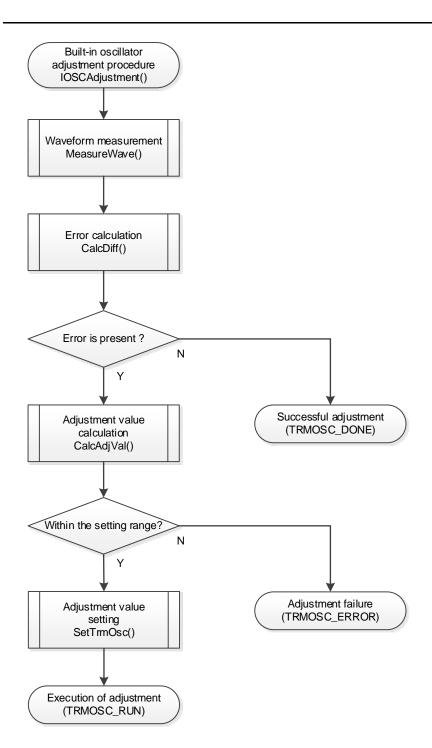



10. Precaution

When using the sample program with CPU other than TMPM4G9F15, please check operation sufficiently.

11. Revision History

Rev	Date	Page	Description
1.0	2018-12-14	-	First release



RESTRICTIONS ON PRODUCT USE

Toshiba Corporation and its subsidiaries and affiliates are collectively referred to as "TOSHIBA". Hardware, software and systems described in this document are collectively referred to as "Product".

- . TOSHIBA reserves the right to make changes to the information in this document and related Product without notice.
- This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's written permission, reproduction is permissible only if reproduction is without alteration/omission.
- Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before customers use the Product, create designs including the Product, or incorporate the Product into their own applications, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the "TOSHIBA Semiconductor Reliability Handbook" and (b) the instructions for the application with which the Product will be used with or for. Customers are solely responsible for all aspects of their own product design or applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.
- PRODUCT IS NEITHER INTENDED NOR WARRANTED FOR USE IN EQUIPMENTS OR SYSTEMS THAT REQUIRE EXTRAORDINARILY
 HIGH LEVELS OF QUALITY AND/OR RELIABILITY, AND/OR A MALFUNCTION OR FAILURE OF WHICH MAY CAUSE LOSS OF
 HUMAN LIFE, BODILY INJURY, SERIOUS PROPERTY DAMAGE AND/OR SERIOUS PUBLIC IMPACT ("UNINTENDED USE"). Except for
 specific applications as expressly stated in this document, Unintended Use includes, without limitation, equipment used in nuclear facilities,
 equipment used in the aerospace industry, lifesaving and/or life supporting medical equipment, equipment used for automobiles, trains, ships
 and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and
 escalators, and devices related to power plant. IF YOU USE PRODUCT FOR UNINTENDED USE, TOSHIBA ASSUMES NO LIABILITY FOR
 PRODUCT. For details, please contact your TOSHIBA sales representative or contact us via our website.
- Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable laws or regulations.
- The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any
 infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any
 intellectual property right is granted by this document, whether express or implied, by estoppel or otherwise.
- ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF SALE FOR
 PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY WHATSOEVER,
 INCLUDING WITHOUT LIMITATION, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR LOSS, INCLUDING
 WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION AND LOSS OF DATA, AND (2)
 DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS RELATED TO SALE, USE OF PRODUCT, OR
 INFORMATION, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE,
 ACCURACY OF INFORMATION, OR NONINFRINGEMENT.
- Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the
 design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass
 destruction weapons). Product and related software and technology may be controlled under the applicable export laws and regulations
 including, without limitation, the Japanese Foreign Exchange and Foreign Trade Law and the U.S. Export Administration Regulations. Export
 and re-export of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and
 regulations.
- Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS compatibility of Product. Please
 use Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without
 limitation, the EU RoHS Directive. TOSHIBA ASSUMES NO LIABILITY FOR DAMAGES OR LOSSES OCCURRING AS A RESULT OF
 NONCOMPLIANCE WITH APPLICABLE LAWS AND REGULATIONS.

TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION

https://toshiba.semicon-storage.com/

2018-12-14 **15** / **15** Rev 1.0